





-Boomerang Base attches to end cap and bolts thru T4

© 2019 RE-1207 COUNTER WITH CURVED TOP TO PLACE IN FRONT OF BACK WALL





SHEET # 4

KIOSK D









MOUNT RE-1227 COUNTER WITH CONNECTORS "Z" THRU HOLES IN FABRIC







SHEET # 7













General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly



Hex Tool - Essential for Assembly

Spline Connection





Base Plate & Extrusion Connection





E



 Prese "ON" key on remote within 3 seconds.
Lights will blink when link is made. To unpair: Long press "ON" key within 3 seconds after switching on lights

Different receivers can work synchronously even when started at different times (within 30 min).







LADDERS OR LIFTS MAY BE REQUIRED



ALL CONNECTIONS MUST **BE TIGHTLY SECURED**

Controlling the RGB LED lights

- Static Mode: 1. Use the Color Ring on remote to select color. 2. Saturation is controlled with W/R/G/B buttons. 3. White mode is available by long-pressing "ON".

- 8. Green color fades in and flashes
- 9. Blue color fades in and flashes,
- To Pair a Remote with Multiple Units:

Remotes can be paired with one or more receivers



DO NOT USE POWER TOOLS



GENERAL SHEET 1

© 2019

SEG Graphic Installation

Graphic: To Ensure Proper Fit



It is important to first insert graphic into each alternater corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.



Step 1 Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2 Repeat Step 1 for opposite corner C, then insert corner B, followed by corner corner D, to complete the installation of the corners.



Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal



To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

GENERAL SHEET 2



Side-by-Side Assembly

© 2019

- 1) Frames: Place frames side-by-side with one higher than the other, then slide panel down to lock panels together and in place.
- 2) Corner Connections: Repeat Step 1 for installing corner connections to frames.

Side-by-Side Disassembly

- 1) Push pin lock outwards to disengage pin lock.
- 2) Pull frames upward and apart at the same time.

Stacking Assembly

- 1) Place one horizontal frame on top of the other lining up the center grooves.
- 2) Turn the pin clockwise to tighten the stacking lock into place. Repeat for each pin.

Stacking Disassembly

- 1) Turn the stacking lock counter clockwise to loosen the pin.
- 2) The whole spring on the stacking lock should be in view to release each frame. The spring should release the locking pin. If not, turn the pin until it disengages.



Stacking

Unstacking





GENERAL SHEET 3