
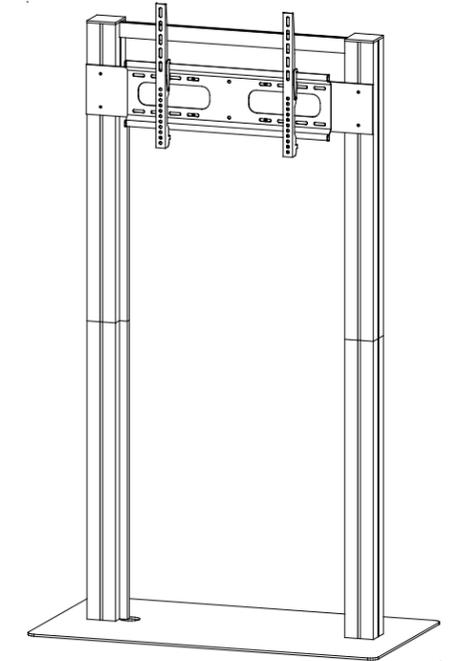
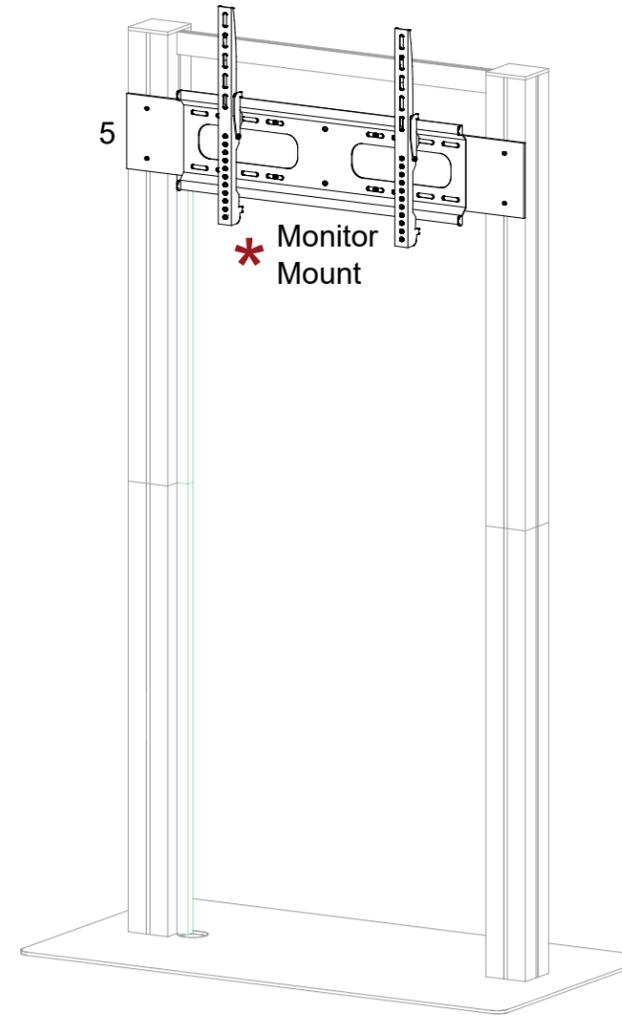
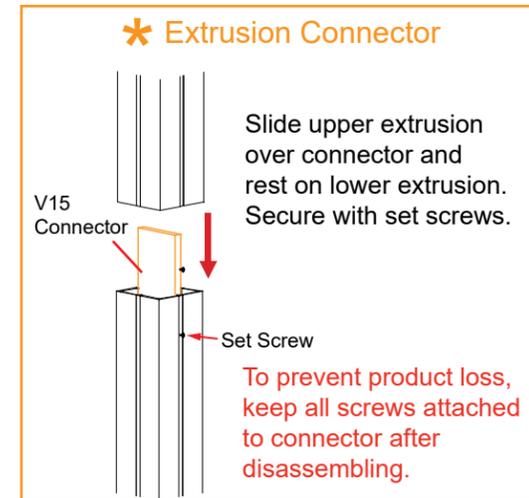
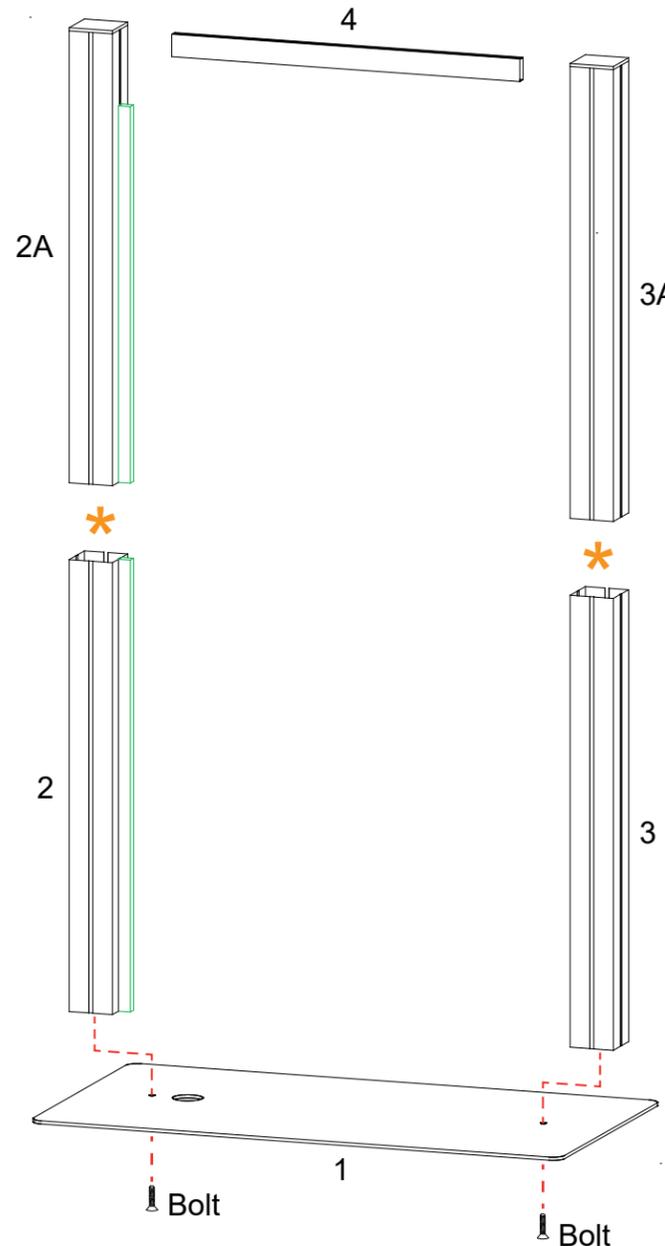



Item	Qty.	Description
1	1	Base Plate
2,3	1,1	36" Q914 Vertical Extrusion
2A,3A	1,1	36" Q914 Vertical Extrusion w/ Caps
4	1	28.835" Z45 Horizontal Extrusion
5	1	Mount Plate

Steps:

- 1) Attach base plate [1] to verticals [2] and [3], using bolts.
- 2) Attach verticals [2A] to [2] and [3A] to [3], using connector.
See **Extrusion Connector** detail.
- 3) Attach horizontal [4] between verticals [2A] and [3A].
- 4) Attach mount plate [5] and monitor mount. See **Monitor Mount Attachment** detail.
- 5) Route monitor cord through conduit then attach to verticals [2] and [2A]. See **Cord Management** detail.

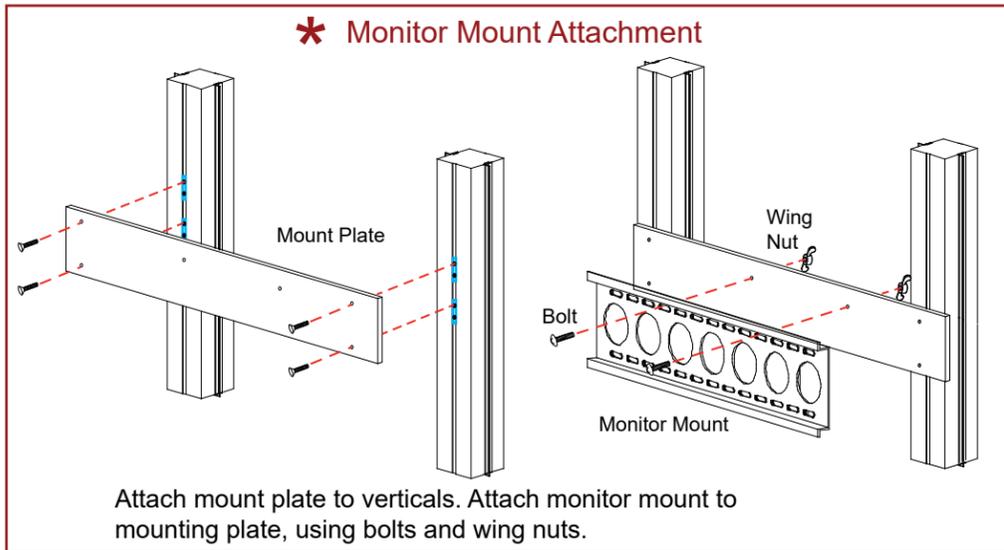

Completed Assembly

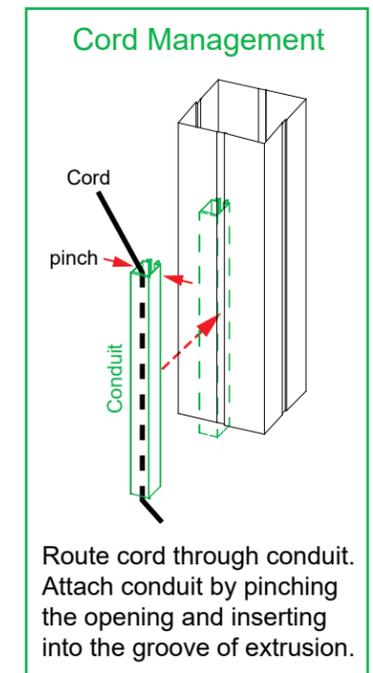

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

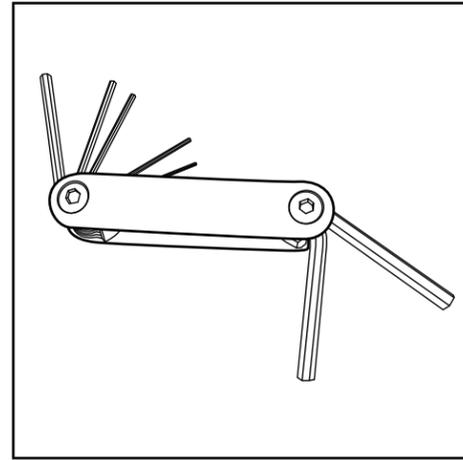


Hex Tool - Essential for Assembly

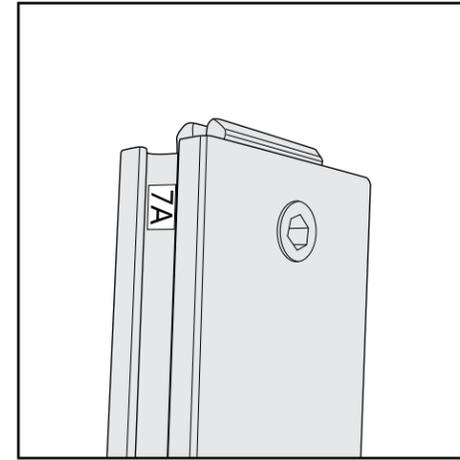


Part Identification - Numbering

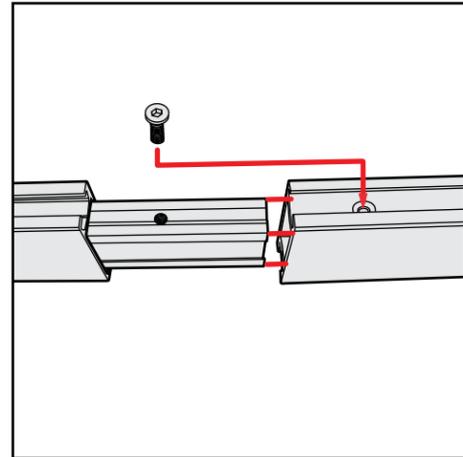


Spline Connection

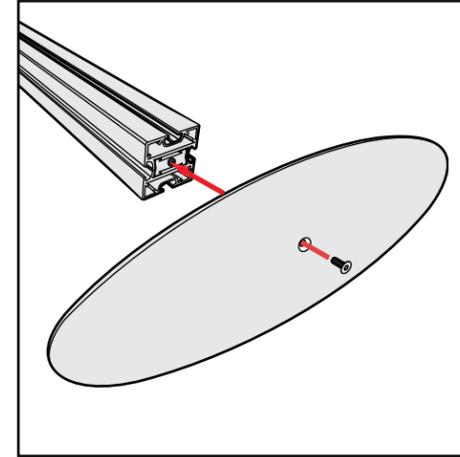

Base Plate & Extrusion Connection

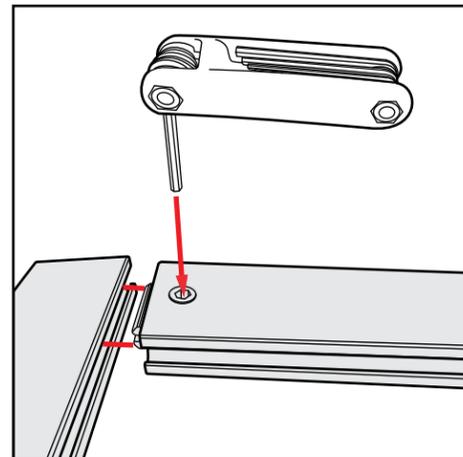

Extrusion & Lock Connection

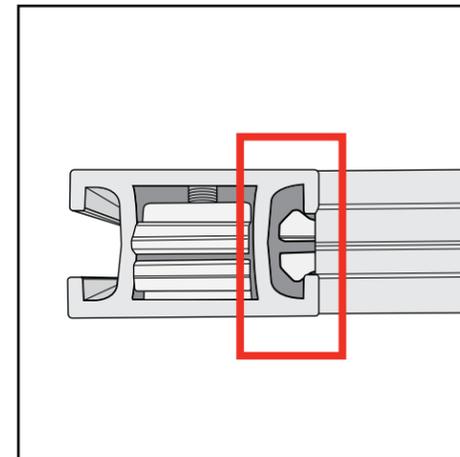

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Top View of Each Level

