


Front View

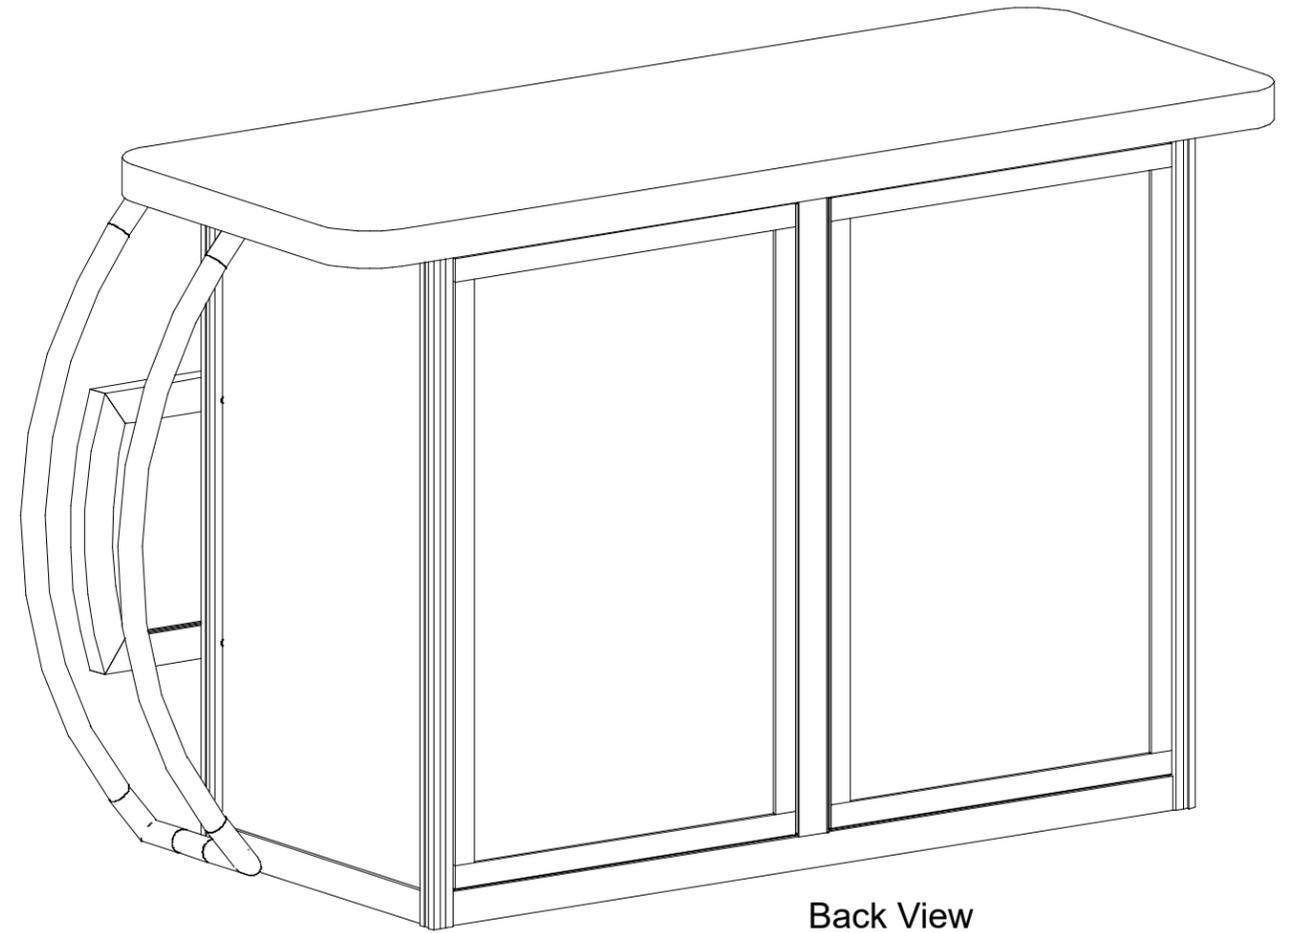

Back View

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

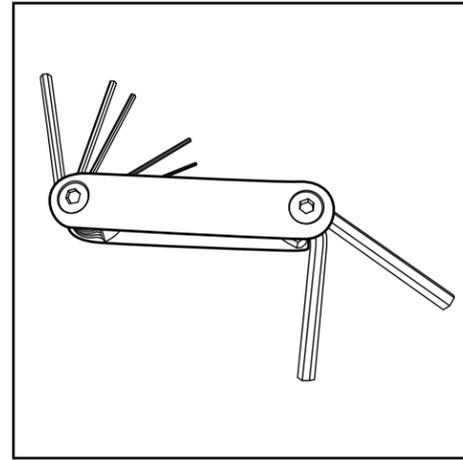


Hex Tool - Essential for Assembly

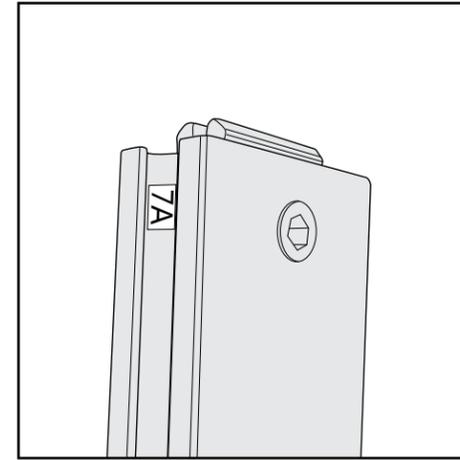


Part Identification - Numbering

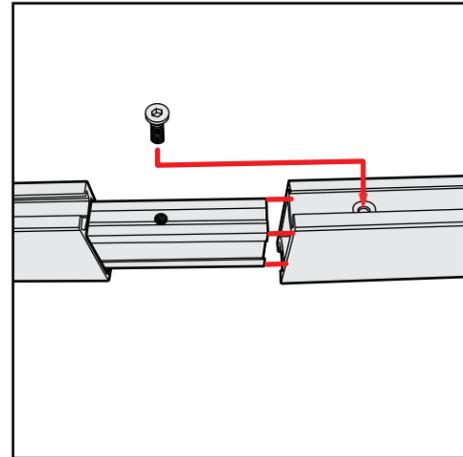


Spline Connection

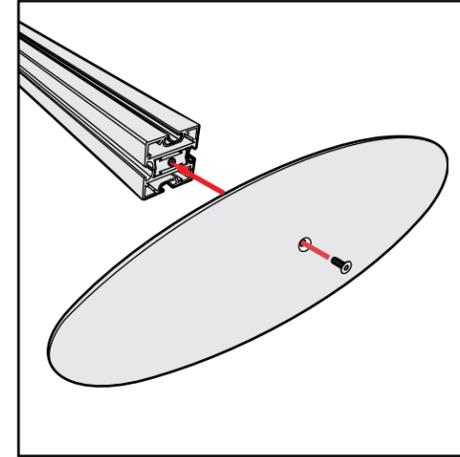

Base Plate & Extrusion Connection

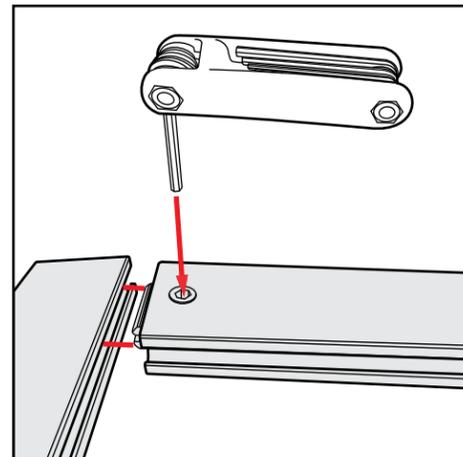

Extrusion & Lock Connection

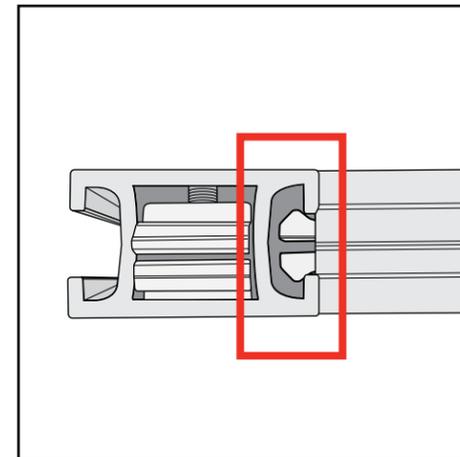

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED





ALL CONNECTIONS MUST
BE TIGHTLY SECURED


Item	Qty.	Description
1	1	37.5" h S44 Vertical Extrusion
2	1	37.5" h S44 Vertical Extrusion
3	1	37.5" h S44 Vertical Extrusion
4	1	37.5" h S44 Vertical Extrusion
5/5A	2/2	18.5" w Z45 Horizontal Extrusion
6/6A/7/7A/7B	1/1/1/1/1	46" w Z45 Horizontal Extrusion
8	1	33.917" h Z45 Vertical Extrusion

Steps:


- 1) Connect lower horizontals [5,6,7] between verticals [1,2,3,4].
- 2) Attach vertical [8] to lower horizontal [6].
- 3) Slide **Infills** between verticals [1,2] and [3,4].
- 4) Slide lower **Infill** between verticals [2] and [3].
- 5) Connect horizontal [7A] between verticals [2,3].
- 6) Slide **Infill** between verticals [2] and [3] and on top of horizontal [7A].
- 7) Connect **Shelf Supports** to Velcro on side Infills, then place Shelf on top of supports.
- 8) Connect Doors to verticals [1] and [4]. See **Door Attachment** detail.
- 9) Connect upper horizontals [5A,6A,7B] between verticals [1,2,3,4] and on top of **Infills** and Doors.

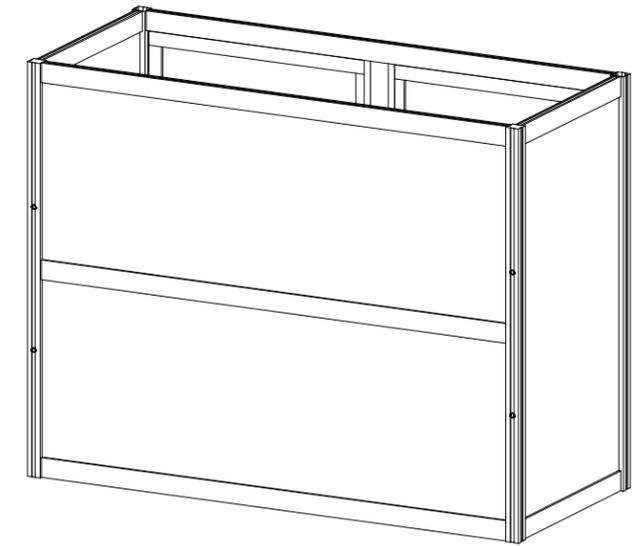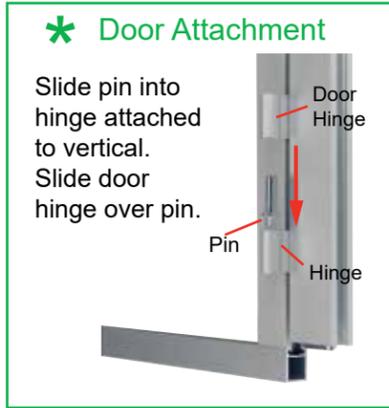


Completed Counter Base Assembly (Front View)

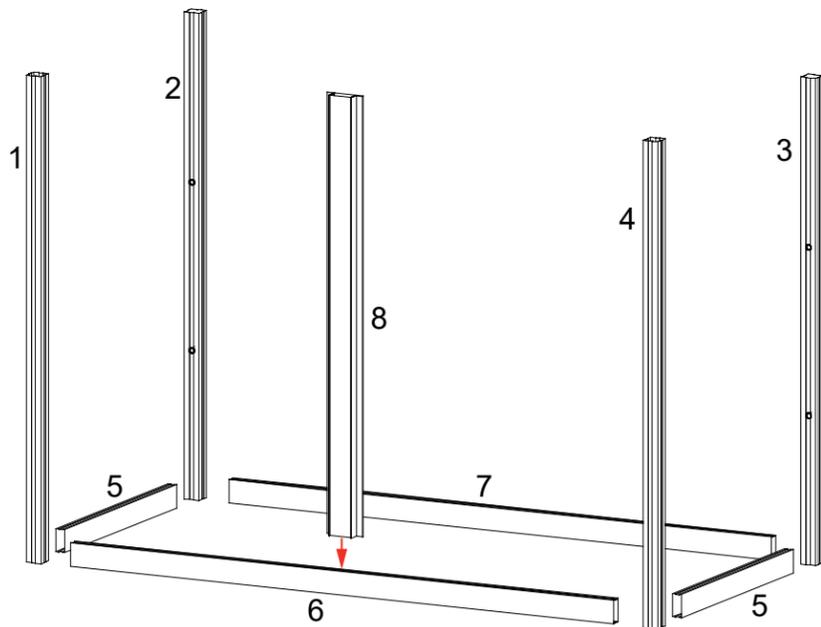

Back View

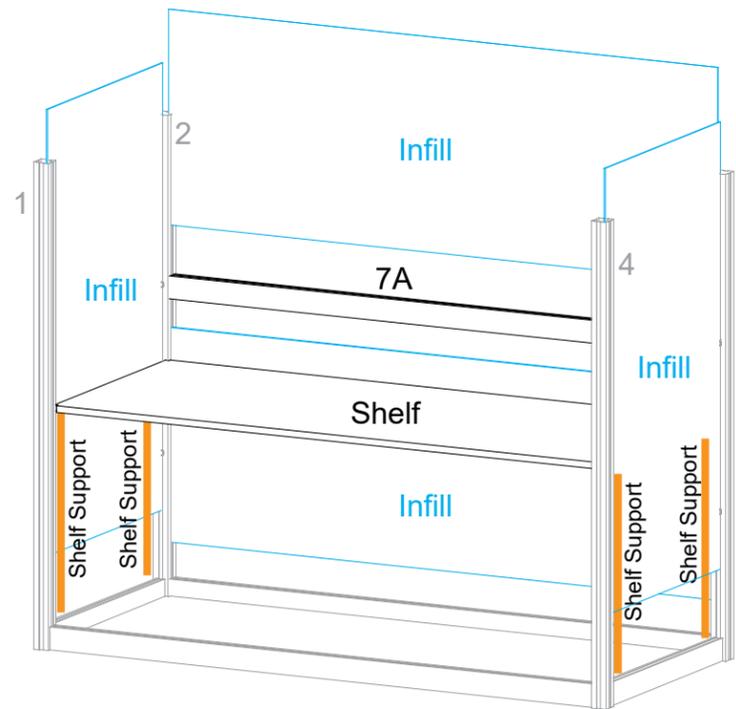

Back View

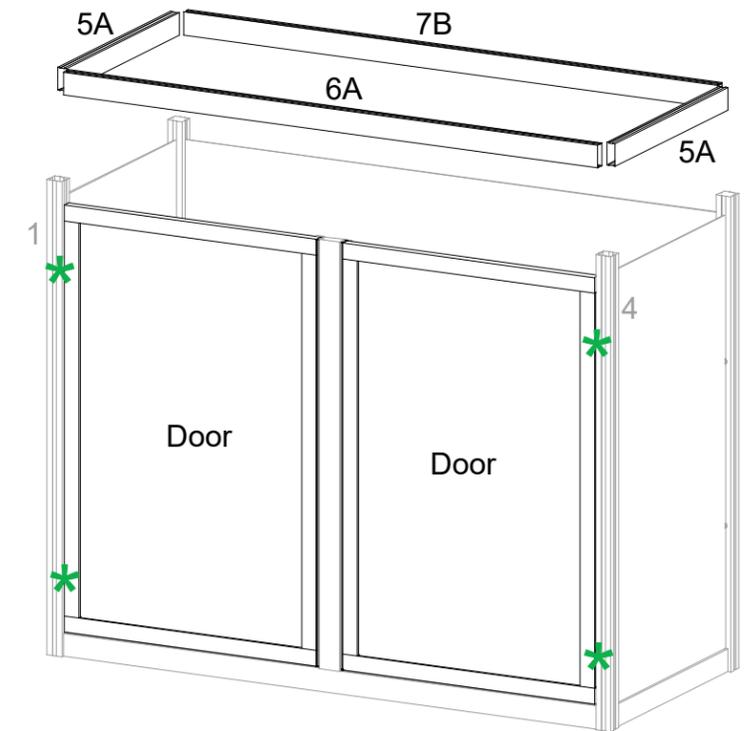

Back View

AERO


Using Your Setup Instructions

The Aero Setup Instructions are created specifically for your configuration. The instructions include an exploded view of the frame which is sequentially labeled. We encourage you to review the instructions before attempting to assemble your exhibit.



Connections are kept very simple; no tools required. Everything assembles with push-button connectors.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

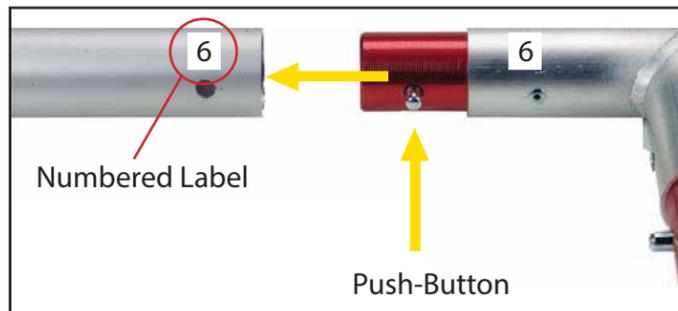


Connections are made by holding the button down and sliding the red tube into opposing tube until button locks into the hole of the opposing tube. To disassemble, push button and pull or twist extrusions apart.

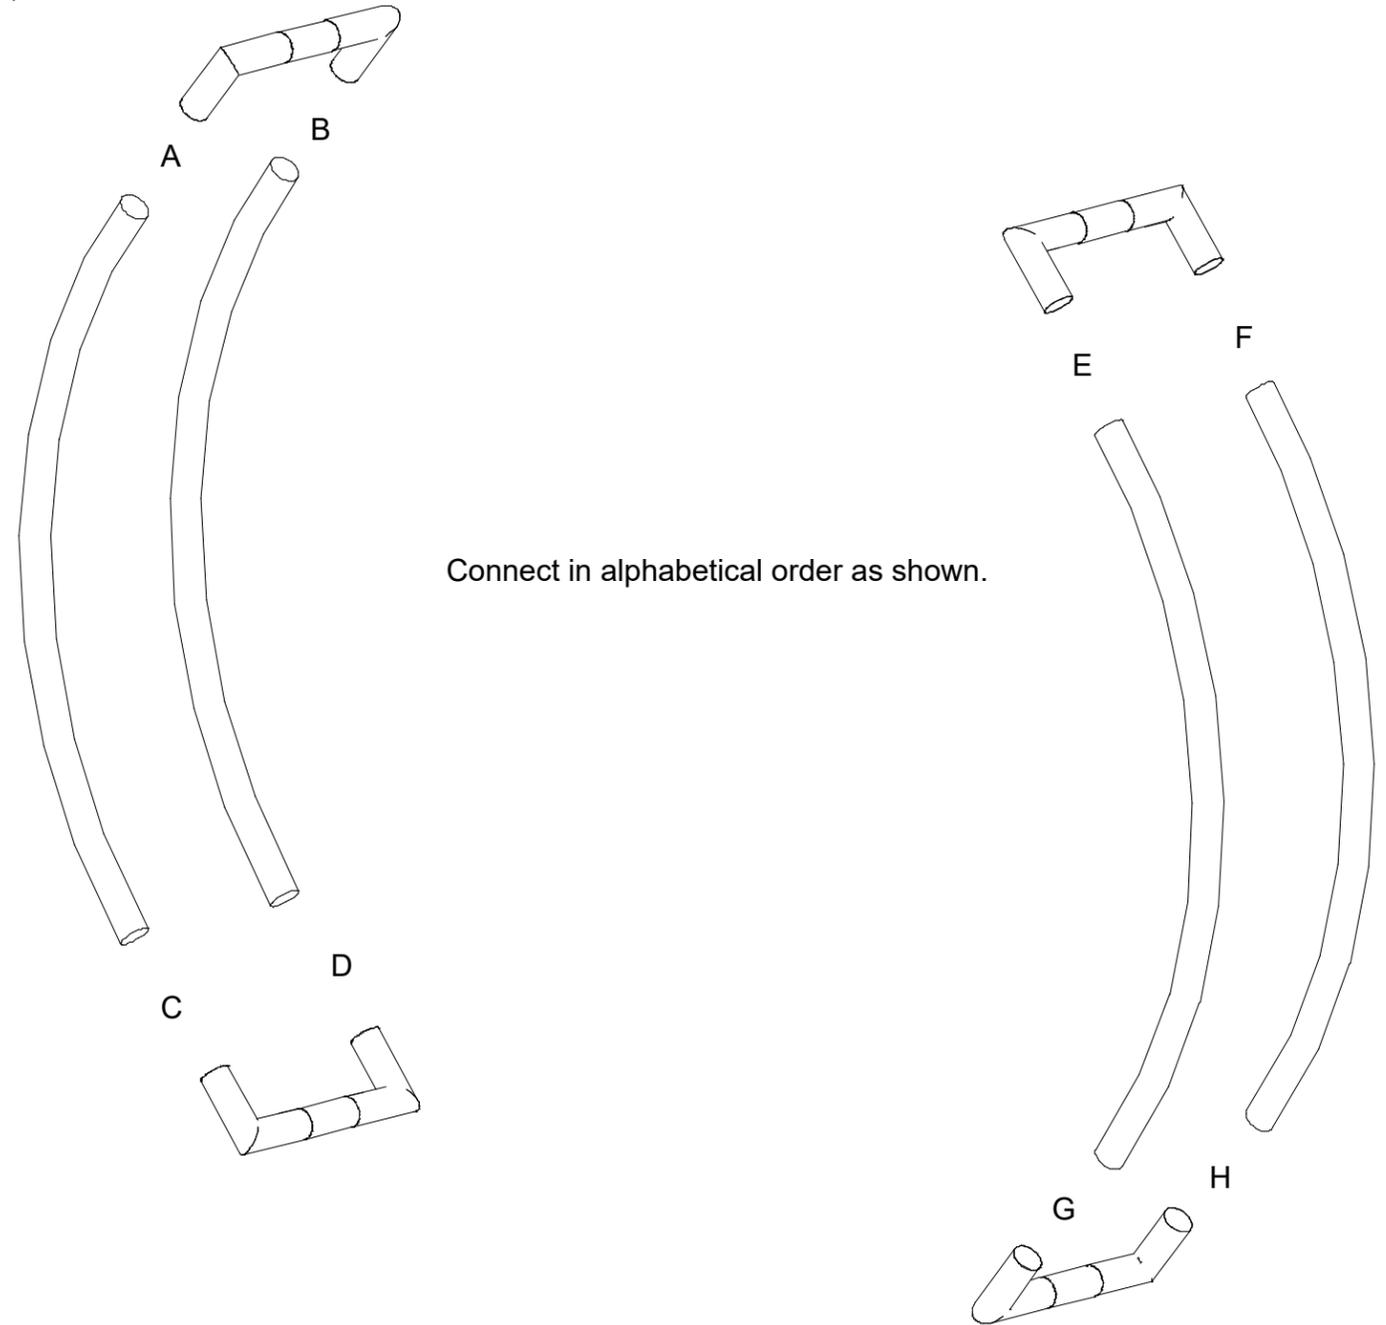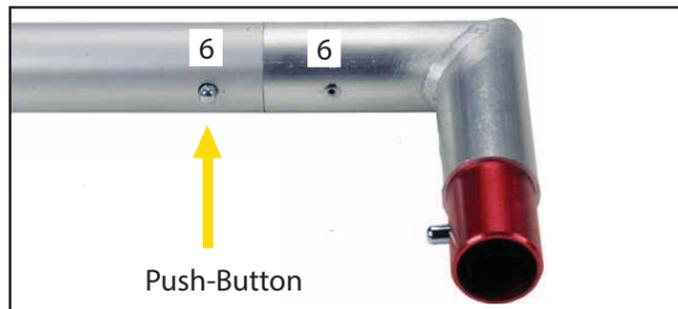

Item	Qty.	Description
9/9A	1/1	15.28" TSP46 Curved Extrusion
10/10A	1/1	30.382" w TSP46 Horizontal Extrusion
11/11A	1/1	30.382" w TSP46 Horizontal Extrusion

- Steps:
- 1) Connect extrusions [9,9A,10,10A,11,11A] together. See [TSP46 Corner Connection](#) detail.
 - 3) Slide Aero frame assemblies into the groove of front verticals [2,3].
 - 4) Place counter top on top of assembled base. See [Counter Top Attachment](#) detail.
 - 5) Attach SEG frame to verticals [2] & [3], using standoff caps.
 - 6) Attach SEG graphic to SEG frame. See [SEG Graphic Installation](#) detail.

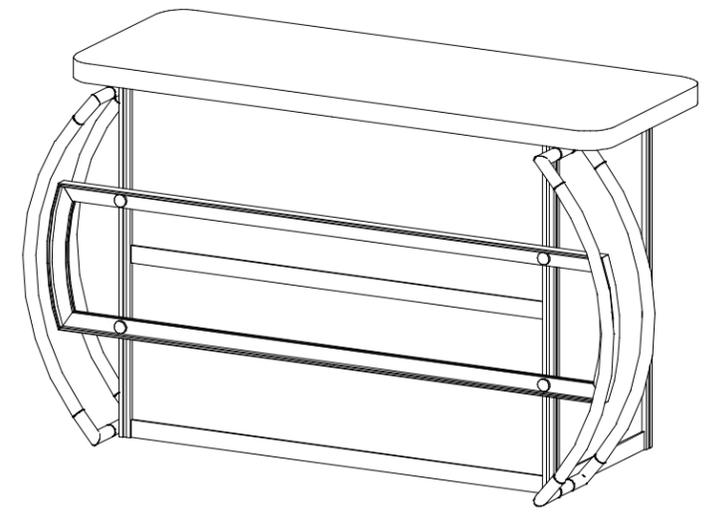

Completed Assembly

SEG Graphic Installation

Corner A Corner B
Corner D Corner C

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

Step 2
Repeat Step 1 for opposite corner C, then insert corner D, to complete the installation of the corners.

Graphic Removal
To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

* Counter Top Attachment


1
Hole Pin
Align hole with pin

2
Rotate pin. Spring will push pin into hole.

* TSP46 Corner Connection

Lock Set Screw

Slide end of Extrusion over Lock. Tighten Set Screw to secure Extrusions.

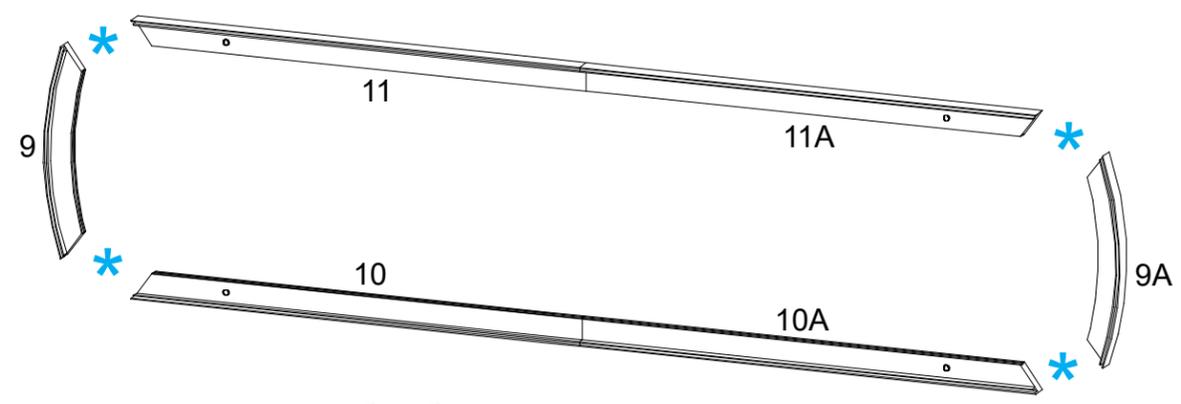

SEG Frame Assembly

