

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

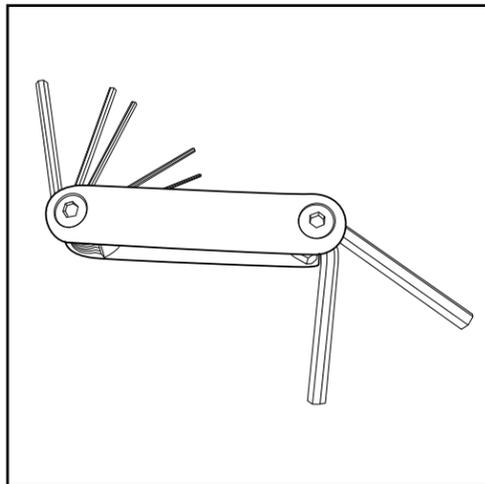


Hex Tool - Essential for Assembly

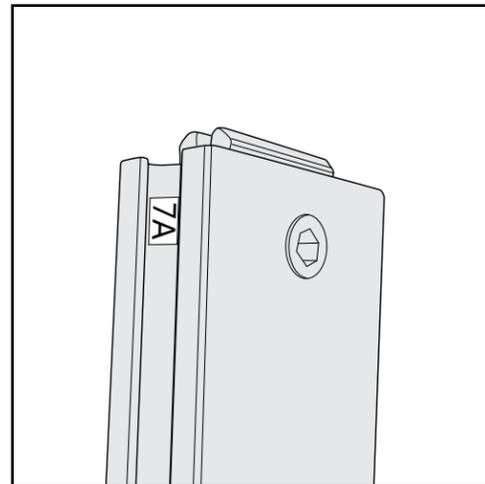


Part Identification - Numbering

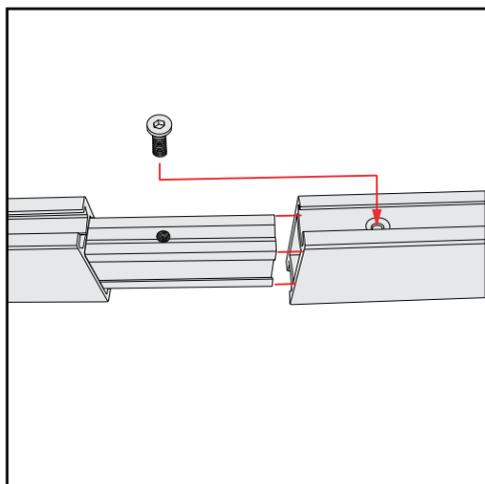


Spline Connection

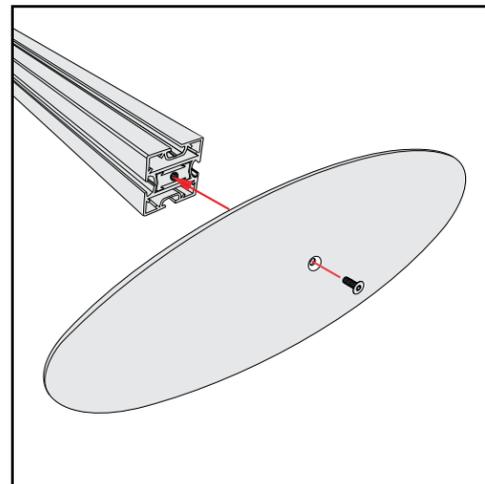

Base Plate & Extrusion Connection

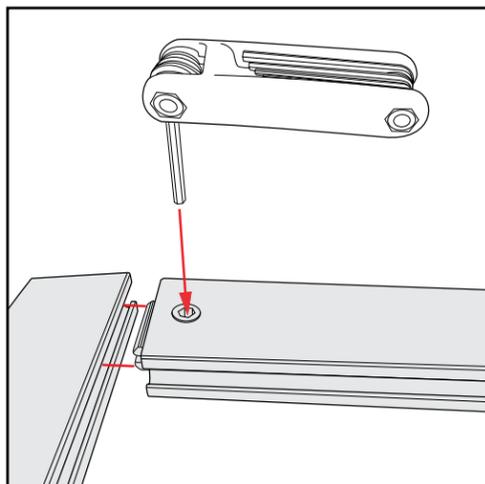

Extrusion & Lock Connection

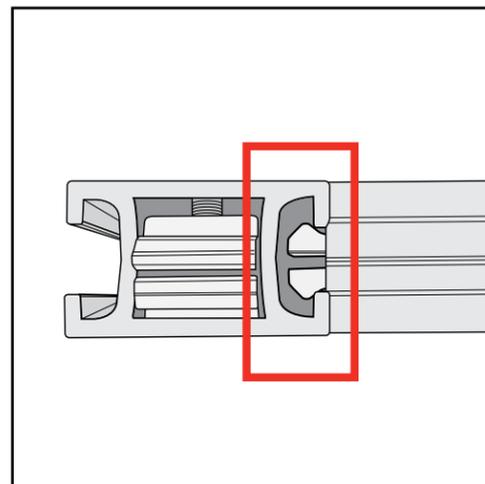

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED





ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Item	Qty.	Description
1	3	Base Plate
2	1	95.75"h Q914 Vertical Extrusion
3	1	95.75"h Q914 Vertical Extrusion
4	1	95.75"h Q914 Vertical Extrusion
5/5A	1/1	18"w Q914 Horizontal Extrusion
6/6A	1/1	84"w Q914 Horizontal Extrusion

Steps:






- 1) Attach base plates to verticals [2], [3] & [4].
- 2) Connect horizontals [5] & [5A] between verticals [2] & [3].
- 3) Connect horizontals [6] & [6A] between verticals [3] & [4].

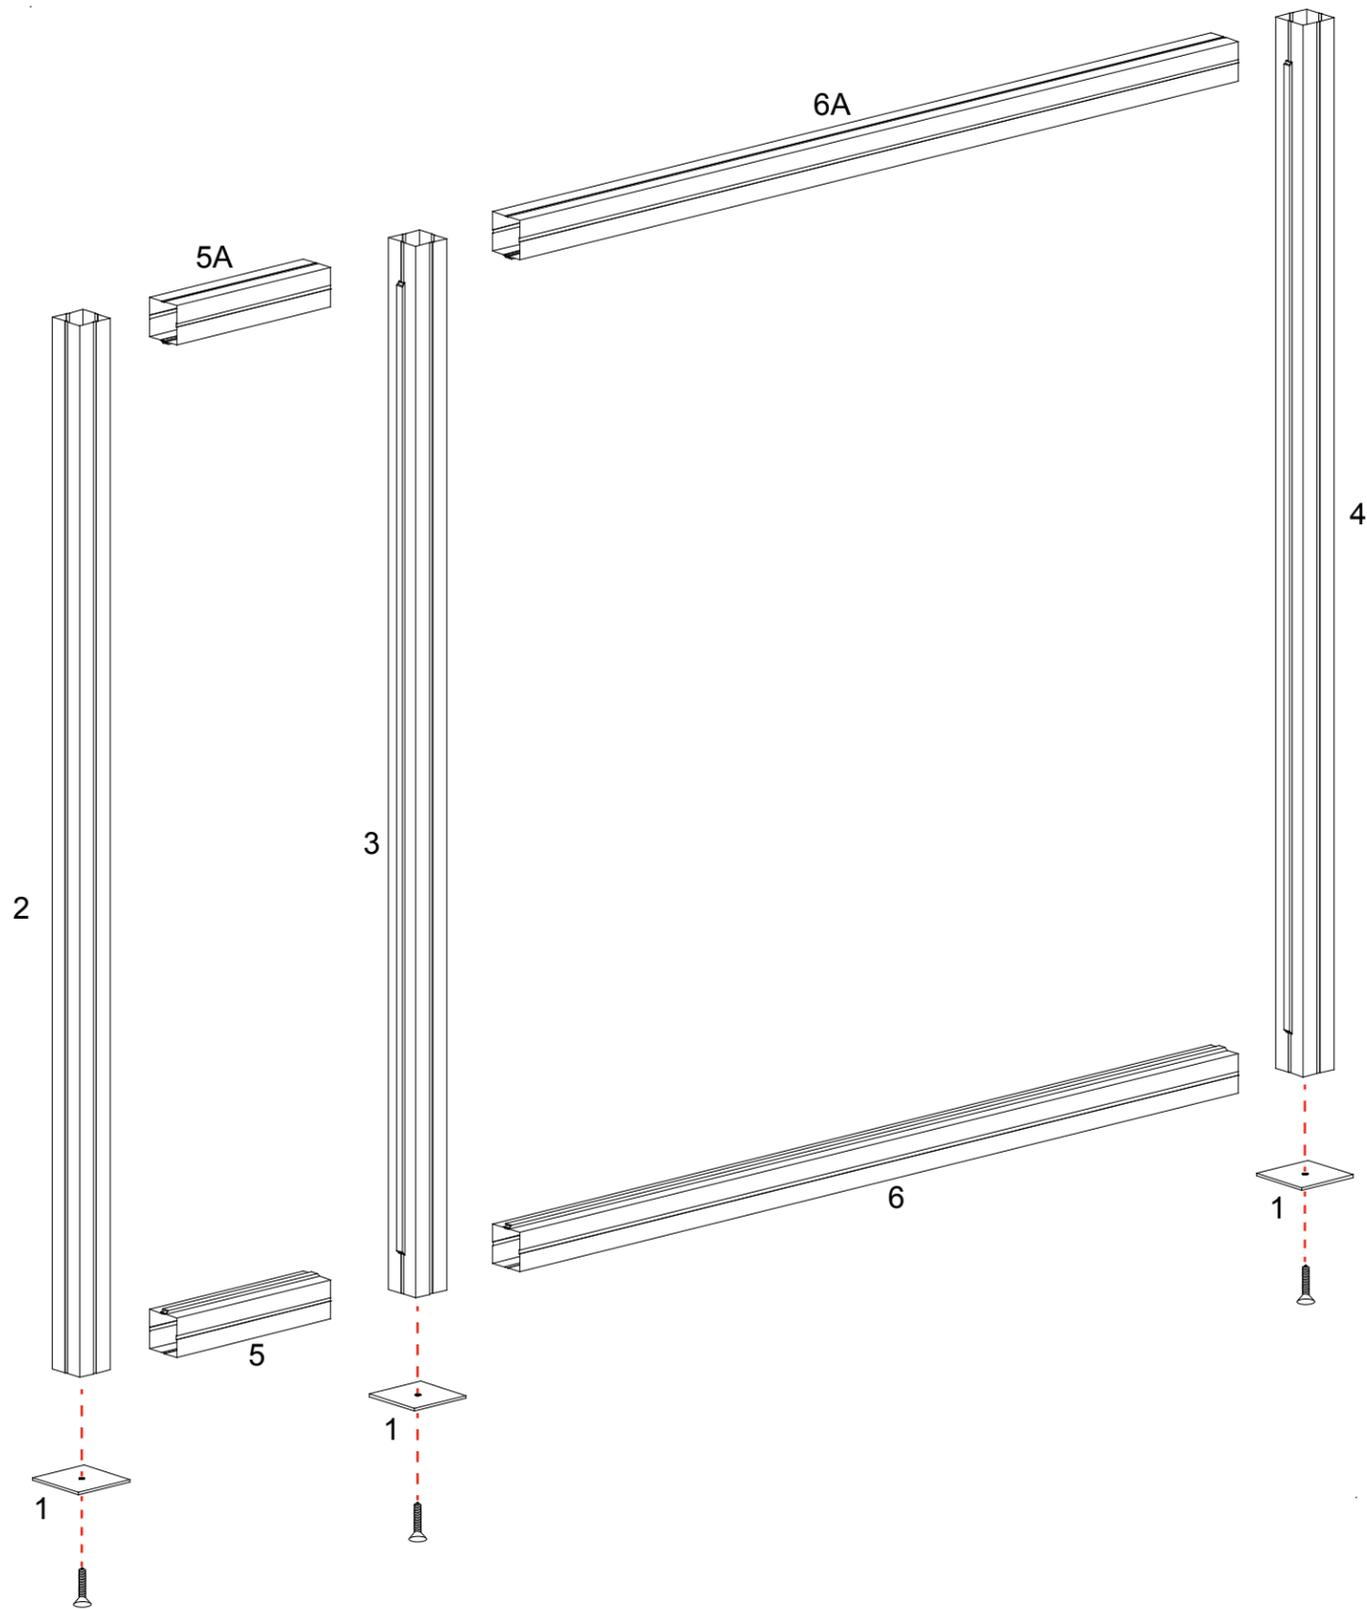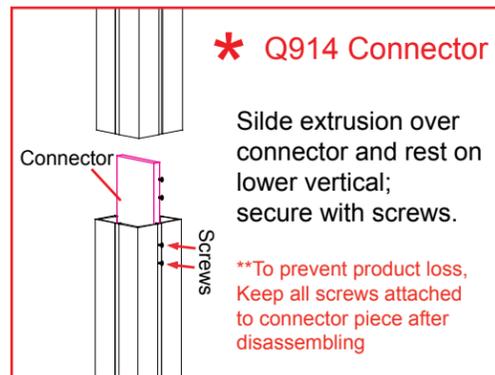

Item	Qty.	Description
7/7A	1/1	48" h Q914 Vertical Extrusion
8	1	5" w Z45 Horizontal Extrusion
9	1	42" w Q914 Horizontal Extrusion
10	1	12.7598" w Z41 Horizontal Extrusion
10A	1	11.5" h Z41 Vertical Extrusion

Steps:


- 1) Attach the assembled Pedestal to vertical [7] using standoff caps from the inside of the pedestal. See **Counter to Vertical Attachment** detail.
- 2) Connect horizontal [8] to the back of vertical [7].
- 3) Lower counter down over vertical [7] and set in place on top of assembled pedestals.
- 4) Connect verticals [7] & [7A] together. See **Q914 Connector** detail.
- 5) Attach horizontal [9] between verticals [3] & [7A].
- 6) Connect horizontal [10] to vertical [7A]; insert infill between horizontals [9] & [10] and secure in place using vertical [10A].

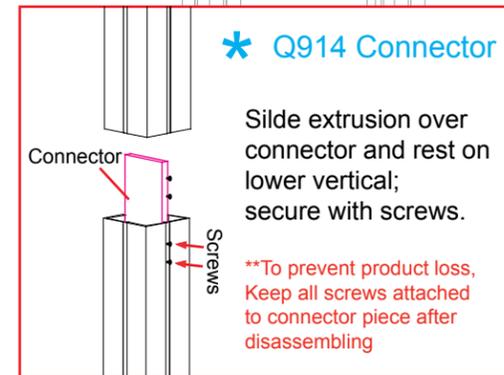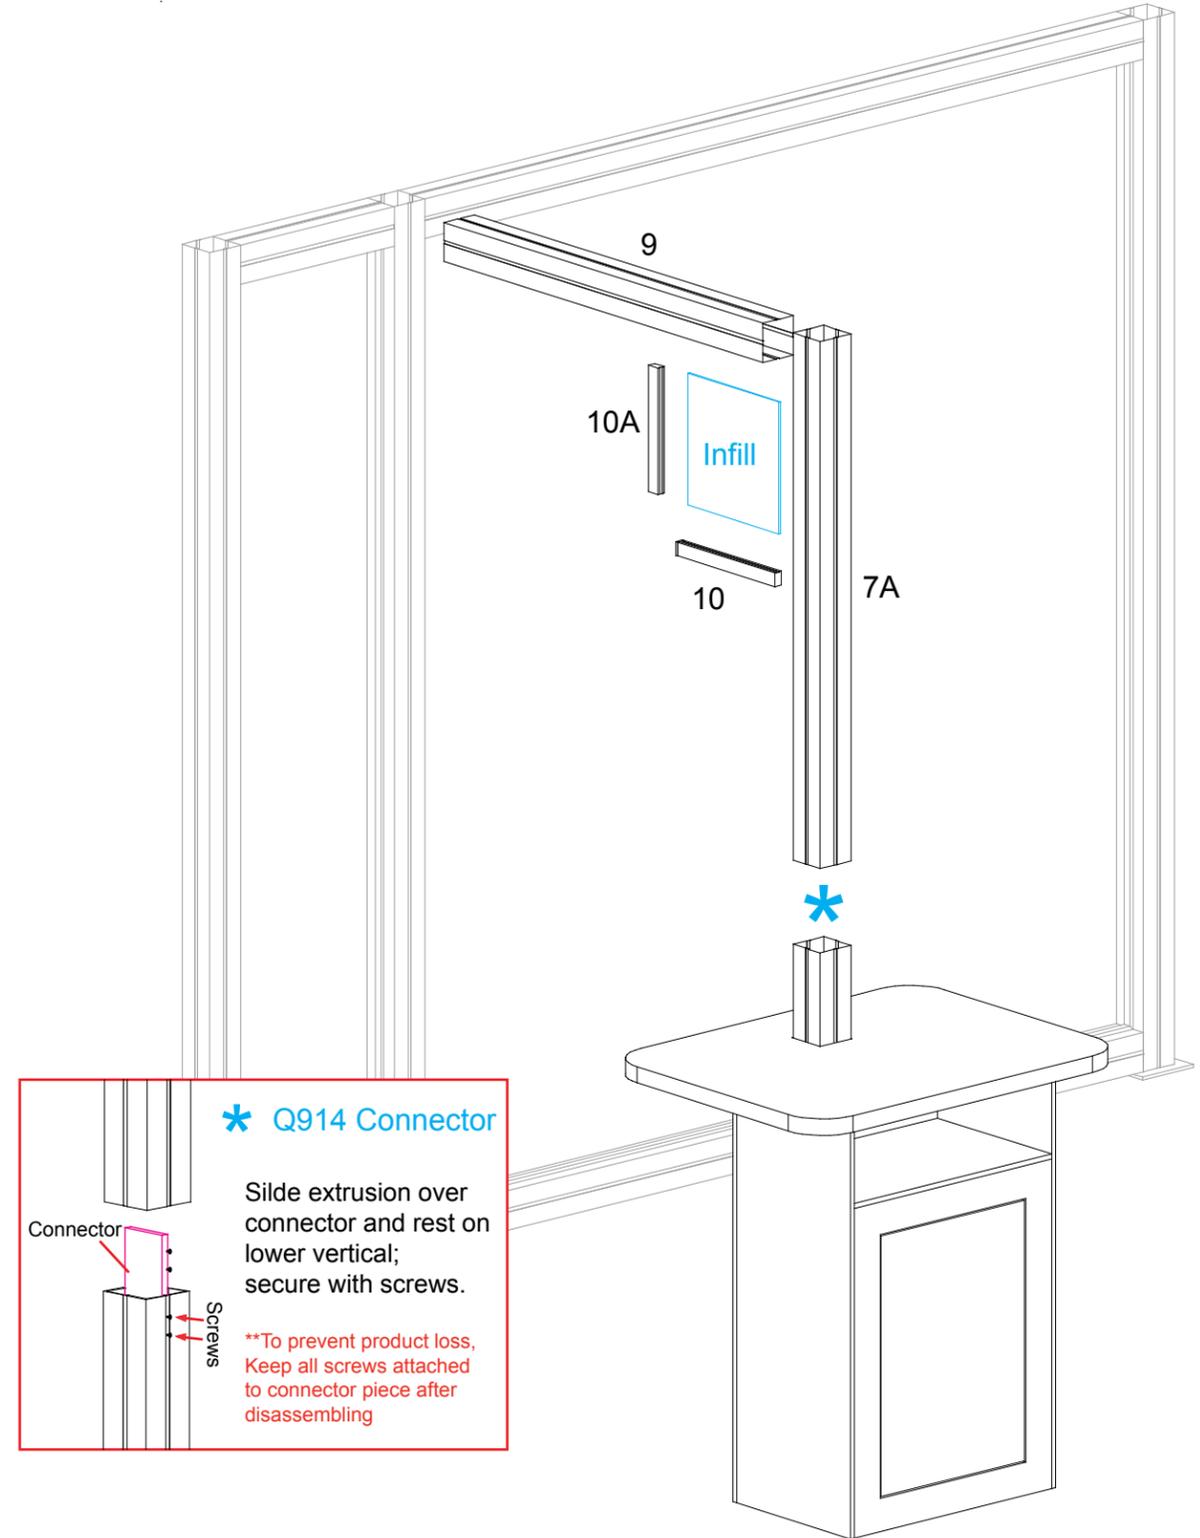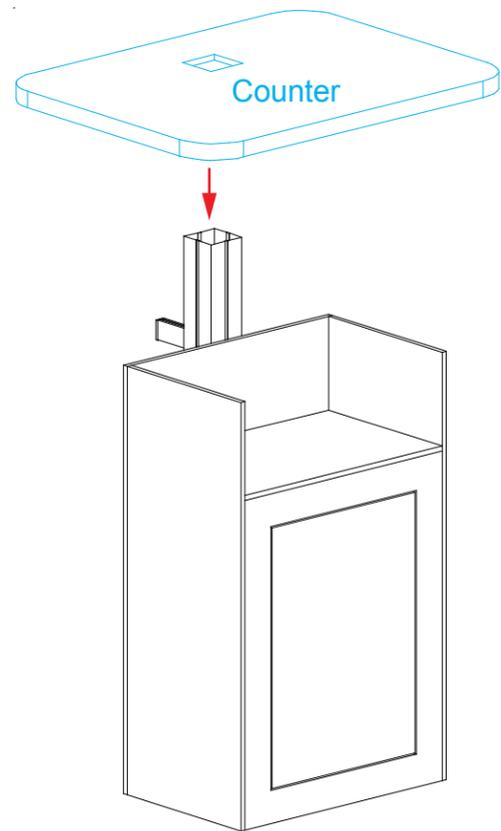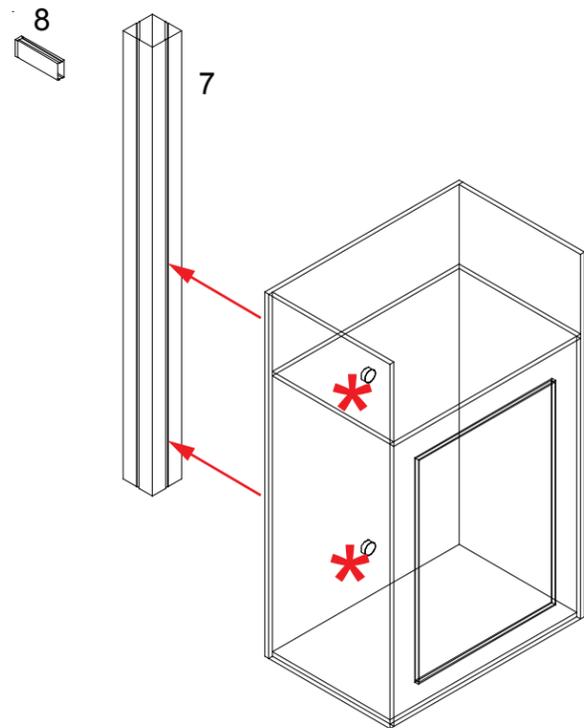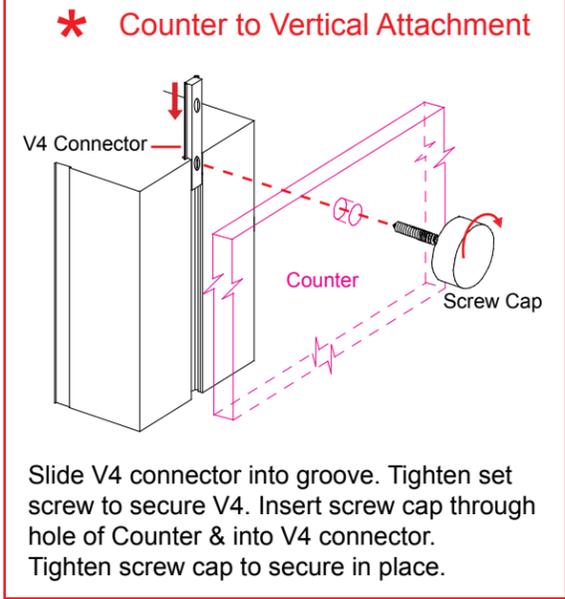




Item	Qty.	Description
11	2	11"w Z45 Horizontal Extrusion
12	2	11"w Z45 Horizontal Extrusion

Steps:

- 1) Connect horizontal [11] & [12] together.
See [Custom Cam Lock w/ Pill Slot Attachment](#) detail.
- 2) Repeat Step 1. to assemble the right side [11] & [12] together.
- 3) Install Plex shelves to the top of horizontals [11] & [12] using standoff caps.
See [Plex Shelf attachment](#) detail.

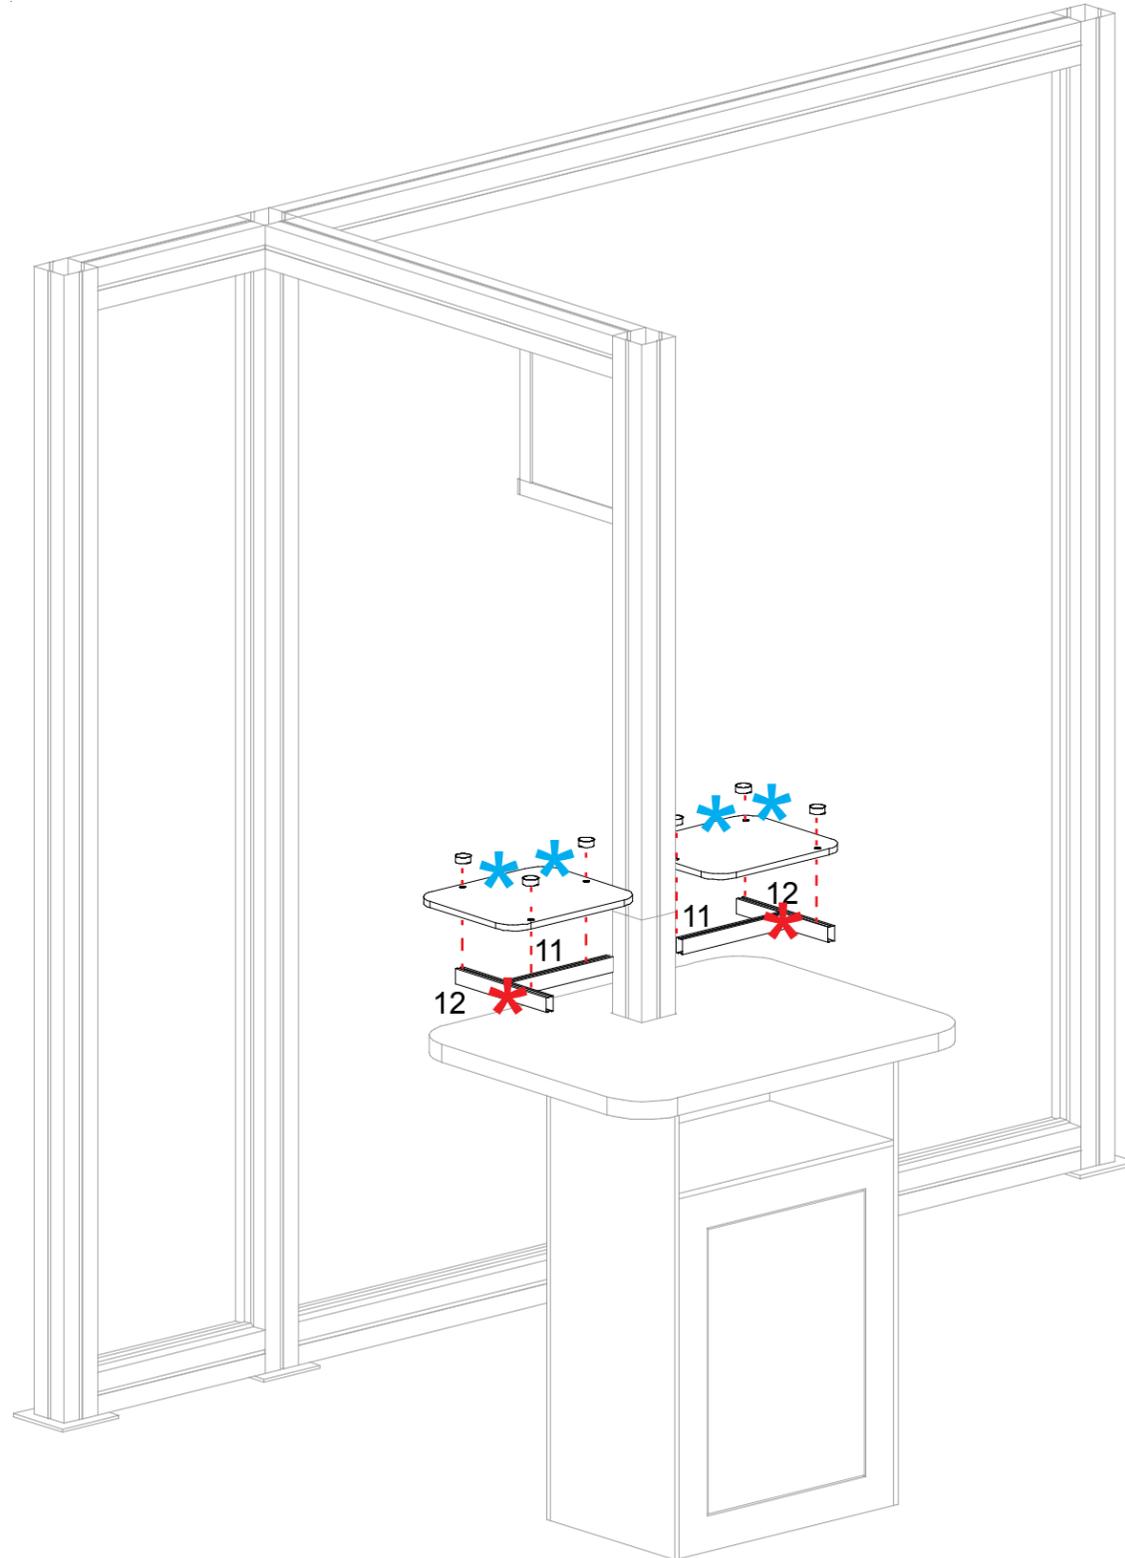



When assembled

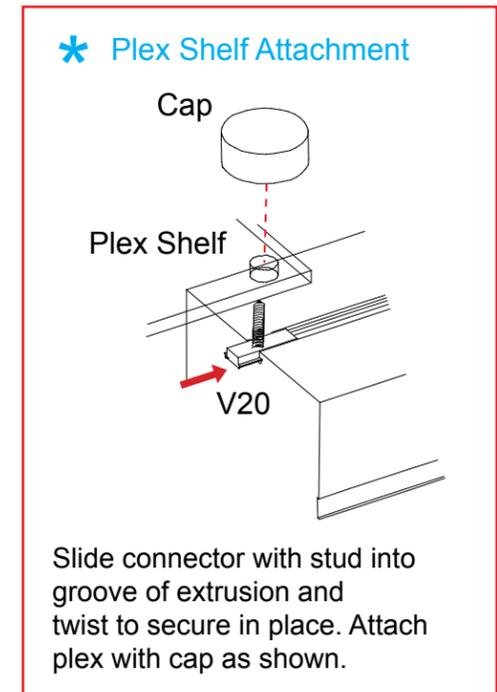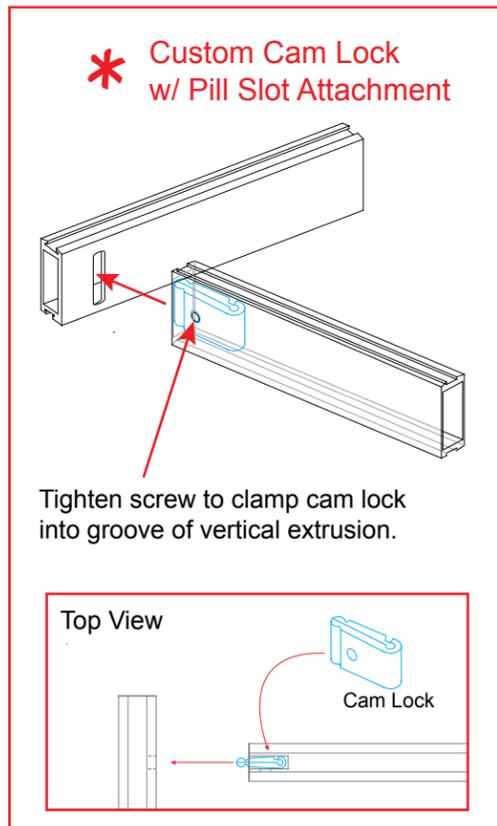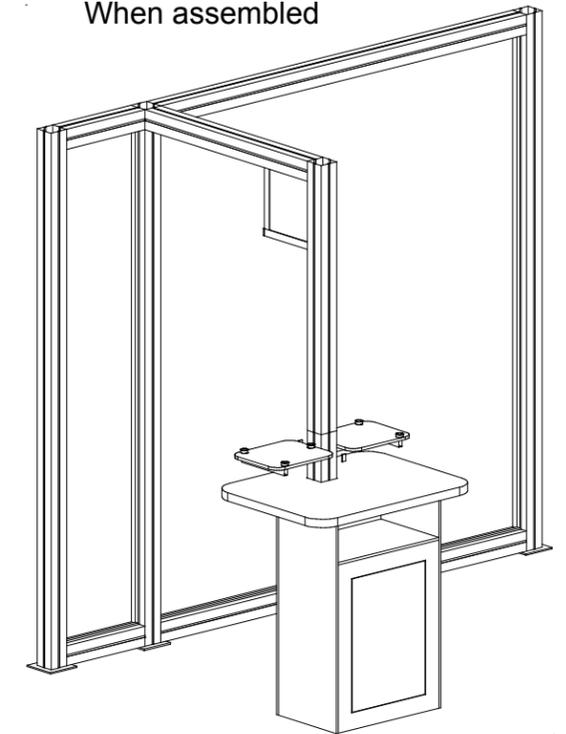


Steps:

- 1) Connect Literature Racks to verticals [3] & [7/7A] where indicated.
See Literature Rack Attachment detail.
- 2) Attach Ipad Clamshell to vertical [3] where indicated.
See Ipad Clamshell Attachment detail.
- 3) Install Monitor Mount to vertical [7A] where shown.
See Monitor Mount Attachment detail.
- 4) Attach Graphic Signs to front and back of vertical [7A] where indicated.


*** iPad Mount Attachment**

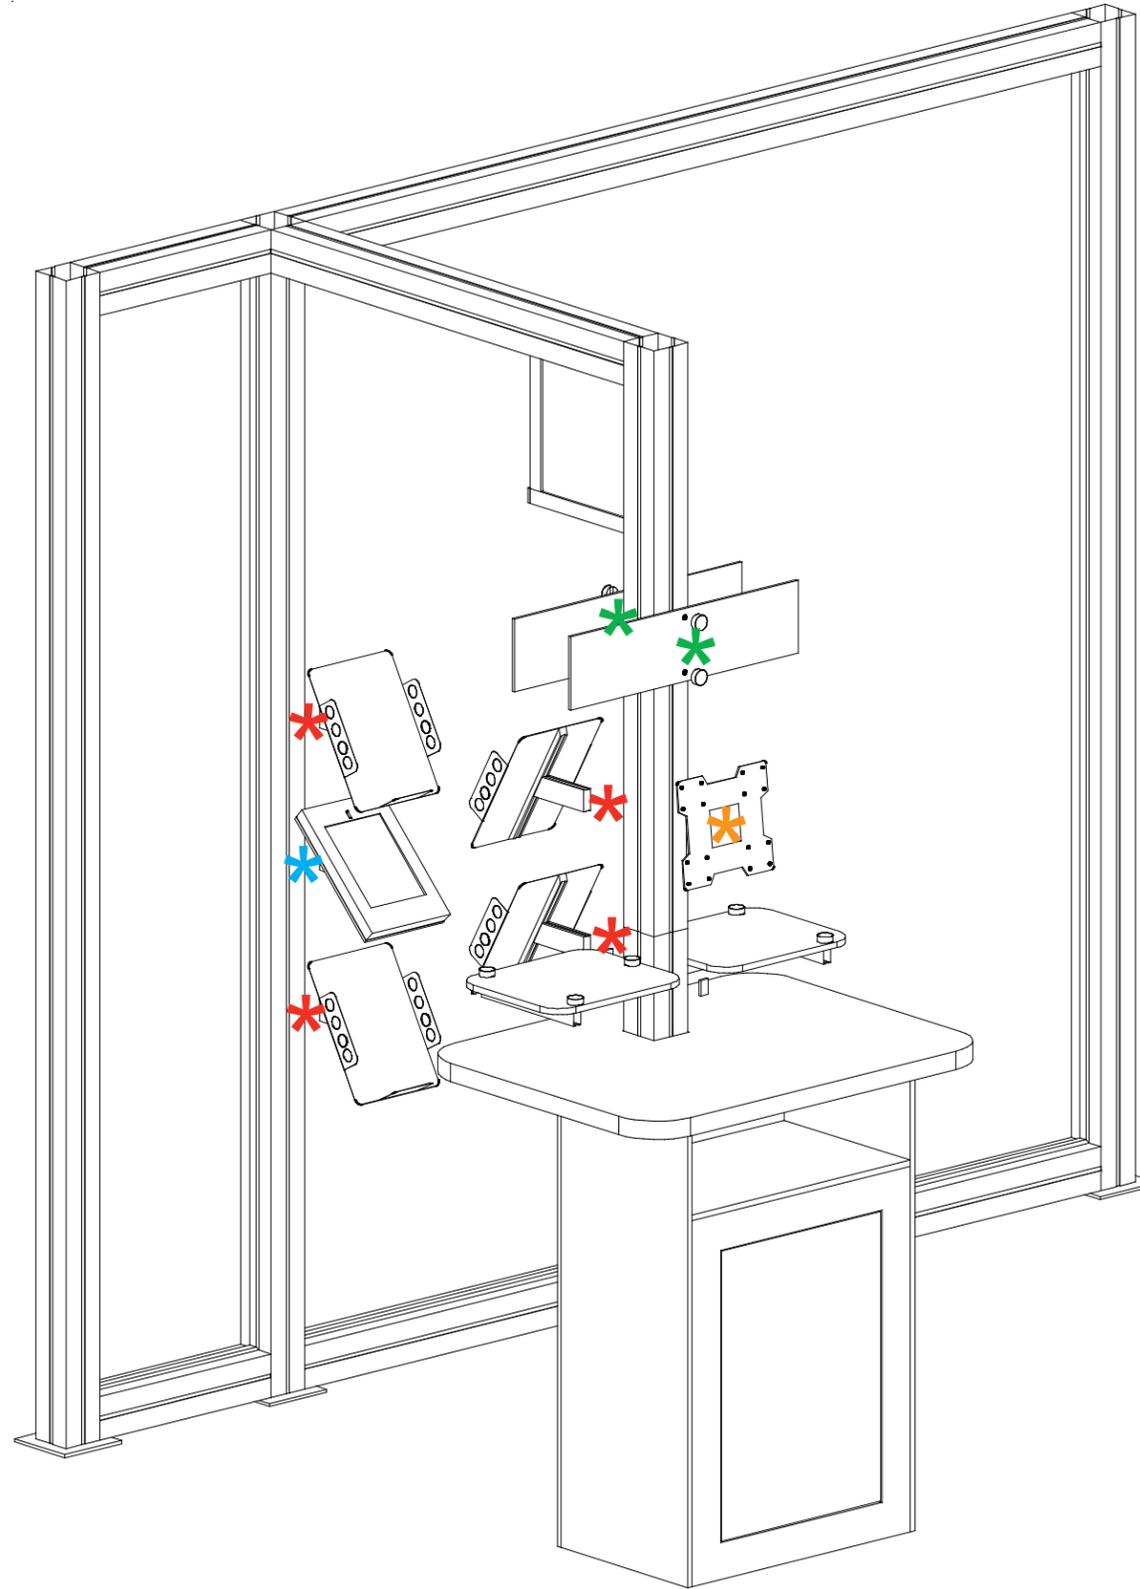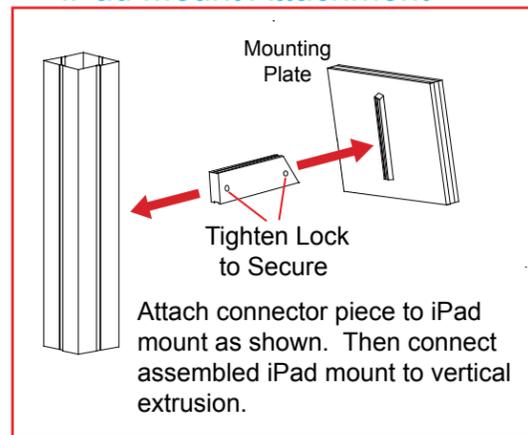


When assembled

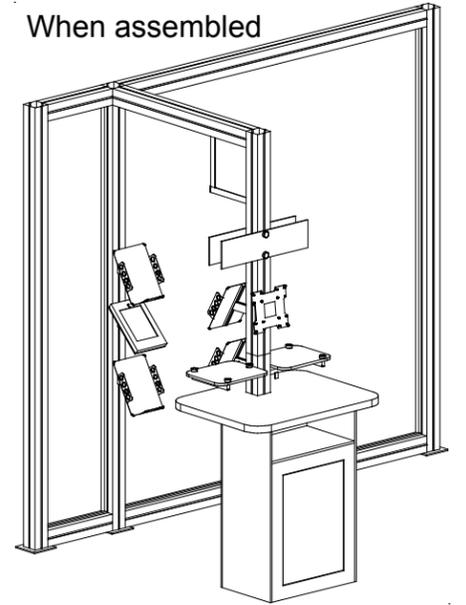


*** Monitor Mount Attachment W/Out Stand Off Barrels**

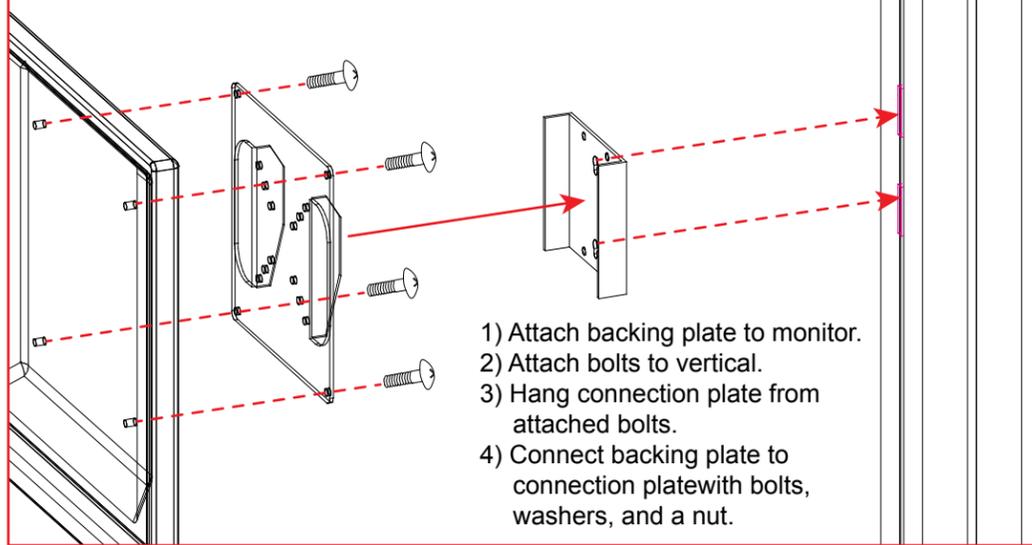

*** Graphic to Post Attachment**

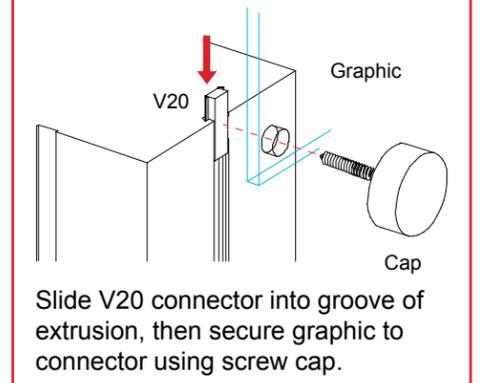


*** Literature Rack Attachment**

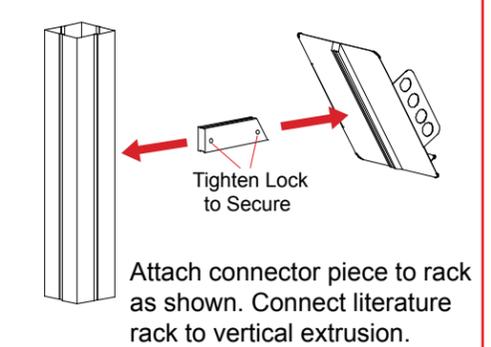

Item	Qty.	Description
13	4	33" h Q914 Vertical Extrusion

Steps:

1) Connect verticals [13] to wood build planter box using bolts

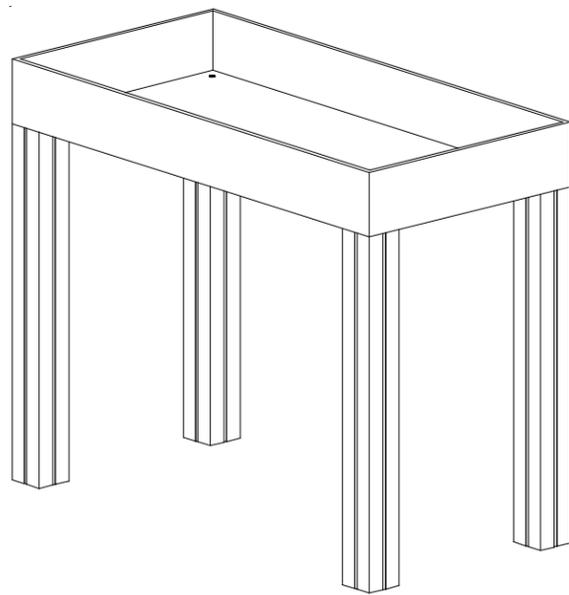

When assembled

