

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

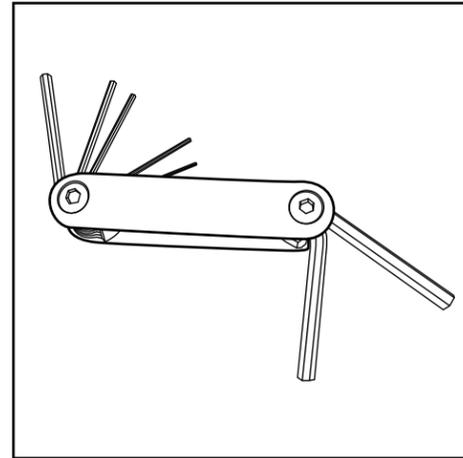


Hex Tool - Essential for Assembly

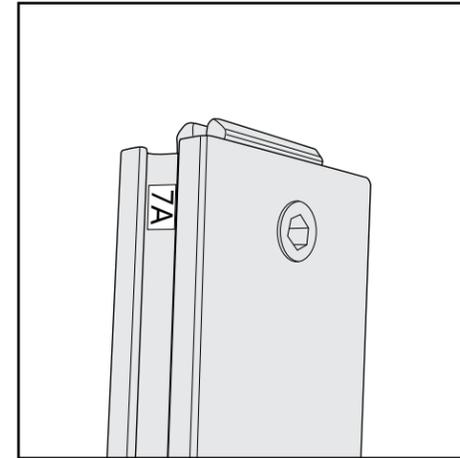


Part Identification - Numbering

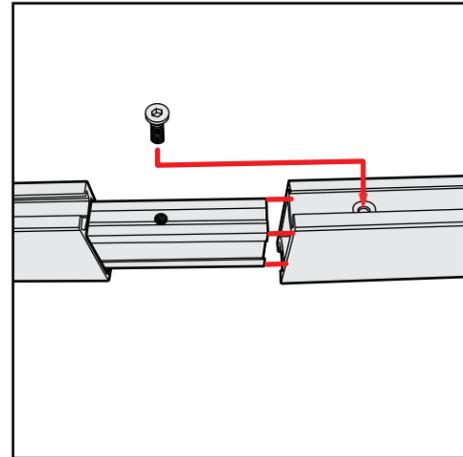


Spline Connection

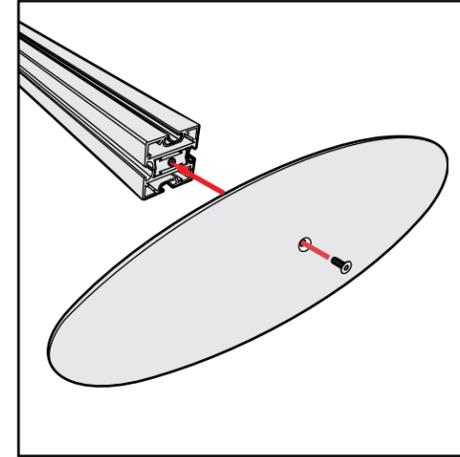

Base Plate & Extrusion Connection

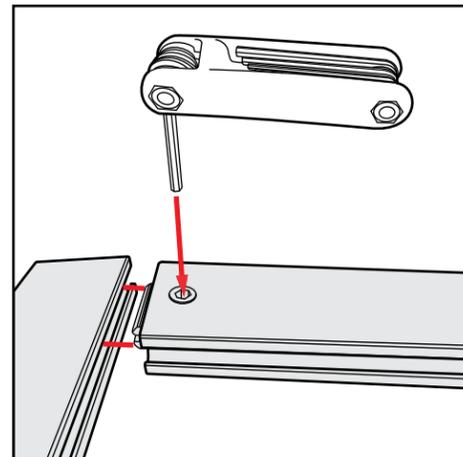

Extrusion & Lock Connection

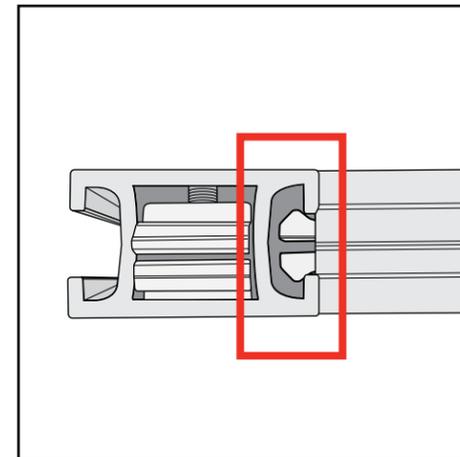

Engaged Lock



WARNING




DO NOT USE POWER TOOLS




LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED

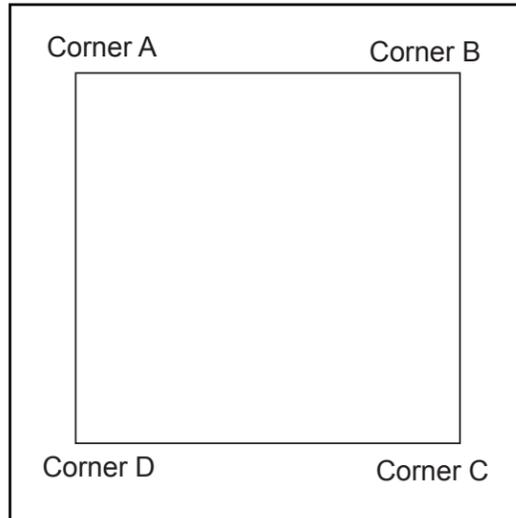

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

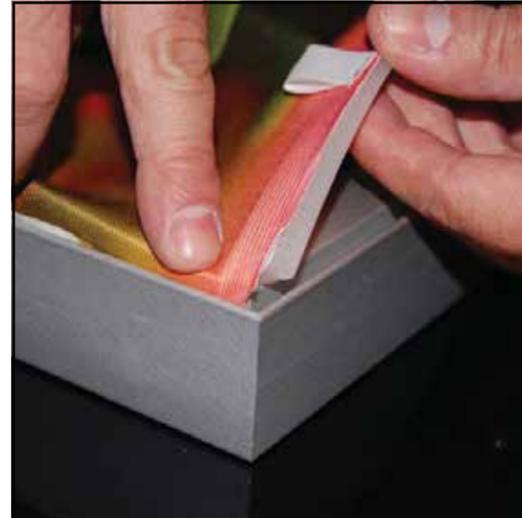

Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

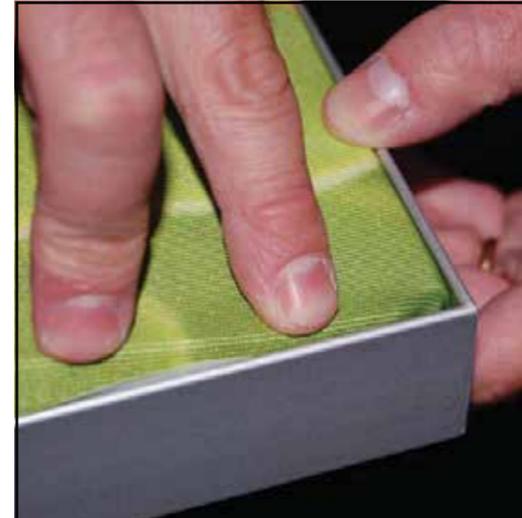


Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

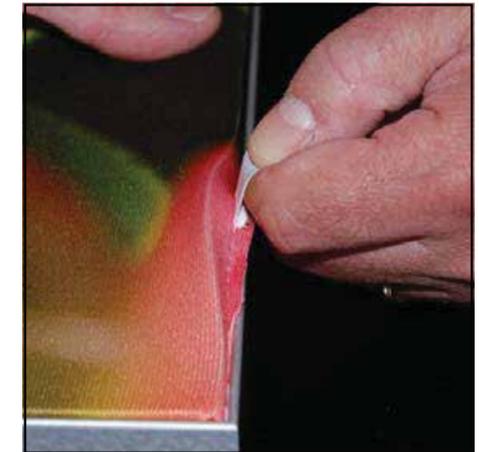


To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.




CRATE PACKING

Item	Qty.	Description
1	1	Base Plate
2	1	95.75" S44 Vertical Extrusion
3	1	95.75" S44 Vertical Extrusion
4	1	95.75" S44 Vertical Extrusion
5	1	95.75" TSP49 Vertical Extrusion
6	1	95.75" TSP49 Vertical Extrusion
7	1	96" TSP49 Curved Horizontal Extrusion
8	1	96" TSP49 Curved Horizontal Extrusion
9	1	92.167" Z45 Vertical Extrusion
10	1	95.75" TSP49 Vertical Extrusion
11	1	95.75" TSP49 Vertical Extrusion
12	1	22.692" TSP49 Curved Horizontal Extrusion
13	1	22.692" TSP49 Curved Horizontal Extrusion
14	1	19.027" Z140 Horizontal Extrusion

- Steps:
- 1) Attach Base Plate [1] to vertical [2] using bolt.
 - 2) Assemble verticals [5,6] between horizontals [7,8]. See [TSP49 Corner Connection](#) detail.
 - 3) Connect vertical [9] between horizontals [7,8].
 - 4) Assemble verticals [10,11] between horizontals [12,13]. See [TSP49 Corner Connection](#) detail.
 - 5) Attach horizontal [14] between verticals [12,13].
 - 6) Connect frame assembly [5/6/7/8/9] between verticals [2,3]. See [Custom Cam Lock](#) detail.
 - 7) Attach frame assembly [10/11/12/13/14] between verticals [3,4]. See [Custom Cam Lock](#) detail.
 - 8) Apply SEG Graphics to frames [5/6/7/8/9] & [10/11/12/13/14]. Refer to the SEG Installation general information page.




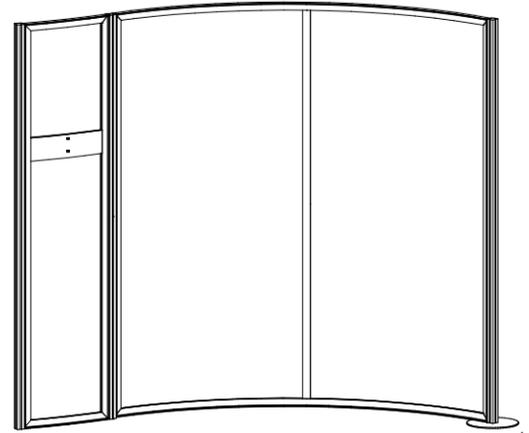


When assembled

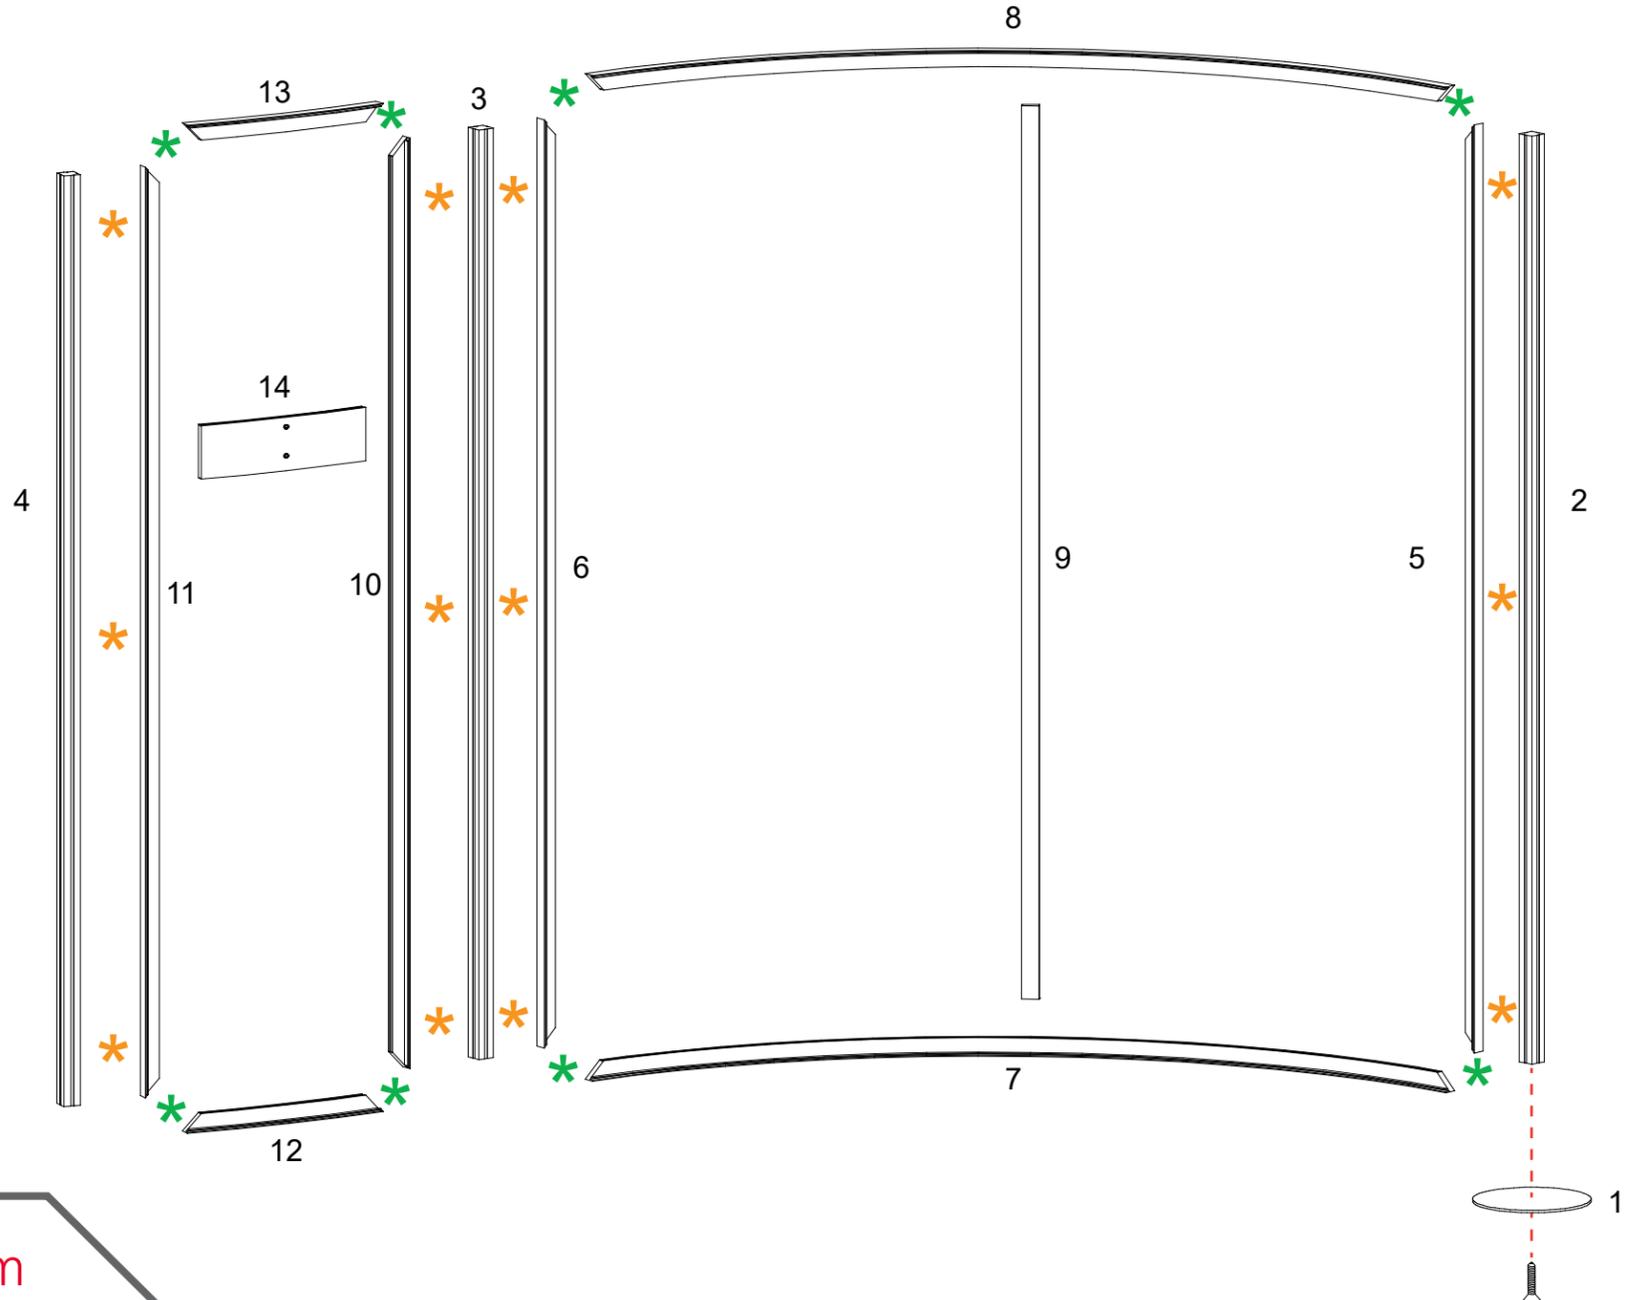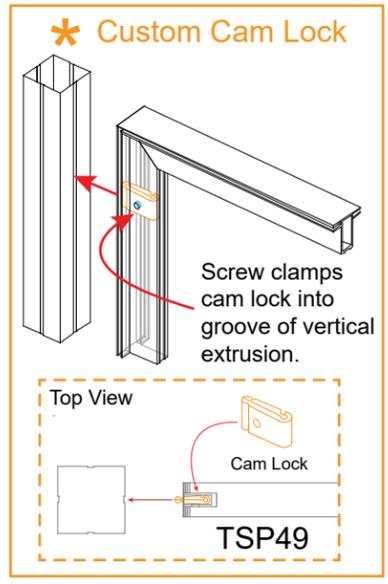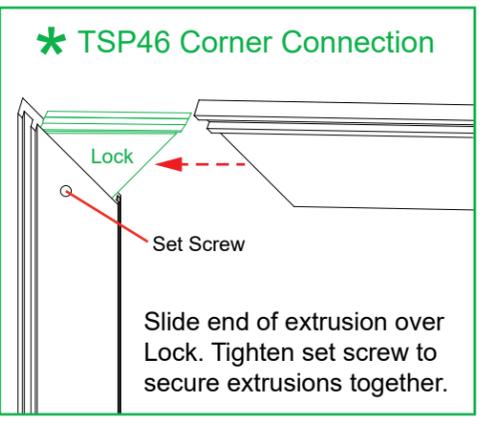


Item	Qty.	Description
15	1	38" h S40 Vertical Extrusion
16	4	19.02115" Z45 Curved Horizontal Extrusion
17	4	19.02115" Z45 Curved Horizontal Extrusion

- Steps:
- 1) Connect vertical [15] between horizontals [16,17].
 - 2) Place Shelves onto horizontals [16,17].
 - 3) Connect horizontals [16,17] to verticals [2,3] of backwall.
 - 4) Place Counter Top on top of horizontals [16,17].
 - 5) Attach Monitor Mount to horizontal [14]. See **Monitor Mount Attachment** detail.
 - 6) Connect Lights to top of backwall. See **Light Attachment** detail.
 - 7) Attach Literature Tray to vertical [2]. See **Literature Tray Attachment** detail.

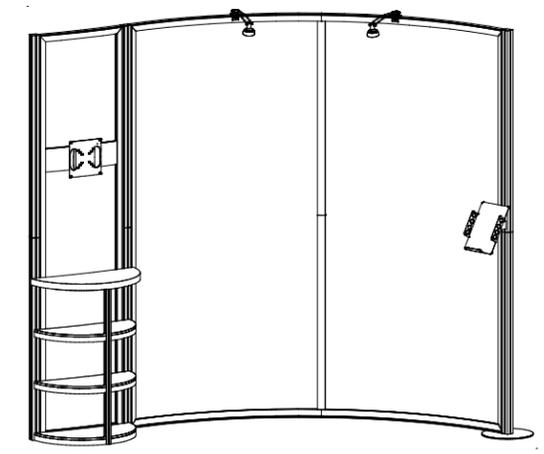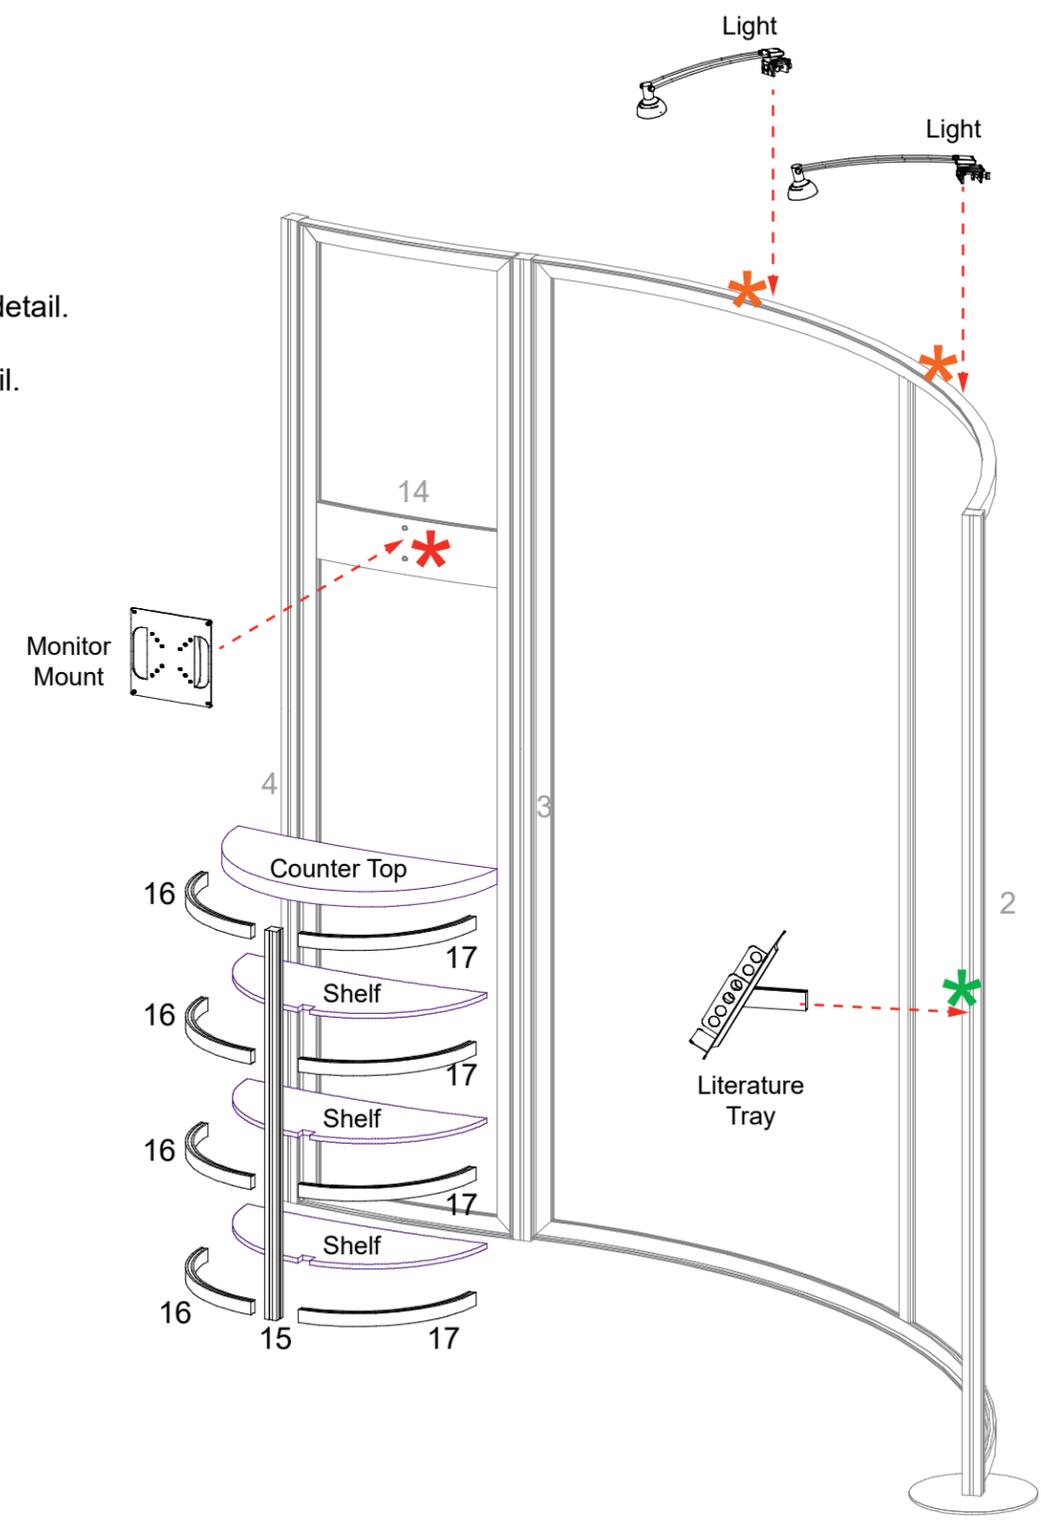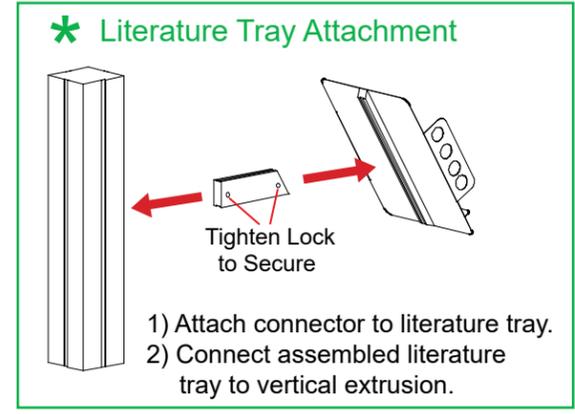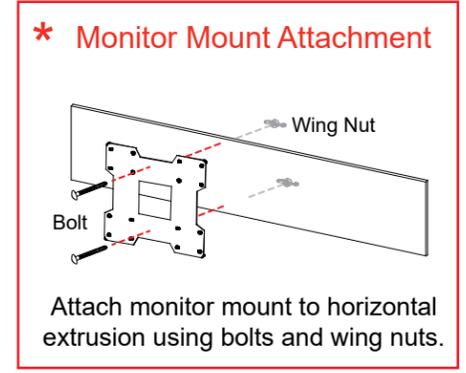


When assembled


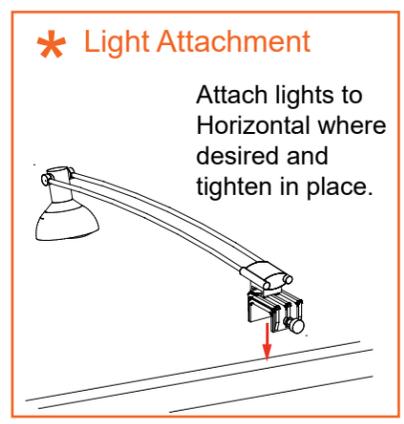


Item	Qty.	Description
1	1	5.75"r x 42"h Curved Panel
2	1	5.75"r x 42"h Curved Panel w/ TSP3 Extrusion
3	1	41.2385" Z45 w/ TSP3 Curved Horizontal Extrusion
4	1	41.2385" Z45 Curved Horizontal Extrusion
5	1	16.35" Z45 Horizontal Extrusion
6	1	38" S44 w/ TSP3 Vertical Extrusion
7	1	38" S44 Vertical Extrusion
8	1	41.2385" Z45 w/ TSP3 Curved Horizontal Extrusion
9	1	41.2385" Z45 Curved Horizontal Extrusion
10	1	16.35" Z45 Horizontal Extrusion


- Steps:
- 1) Connect curved panels [1] and [2] together.
 - 2) Assemble lower horizontals [3] [4] and [5] between assembled curved panels [1/2] and verticals [6] and [7].
 - 3) Insert **Infill** between verticals [6] and [7] as shown.
 - 4) Attach upper horizontals [8] [9] and [10].
 - 5) Install SEG graphic to front of pedestal.
 - 6) Connect **shelf supports** to Velcro then place shelves on top of supports.
 - 7) Place counter top and counter on top of assembled base.

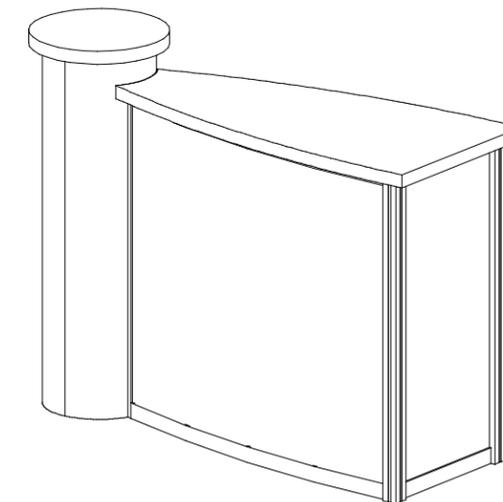

Completed Assembly

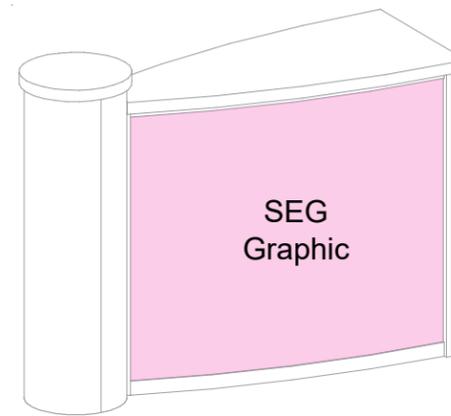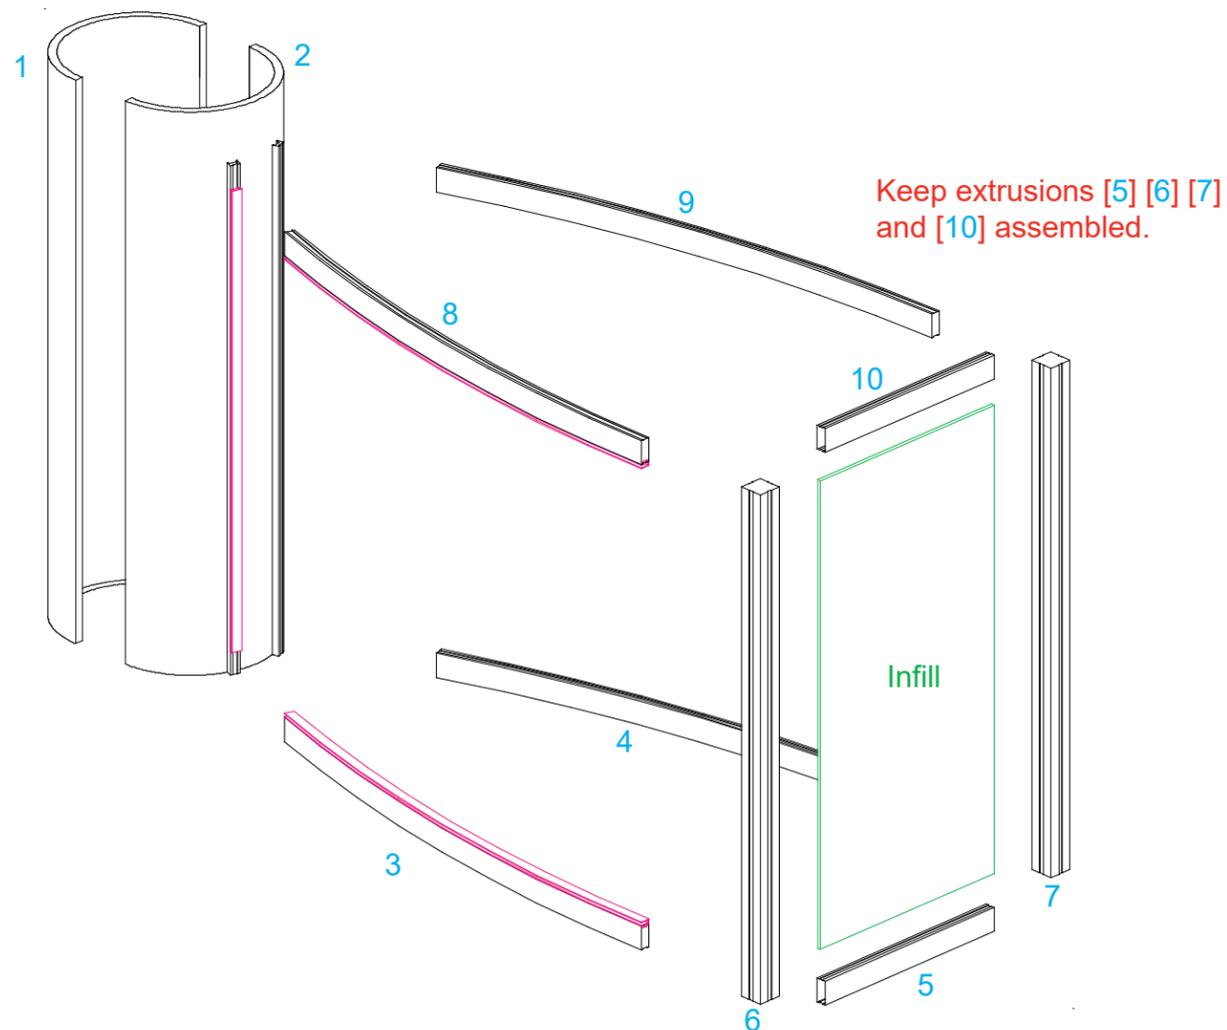


SEG Graphic Installation

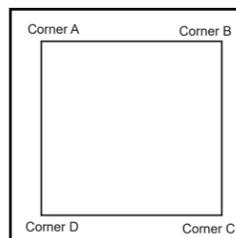

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.




Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

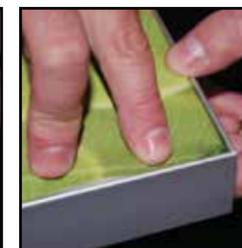

Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Graphic Removal

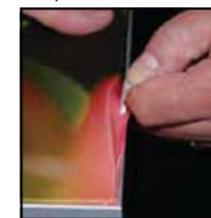

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

