


Plan View

10'

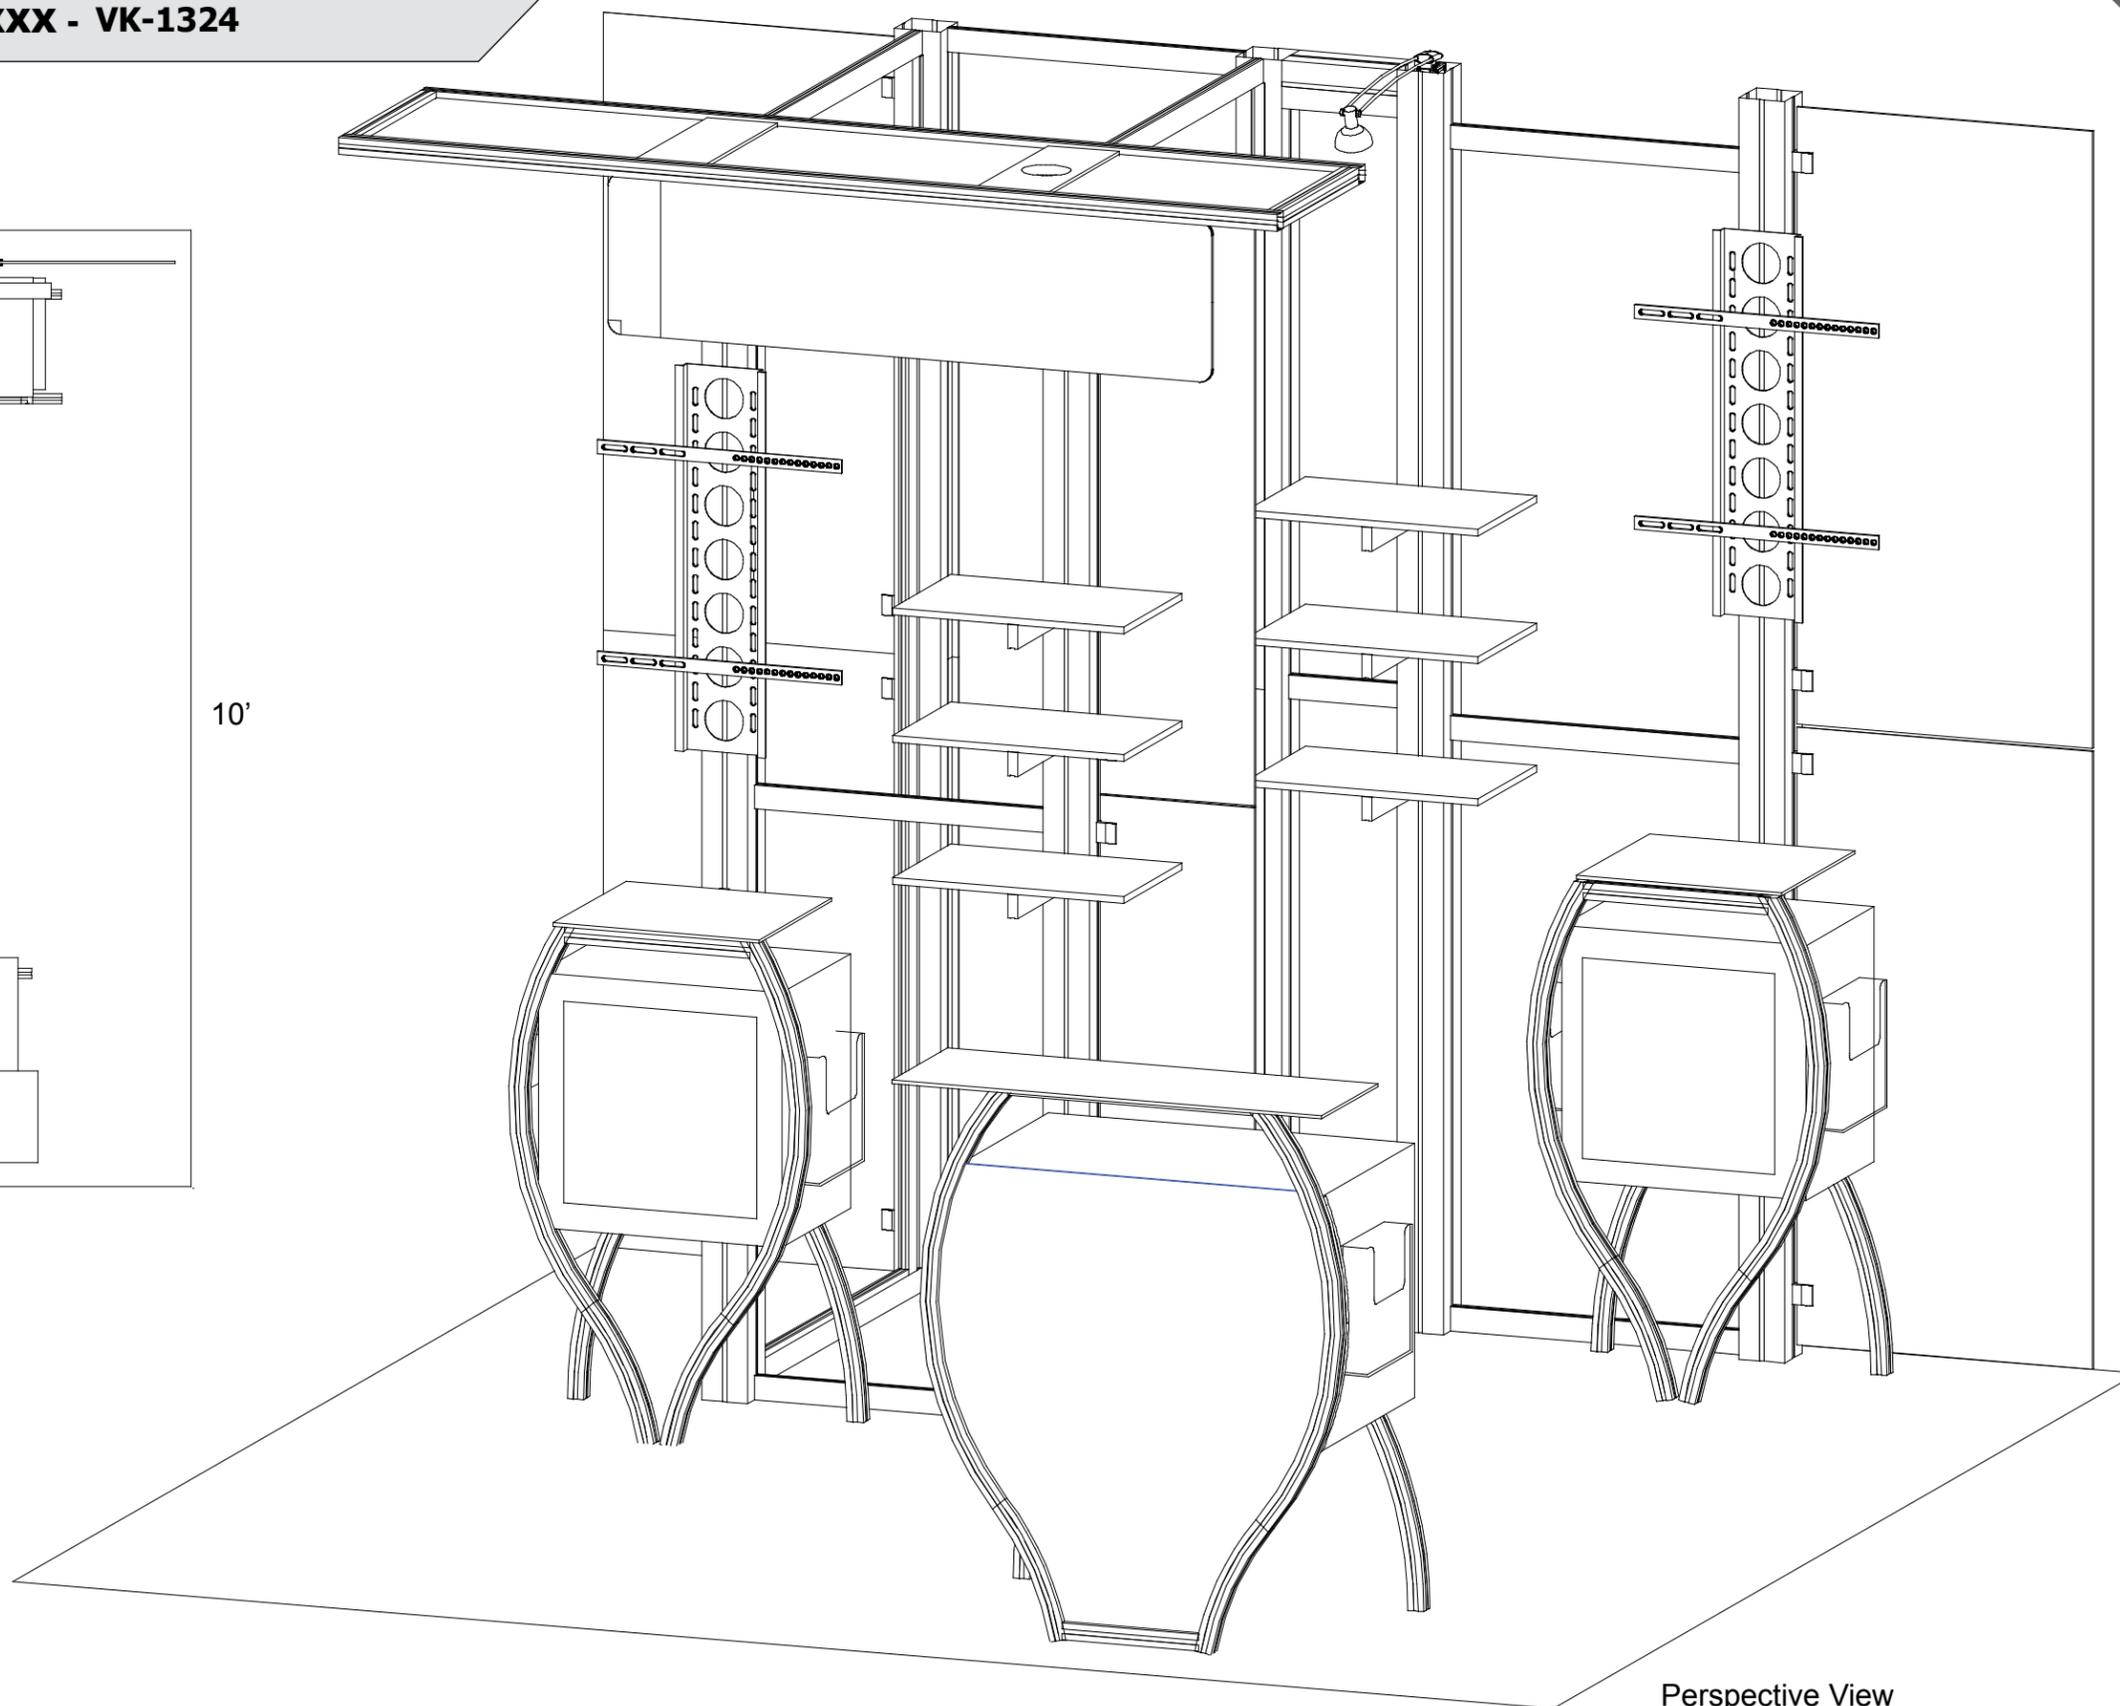

Perspective View



# SETUP INSTRUCTIONS

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

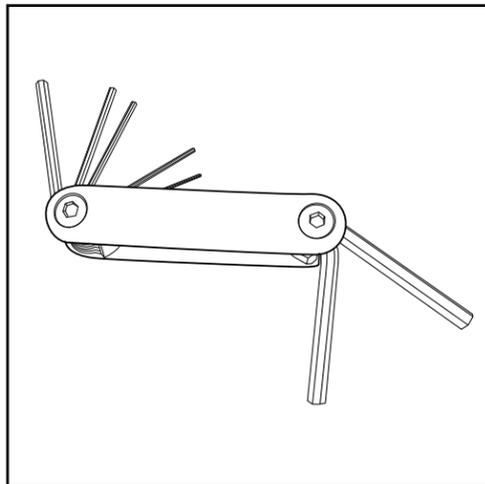


Hex Tool - Essential for Assembly

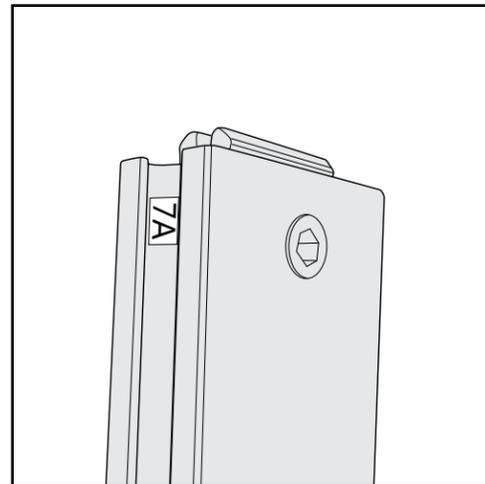


Part Identification - Numbering

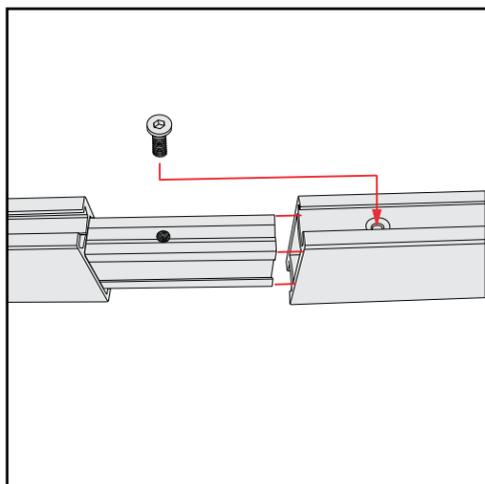


Spline Connection

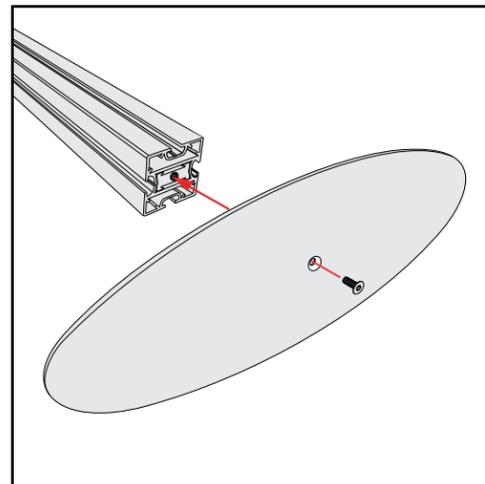

Base Plate & Extrusion Connection

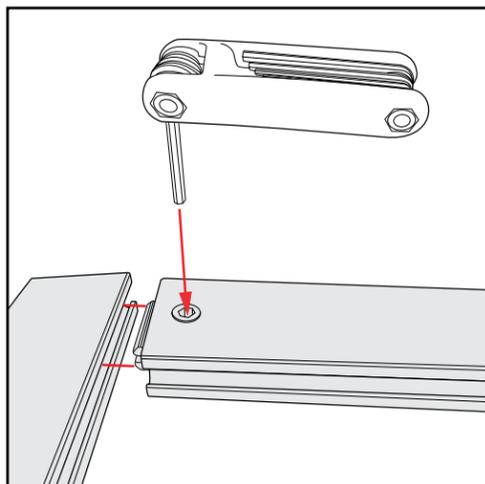

Extrusion & Lock Connection

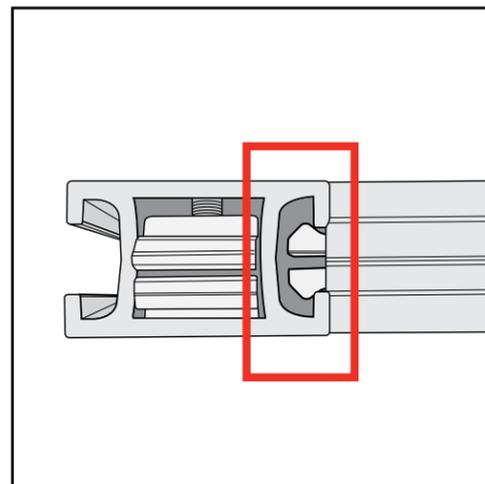

Engaged Lock



# WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED







ALL CONNECTIONS MUST  
BE TIGHTLY SECURED

Item	Qty.	Description
1	1	94”h Q914 Vertical Extrusion w/ Door Hinges
2	1	36”w Z45 Horizontal Extrusion
2A/2B	1/1	36”w Z45 Horizontal Extrusion w/ Velcro
3	1	94”h Q914 Vertical Extrusion
4/4A/4B	1/1/1	23”w Z45 Horizontal Extrusion
5	1	94”h Q914 Vertical Extrusion
6/6A	1/1	36”w Z45 Horizontal Extrusion w/ Velcro

Item	Qty.	Description
7	1	94”h Q914 Vertical Extrusion
8/8A	1/1	23”w Z45 Horizontal Extrusion w/ Velcro
9/9A	1/1	9”w Q914 Horizontal Extrusion
9B	1	9”w Z45 Horizontal Extrusion
10	1	94”h Q914 Vertical Extrusion
11/11A/11B	1/1/1	23”w Z45 Horizontal Extrusion
12	1	94”h Q914 Vertical Extrusion

**Steps:**



- 1) Connect horizontals [2], [2A], & [2B] between verticals [1] & [3].
- 2) Attach horizontals [8] & [8A] between verticals [1] & [7].
- 3) Connect horizontals [6] & [6A] between verticals [5] & [7].
- 4) Attach horizontal [4] between verticals [3] & [5]; insert Front Infill A.
- 5) Connect horizontal [4A] on top of Front Infill A; insert Front Infill B; secure with horizontal [4B].
- 6) Attach horizontal [9] between verticals [7] & [10]; insert Small Infill A; secure with horizontal [9B].
- 7) Insert Small Infill B between verticals [7] & [10]; secure with horizontal [9A].
- 8) Attach horizontal [11] between verticals [10] & [12].
- 9) Insert Large Infill A between verticals [10] & [12]; secure with horizontal [11A]; insert Large Infill B; secure with horizontal [11B].
- 10) Install Assembled Closet Door. See Door Attachment detail.

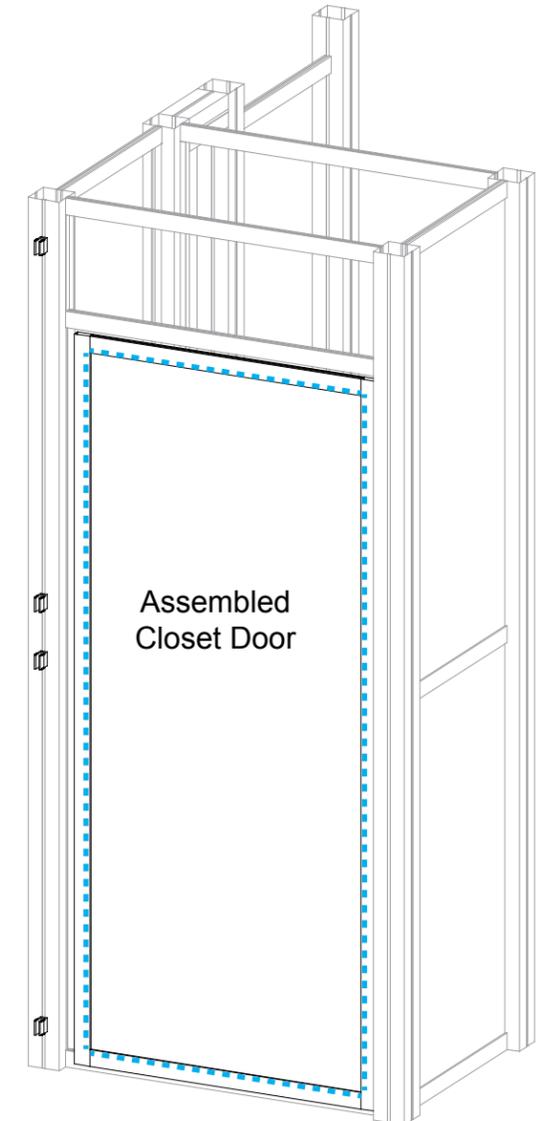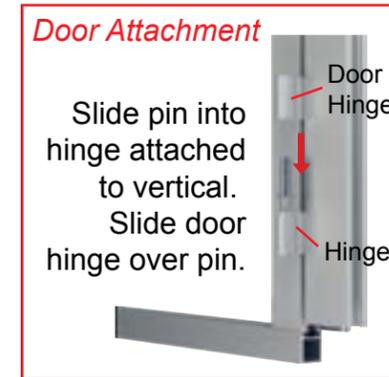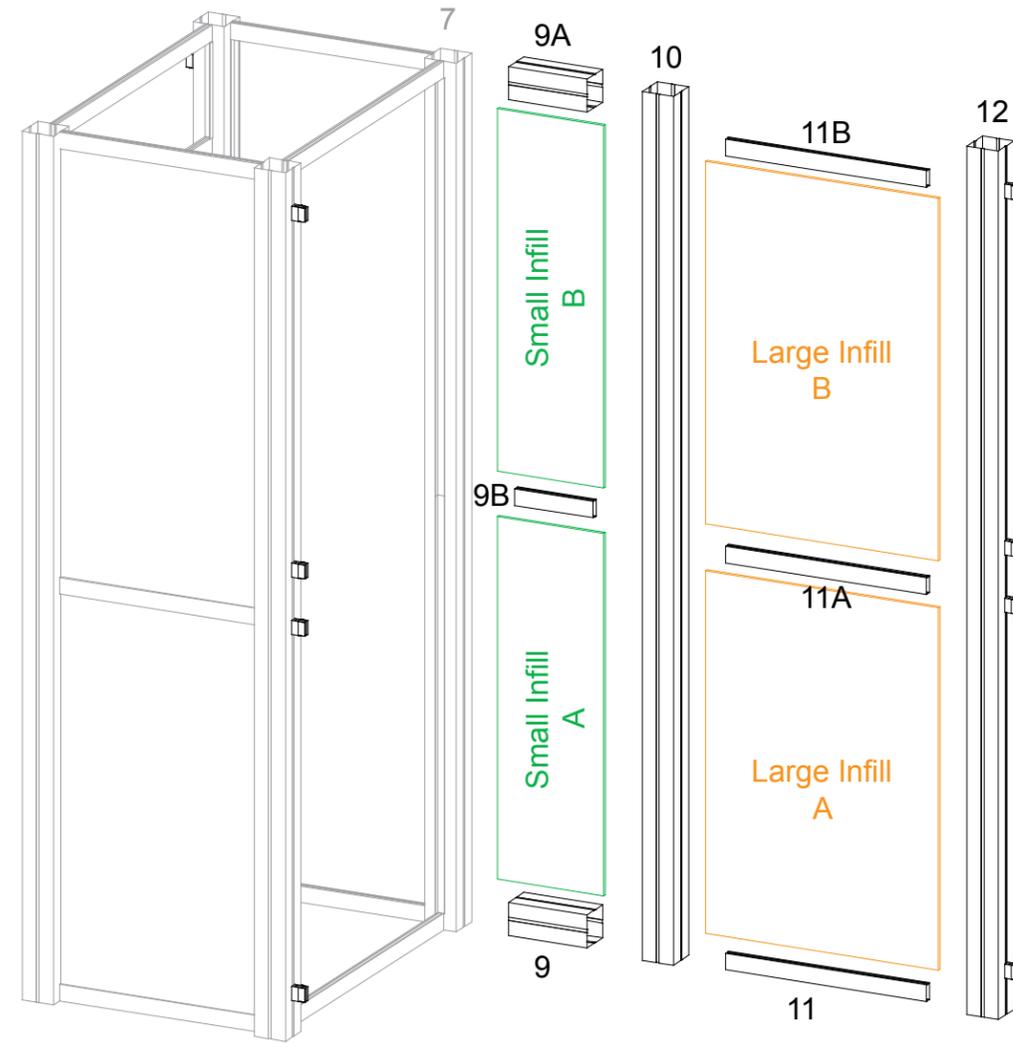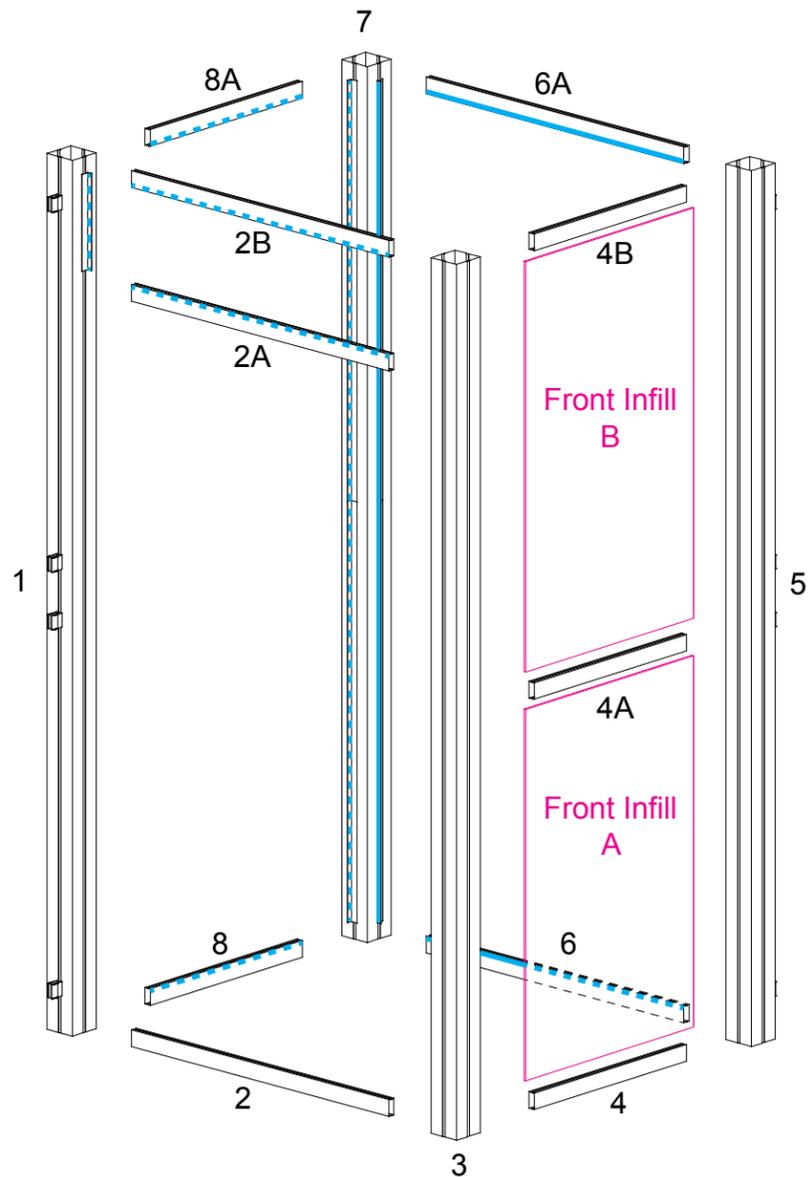


Item	Qty.	Description
13/13A	1/1	73.085" w S44 Horizontal Extrusion
14	2	15.5" w S44 Extrusion
15	1	15.5" w Z140 Extrusion
16	1	15.5" w Z140 Extrusion w/ Puck Light

**Steps:**

- 1) Attach extrusions [14] to horizontal [13].
- 2) Insert infills and extrusions [15] & [16]; secure with horizontal [13A]

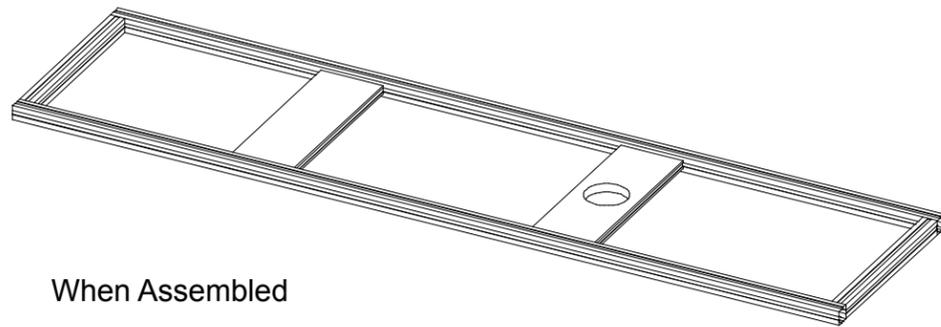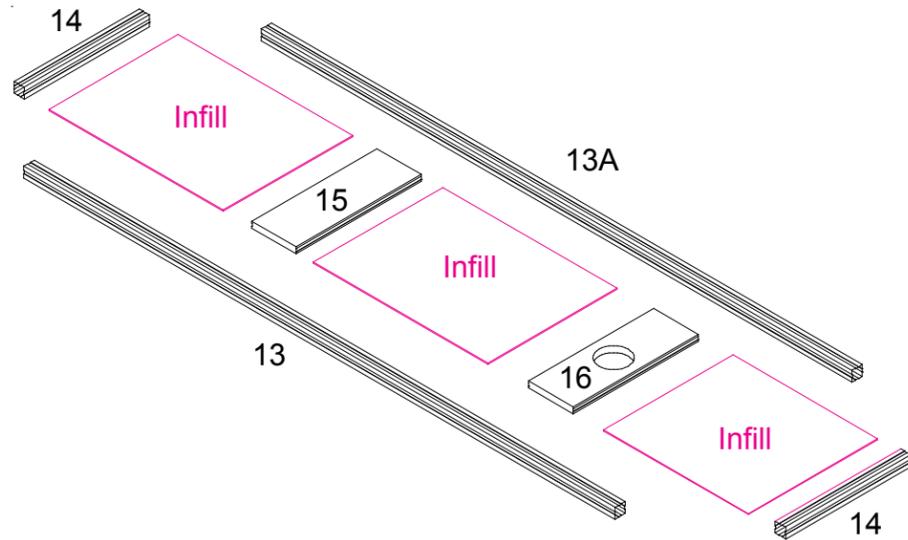





When Assembled

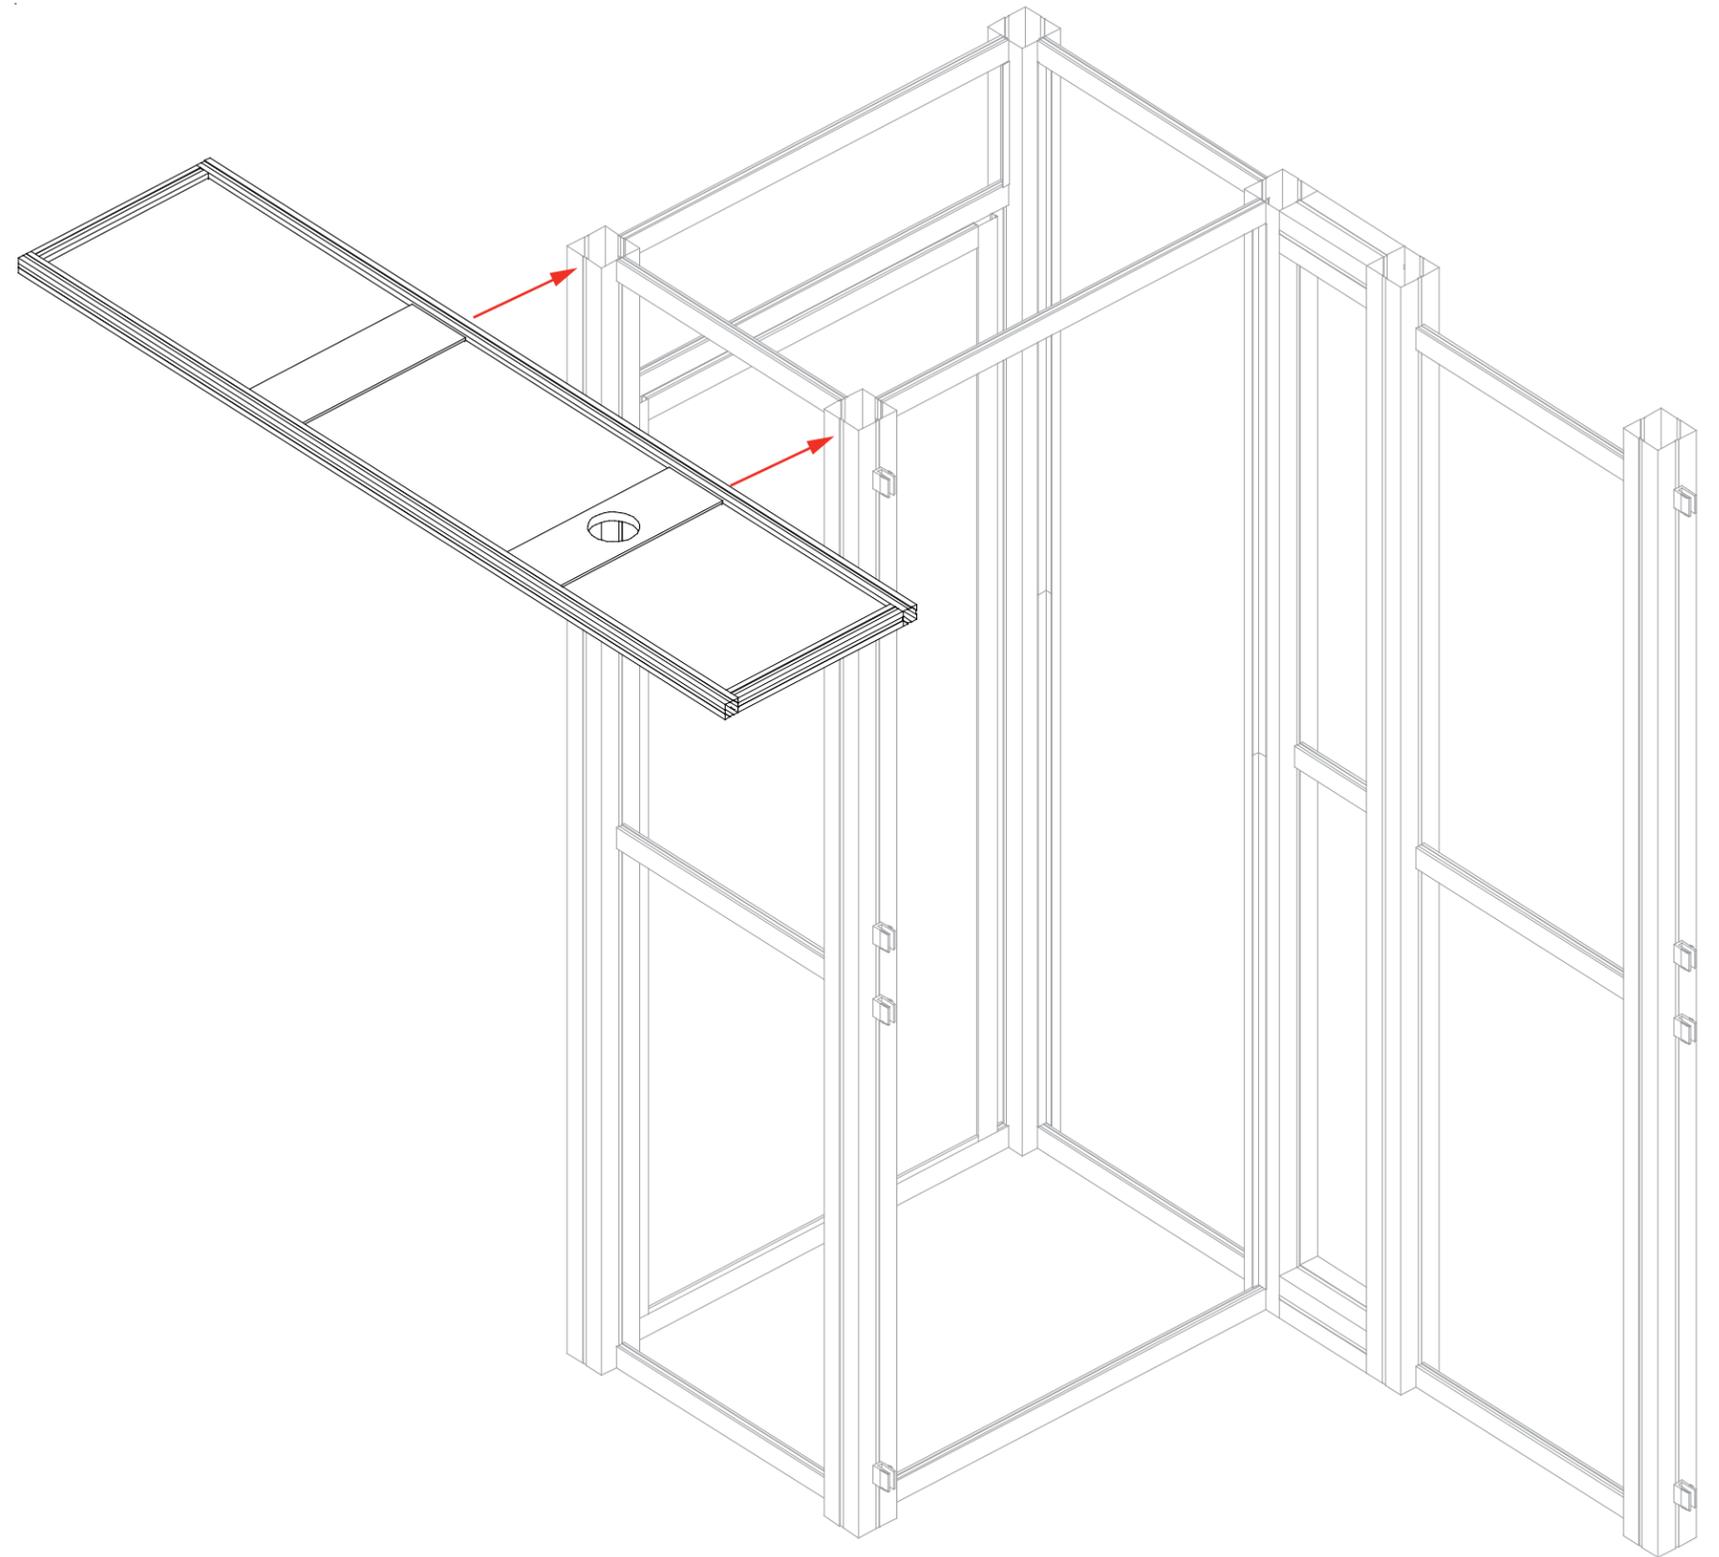



Item	Qty.	Description
17	9	Shelf Support Horizontal Extrusion

**Steps:**

- 1) Attach shelves to verticals [3] & [10]. See **Shelf Attachment** detail.
- 2) Connect Graphic Wings to installed A10 Clamps on verticals [1], [3], & [12].
- 3) Install Light on top of vertical [10]. See **Light Attachment** detail.

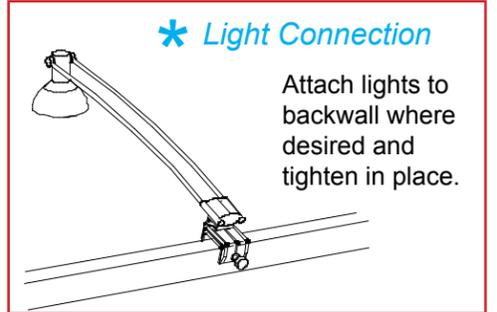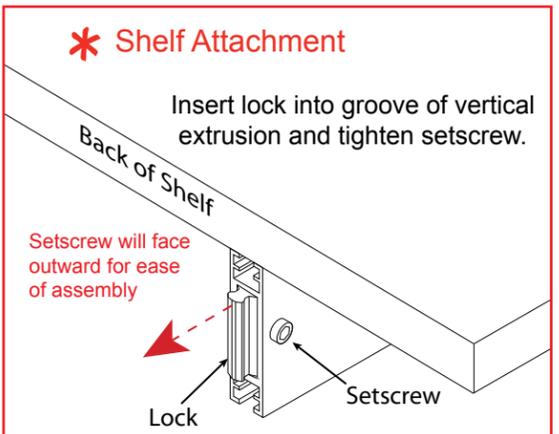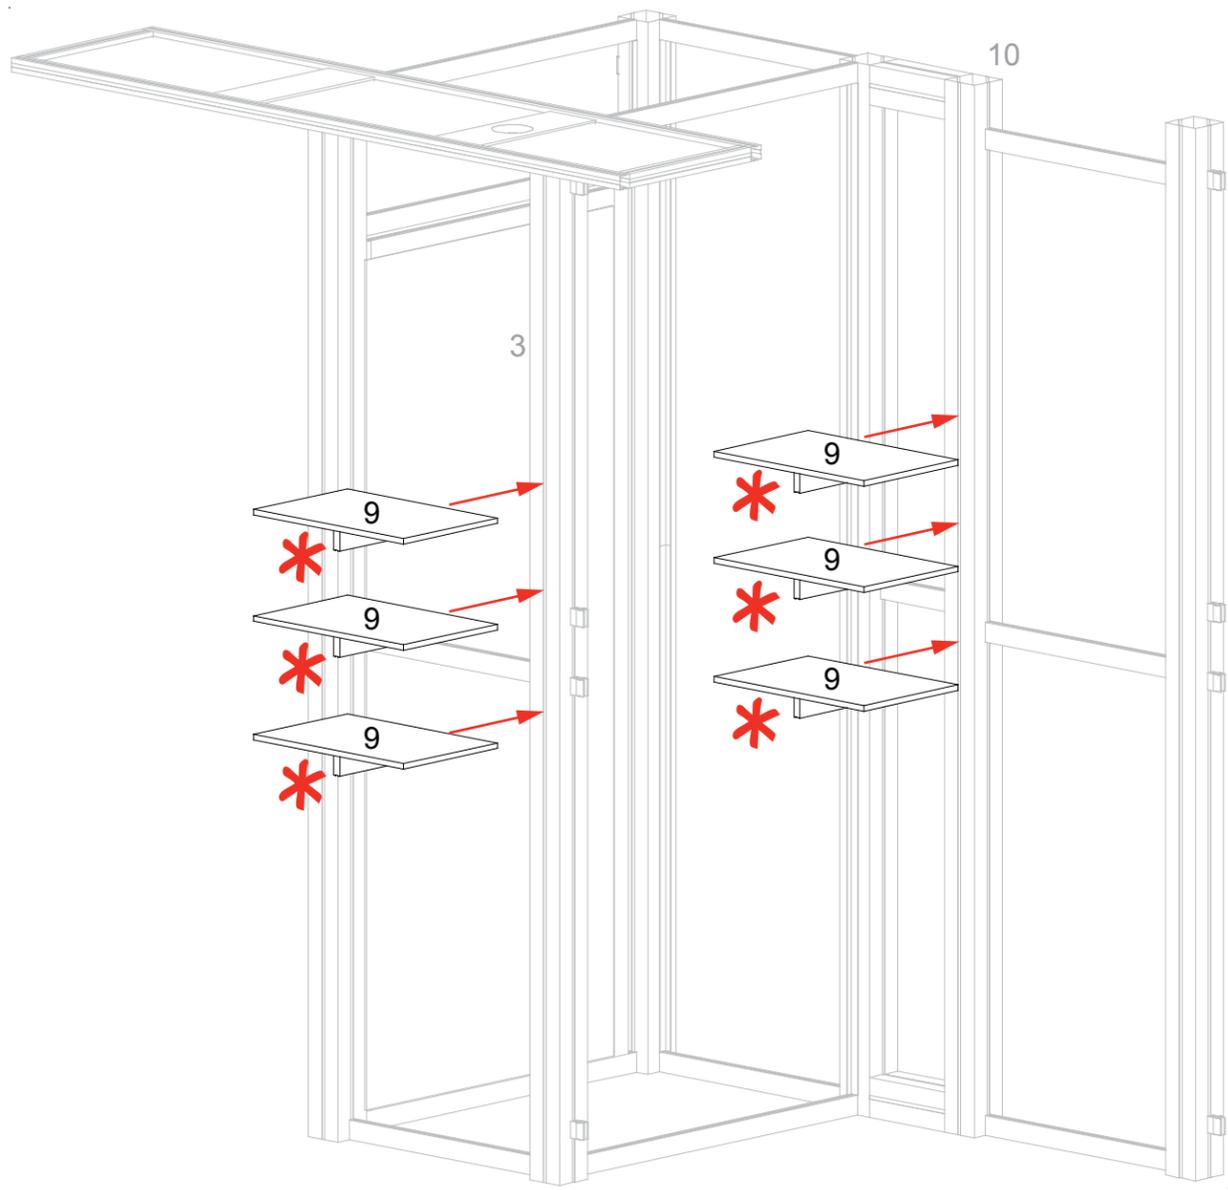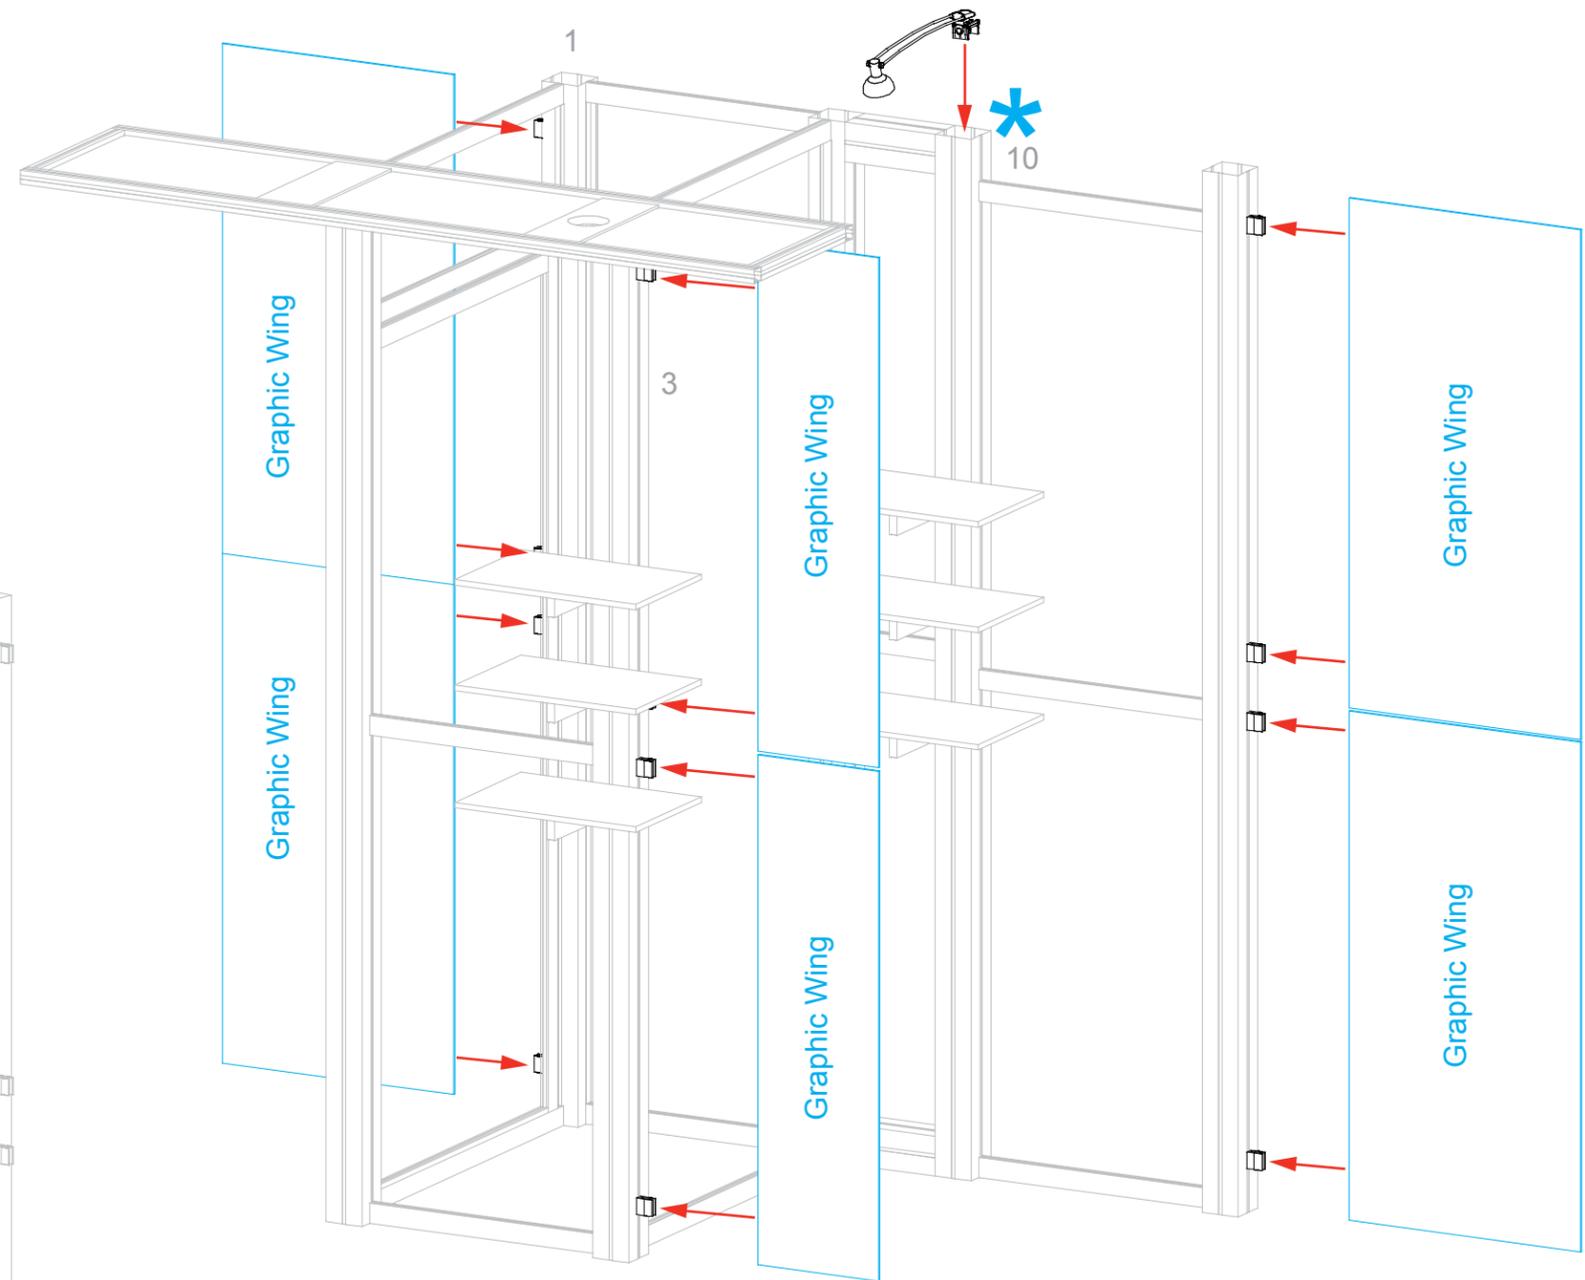





- Steps:
- 1) Attach monitor mounts to verticals [2] & [12].  
See **Monitor Mount Attachment** detail.
  - 2) Connect **Graphic Header** to front verticals [2] & [3].  
NOTE: Will attach using velcro.

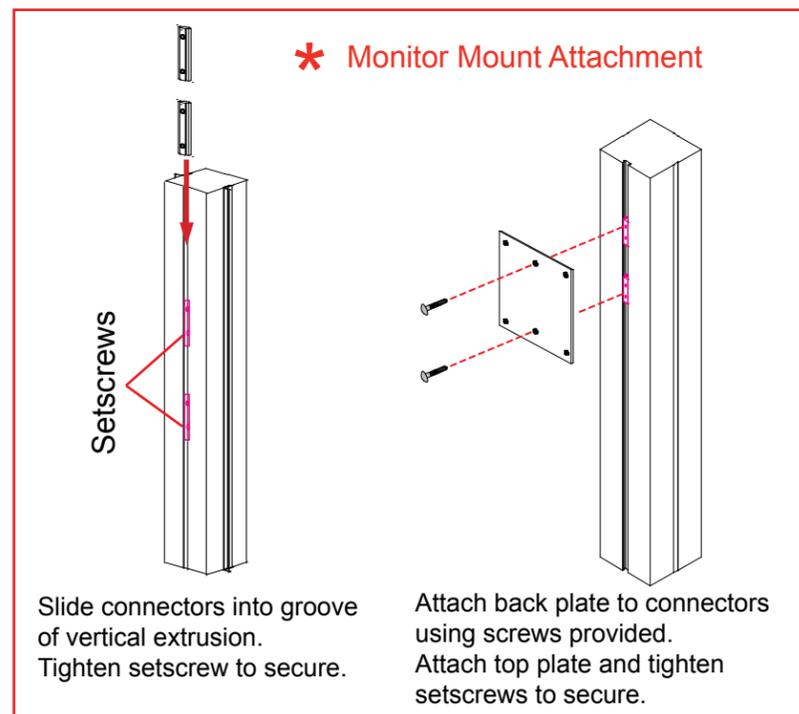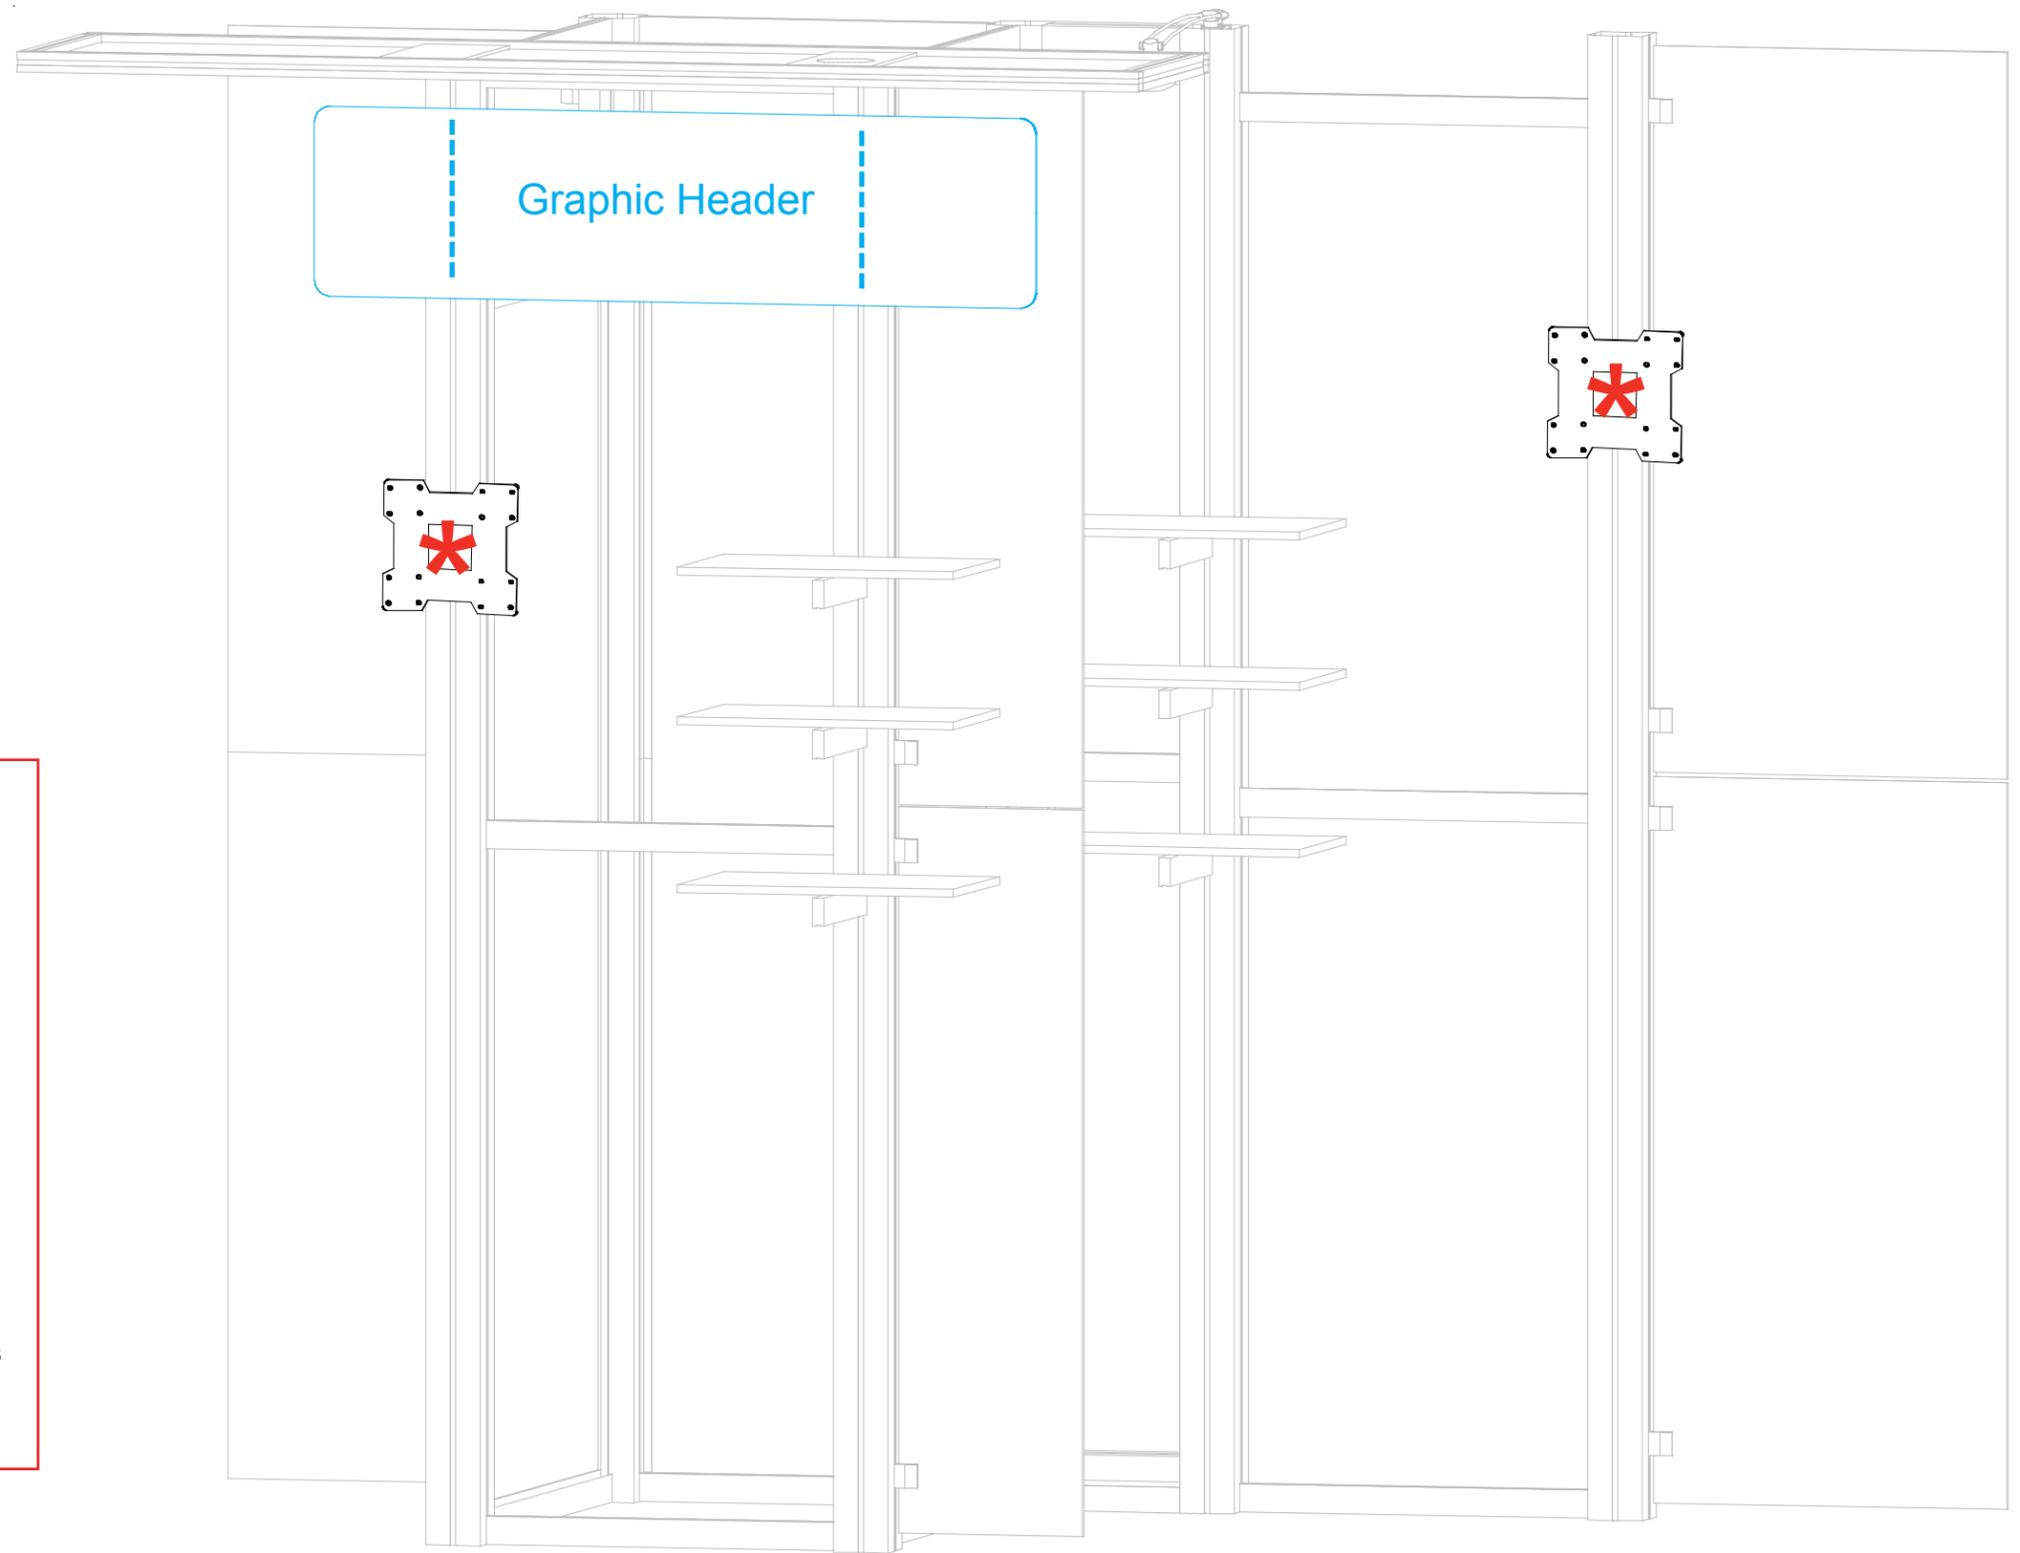

Item	Qty.	Description
A	2	3" Horizontal Extrusion

**Steps:**


- 1) Screw assembled pedestal to Q914 vertical with screwcaps.
- 2) Attach counter top support [A] to backwall verticals [2,4,20].
- 3) Attach counter top to front horizontal and support [A] using screws.
- 4) Attach literature pockets to Velcro on sides of pedestal as shown.

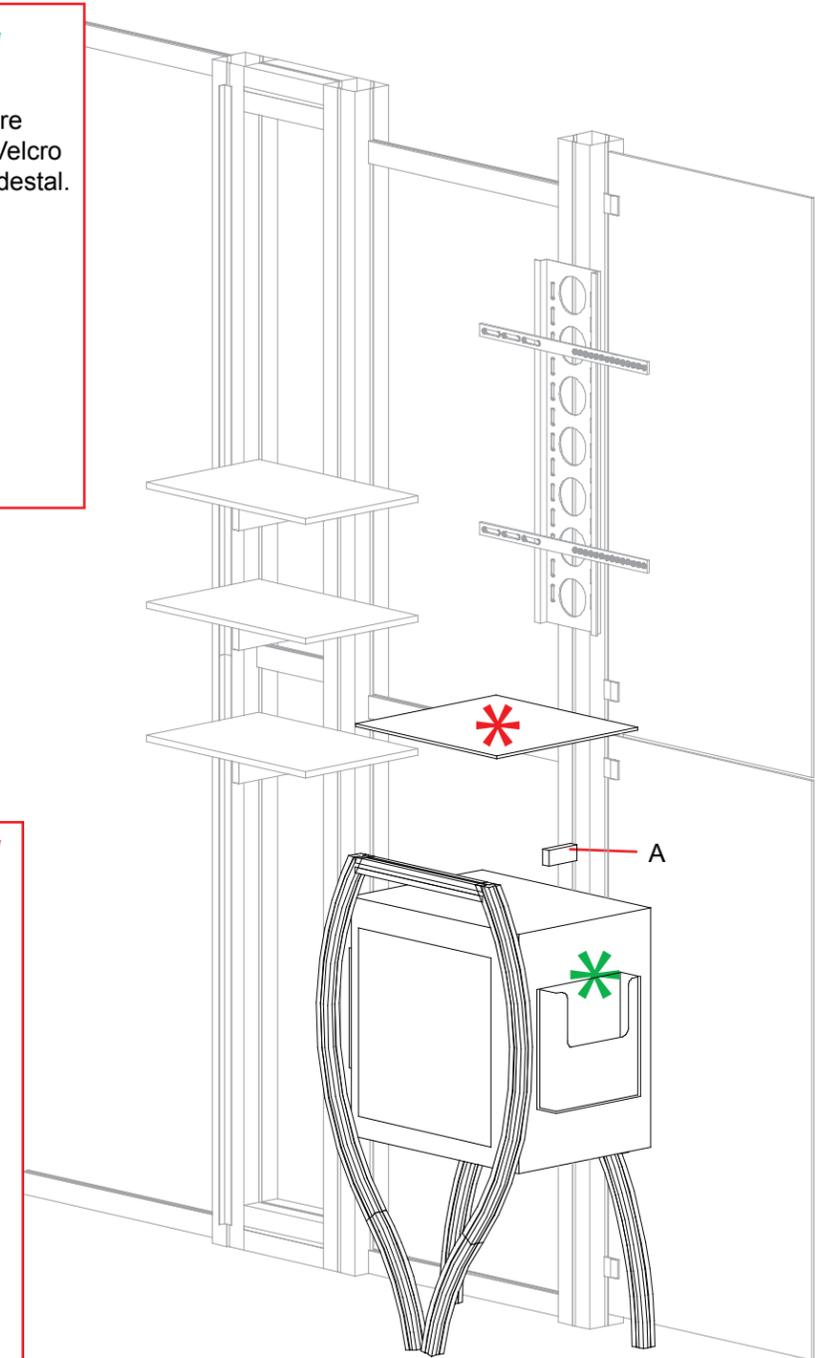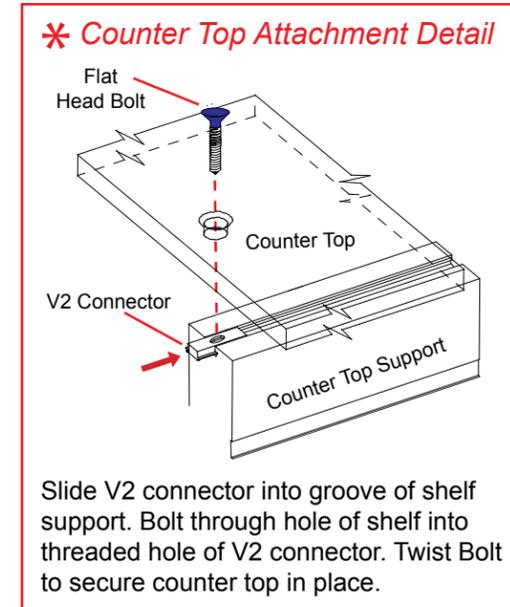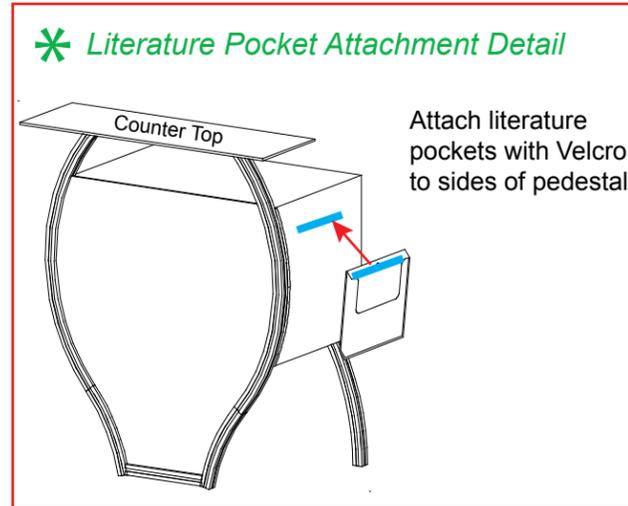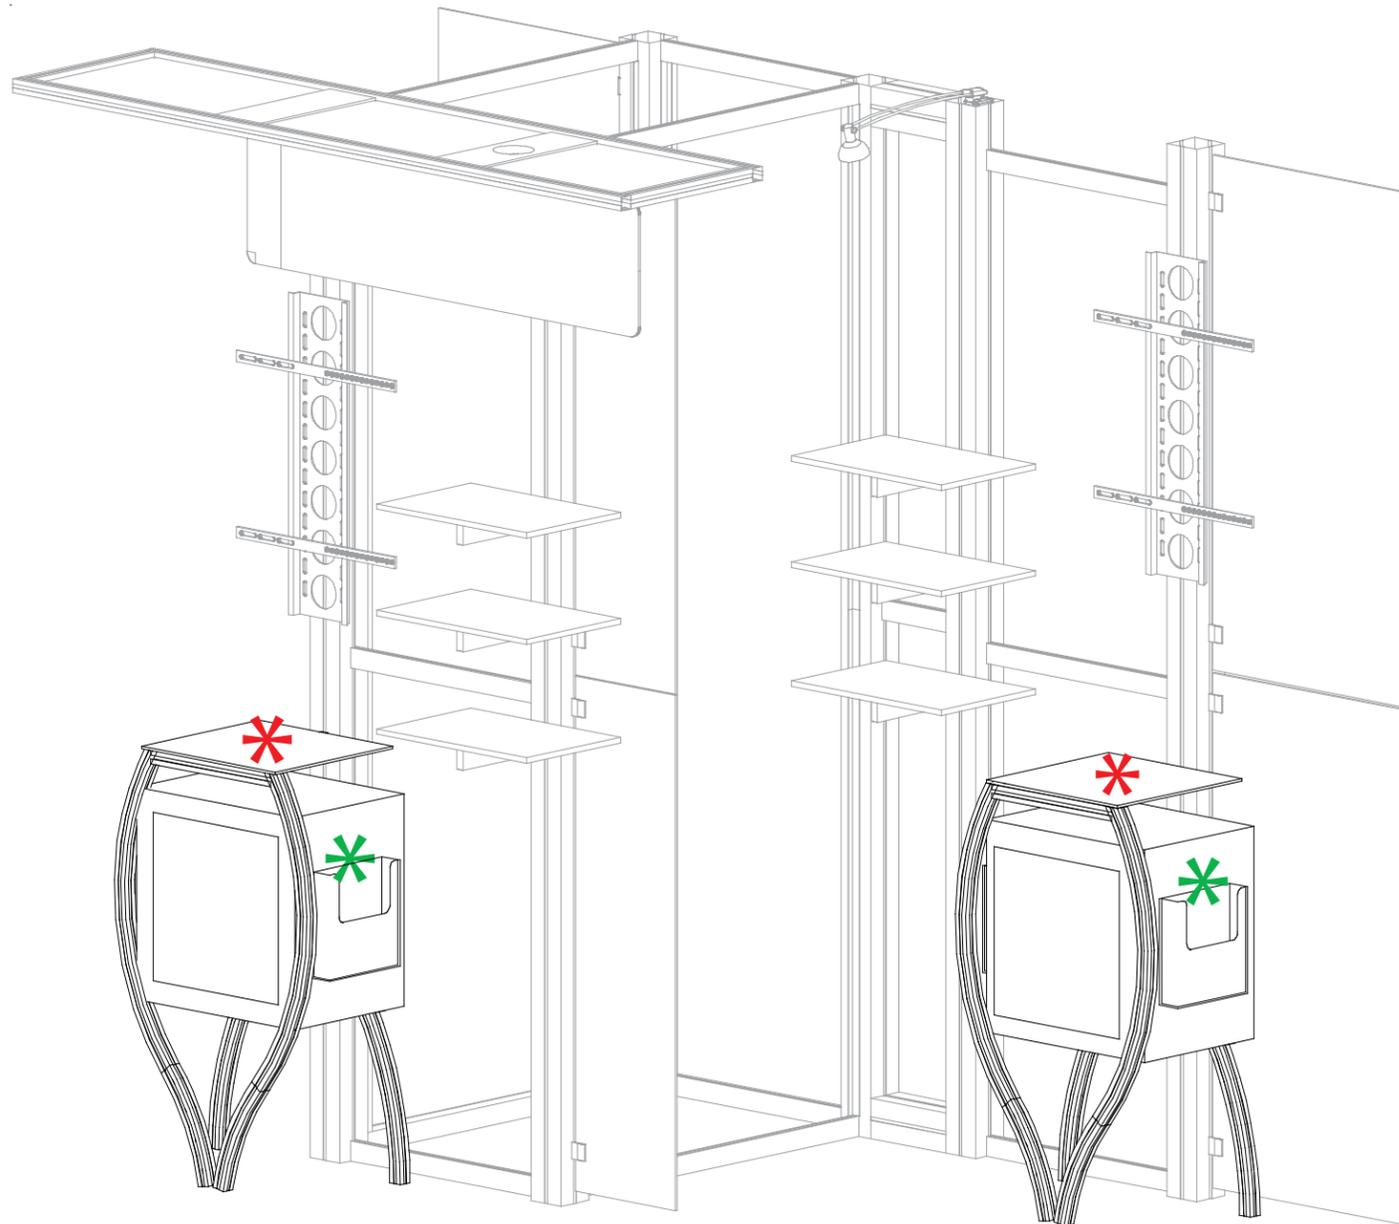


Attach pedestal to mounting connectors in backwall with screwcaps.

Setup Instructions:


- 1) Attach counter top to front horizontal using screws as shown in detail.
- 2) Attach literature pockets to Velcro on sides of pedestal as shown.

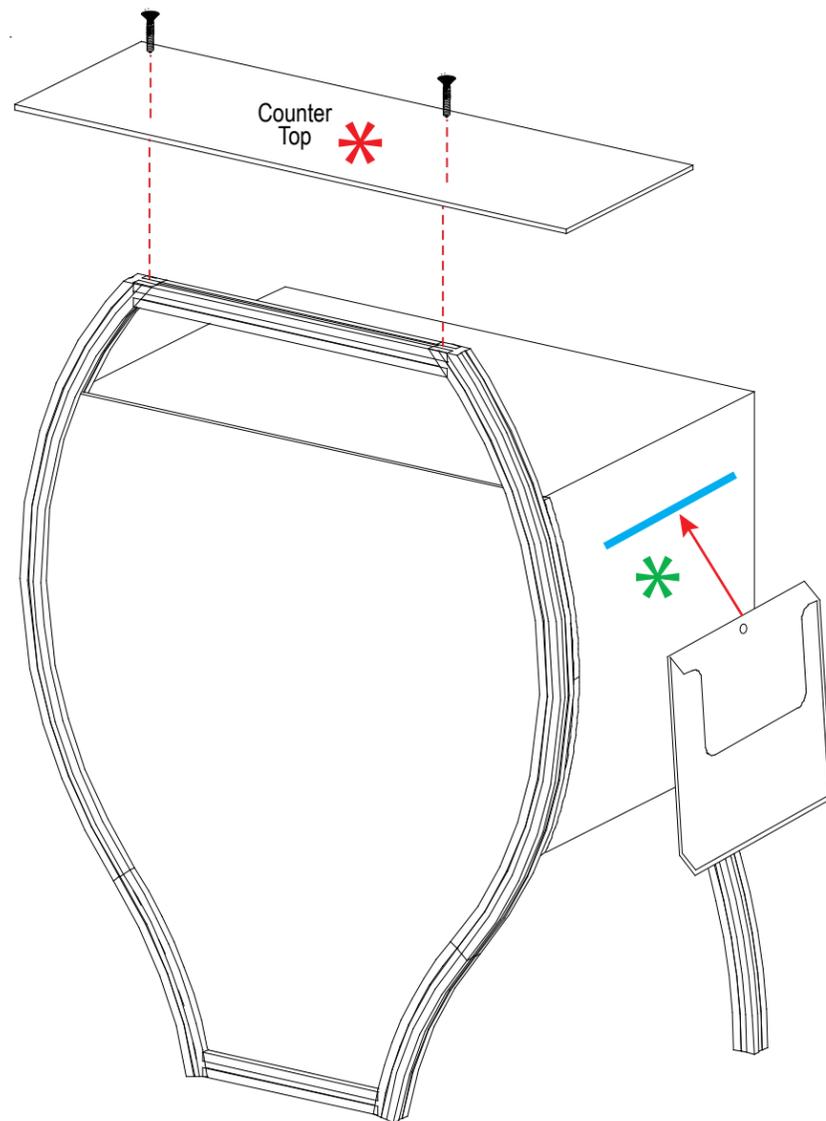


**\* Literature Pocket Attachment Detail**

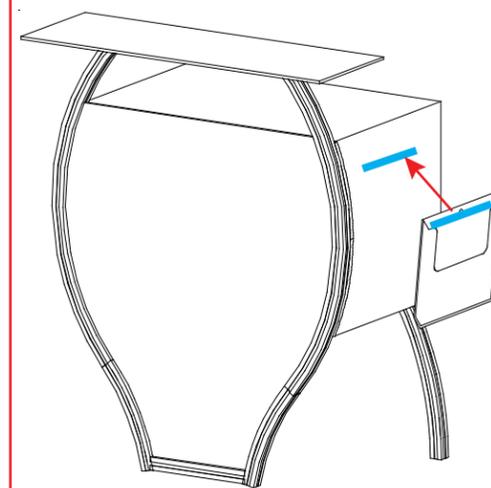

Attach literature pockets with Velcro to sides of pedestal.

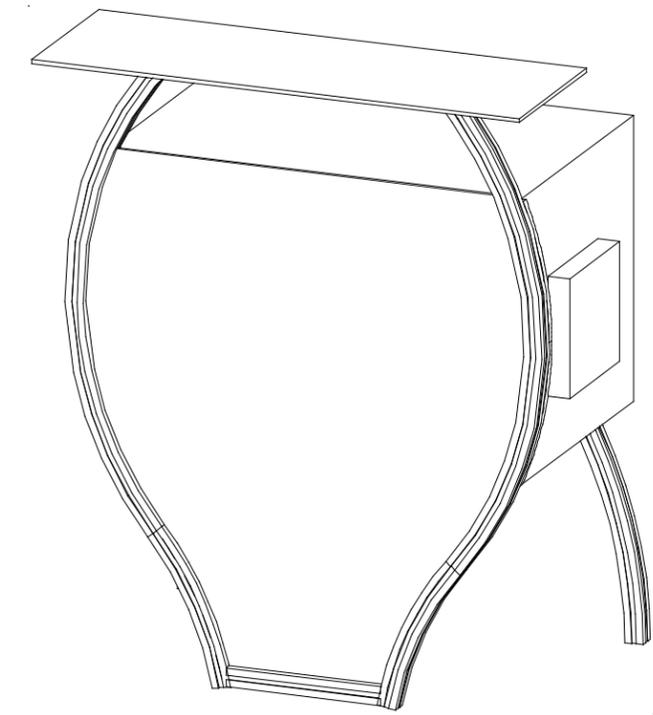

**\* Counter Top Attachment Detail**

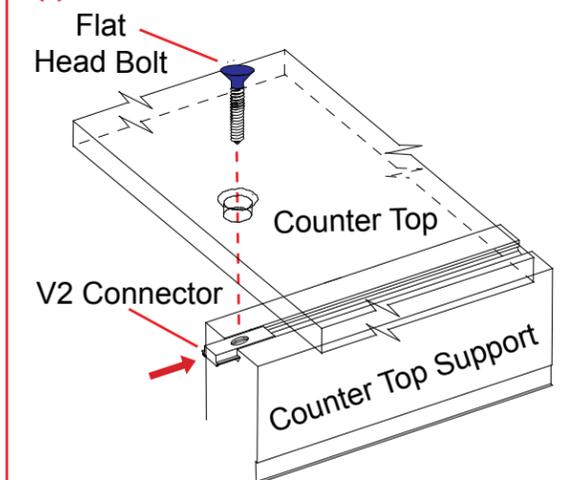

Slide V2 connector into groove of shelf support. Bolt through hole of shelf into threaded hole of V2 connector. Twist Bolt to secure counter top in place.