



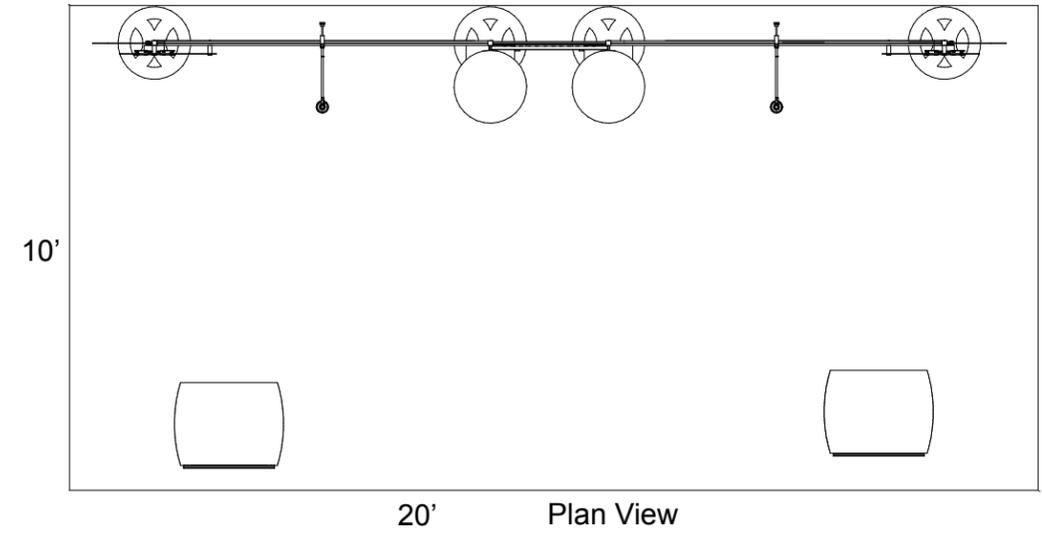


866.652.2100

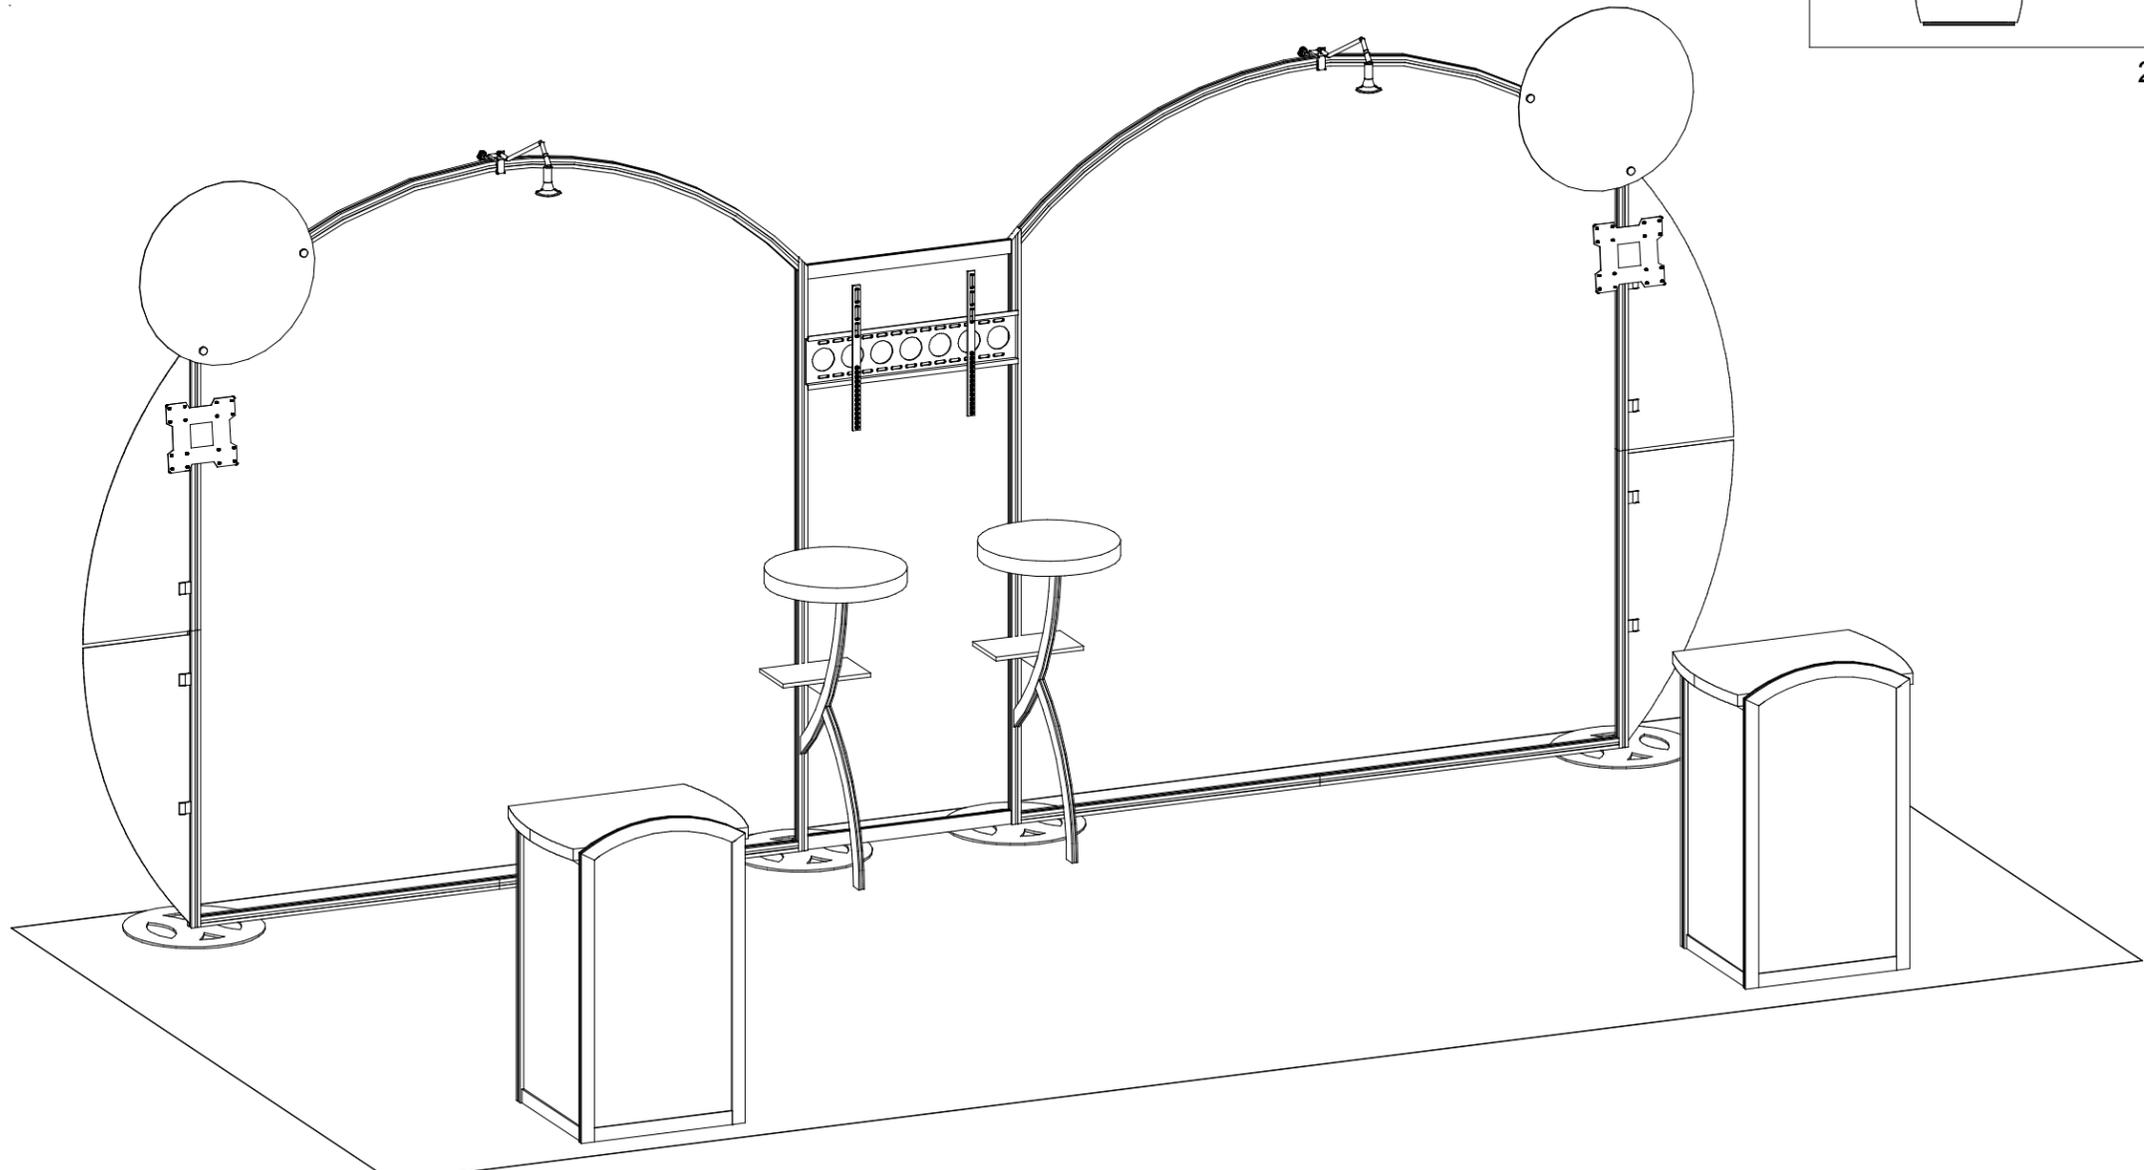


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

## General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

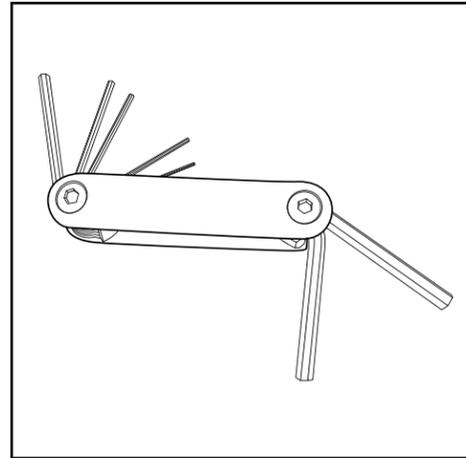

Hex Tool - Essential for Assembly

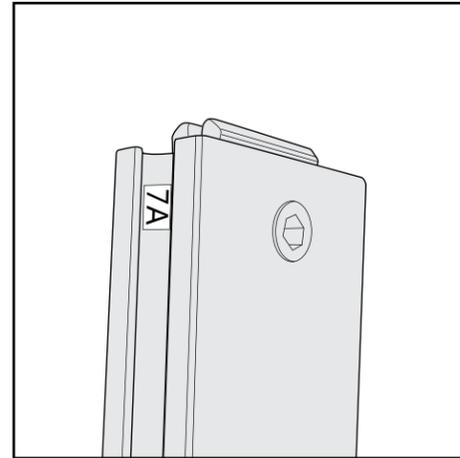

Part Identification - Numbering




# WARNING

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly

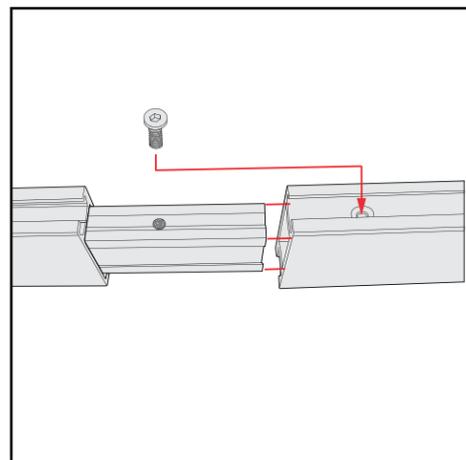

Spline Connection

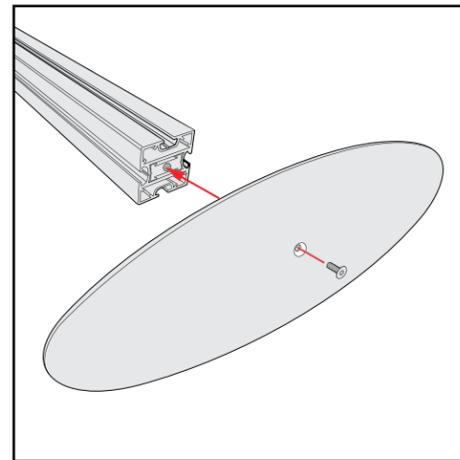


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED

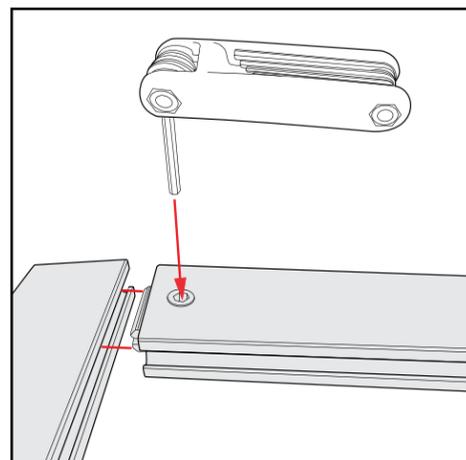

Extrusion & Lock Connection





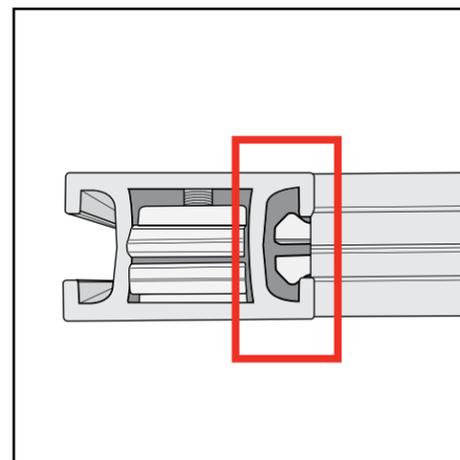


Engaged Lock



ALL CONNECTIONS MUST  
BE TIGHTLY SECURED


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

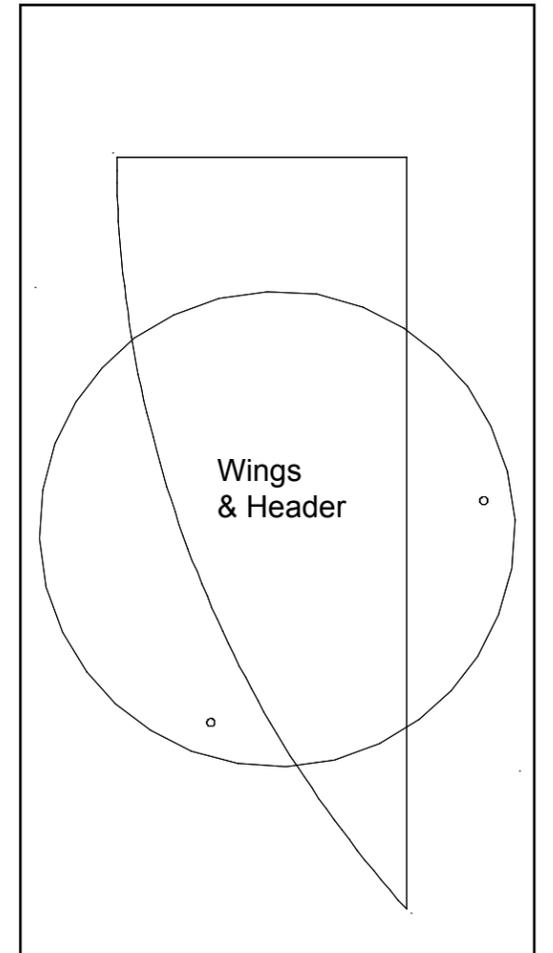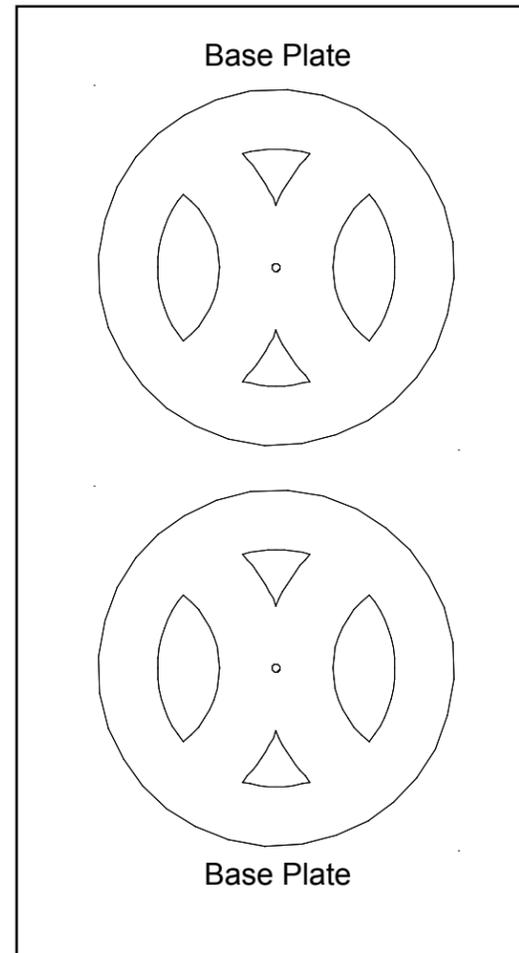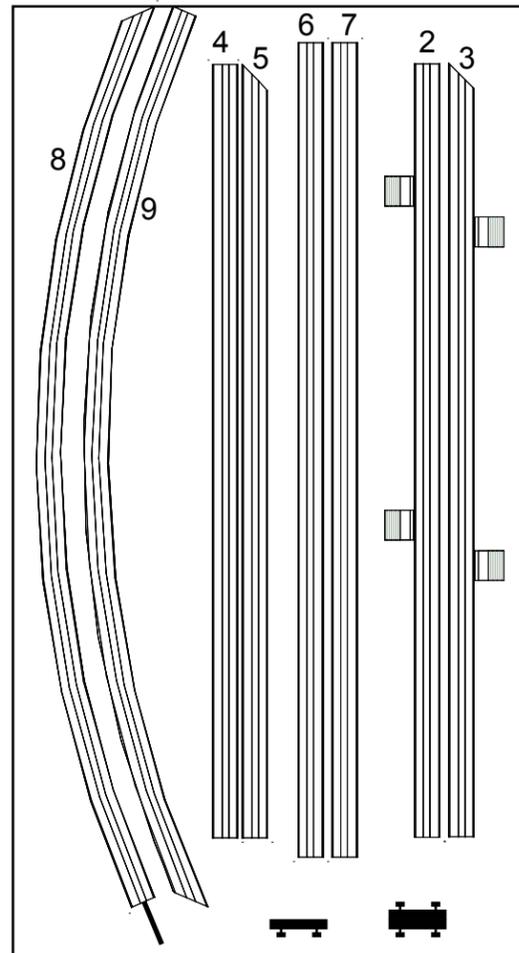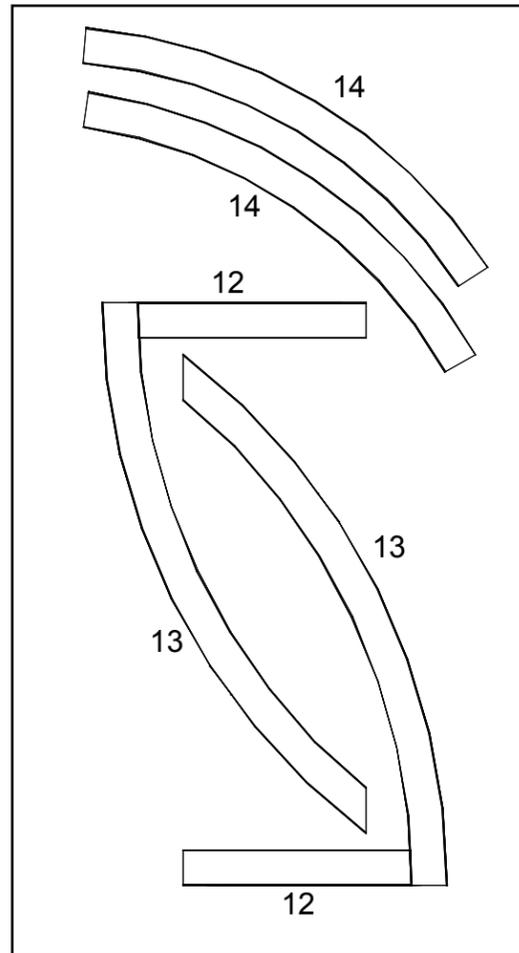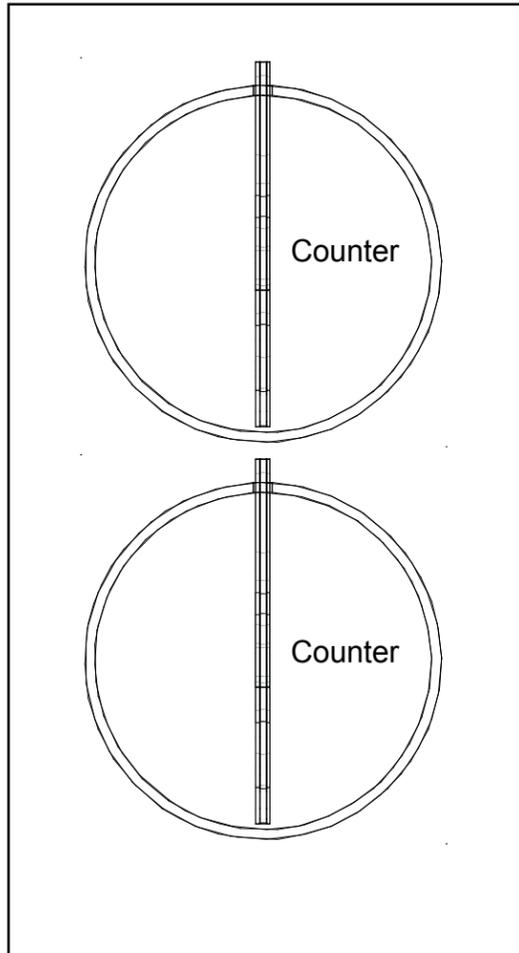


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Case 2


866.652.2100

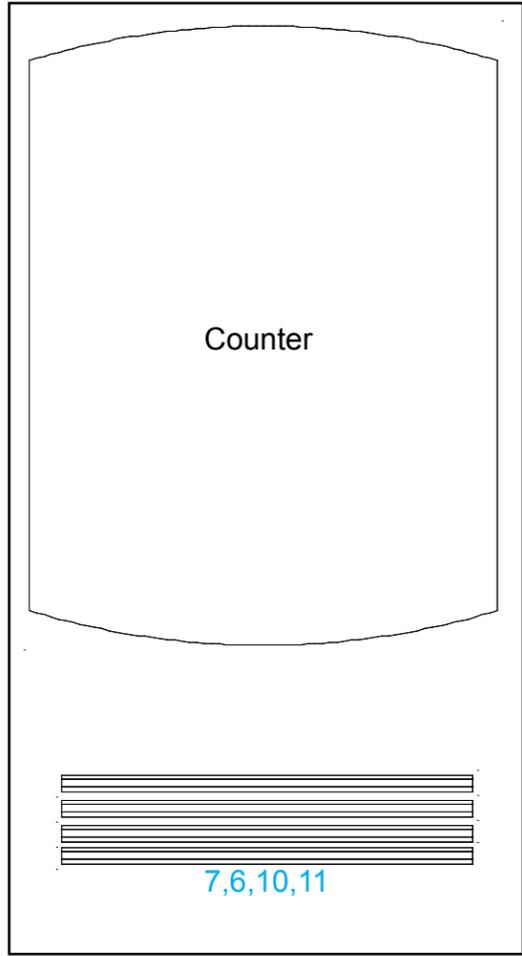


Level 1 (Bottom Layer)

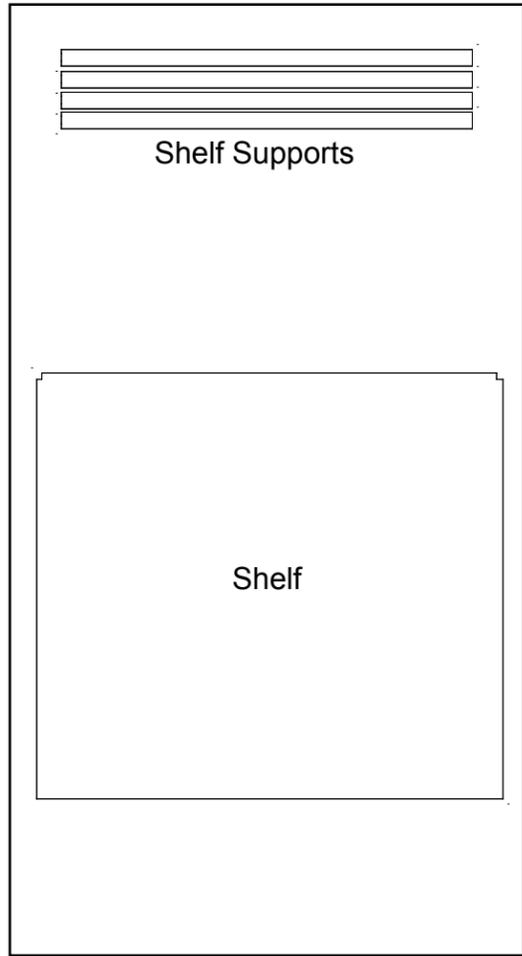


Level 2

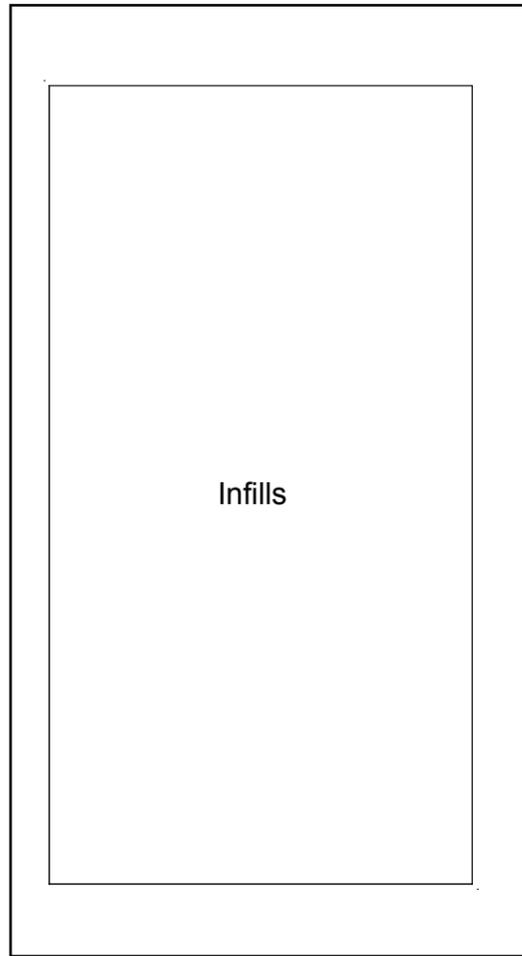



Level 3

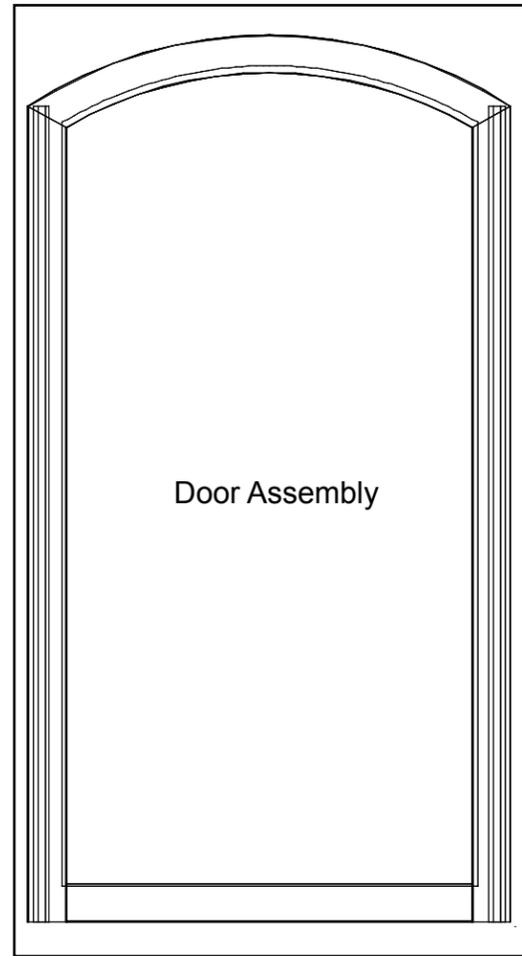

Level 4

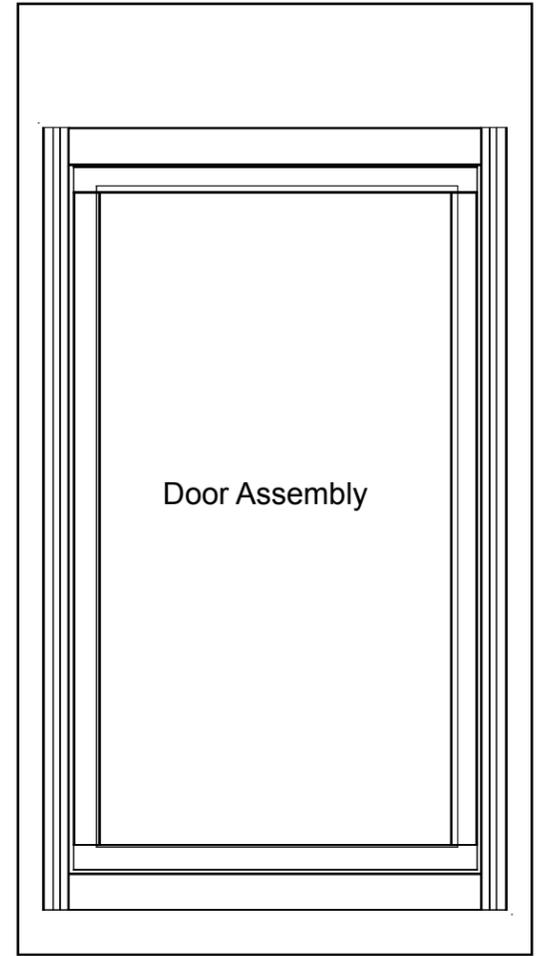

Level 5

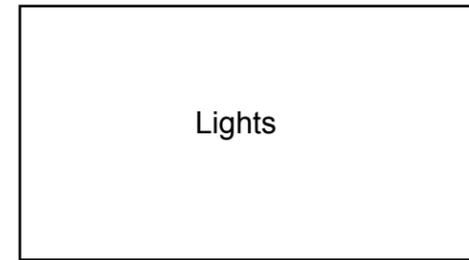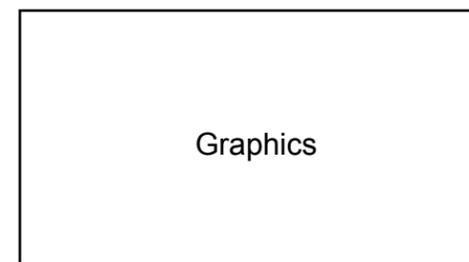


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Item	Qty.	Description
1A	4	Base Plates
2/2a	1/1	39" Vertical extrusion
3/3a	1/1	39" Vertical extrusion top left outside cut
4/4a	1/1	39" Vertical extrusion
5/5a	1/1	39" Vertical extrusion top right outside cut
6/6a	1/1	41" Horizontal extrusion
7/7a	1/1	41" Horizontal extrusion
8/8a	1/1	41" Top left curved extrusion
9/9a	1/1	41" Top right curved extrusion
10/10a	1/1	28" Horizontal extrusion
11	1	28" Horizontal extrusion

- Steps:
- 1) Attach base plates [1A] to lower verticals [2,2a,4 & 4a].
  - 2) Connect upper verticals [3,3a,5 & 5a] with connection bars [b] to lower verticals.
  - 3) Connect horizontals [6 & 7] [6a & 7a] with connection bar [a].
  - 4) Connect horizontals [10,10a & 11] between verticals.
  - 5) Connect curved extrusions [8 & 9] [8a & 9a] with connectors [a].
  - 6) Connect curved assemblies [8/9] [8a/9a] between verticals.
  - 7) Attach Velcro Graphic to back of frame as shown.

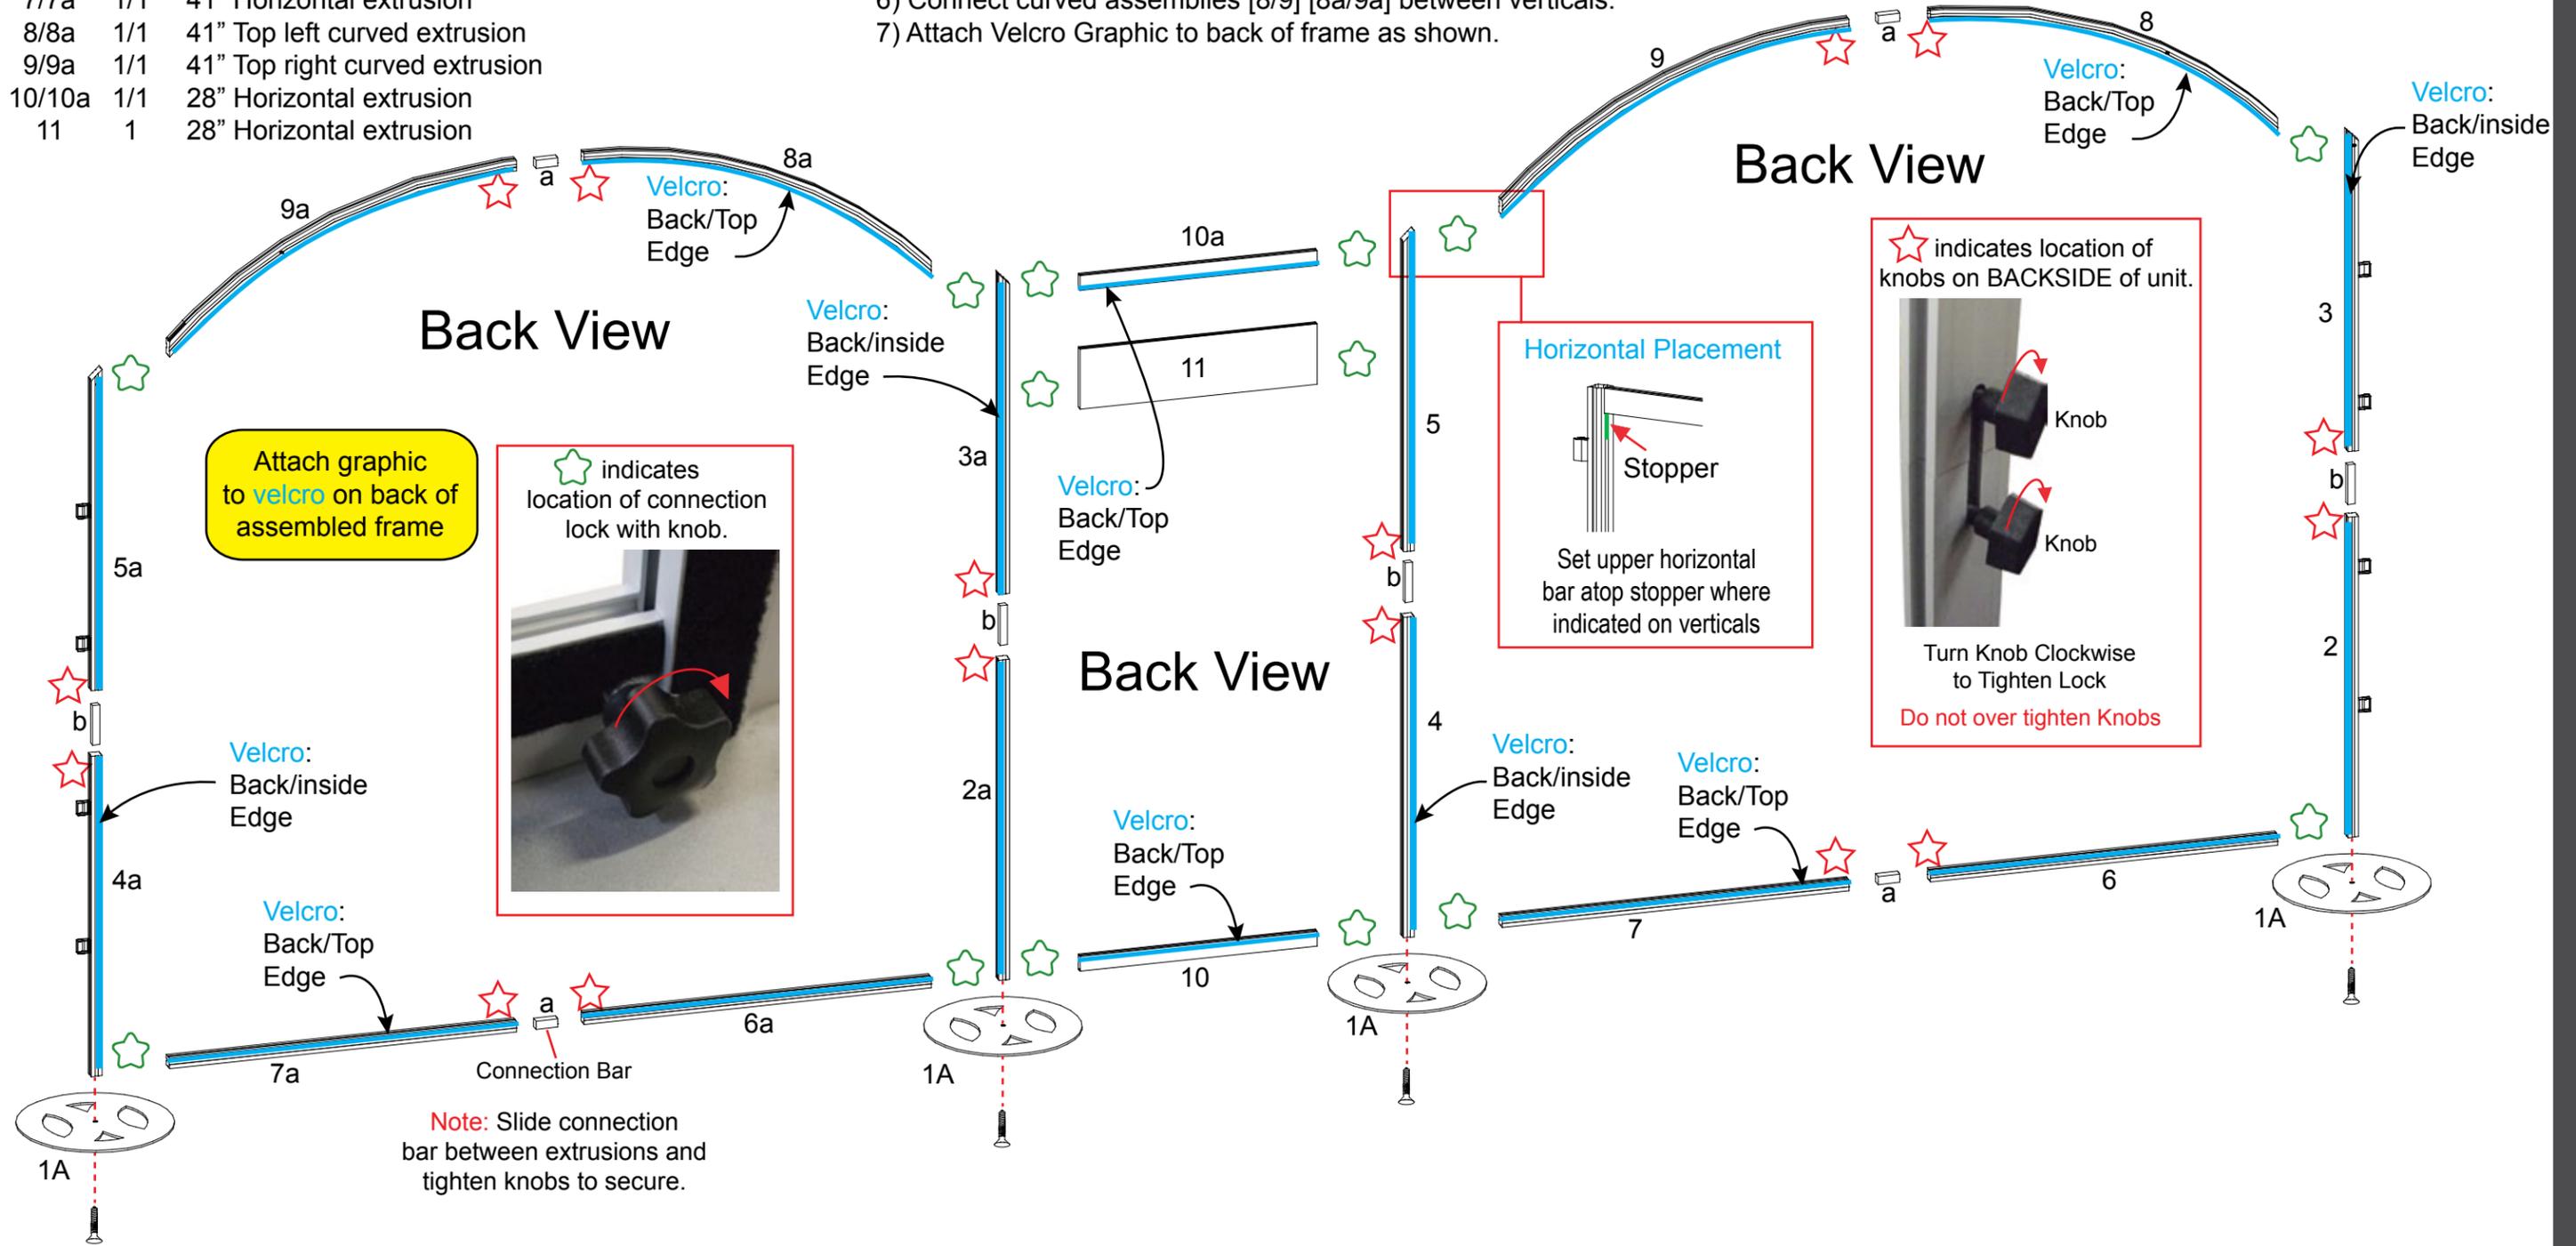

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

866.652.2100

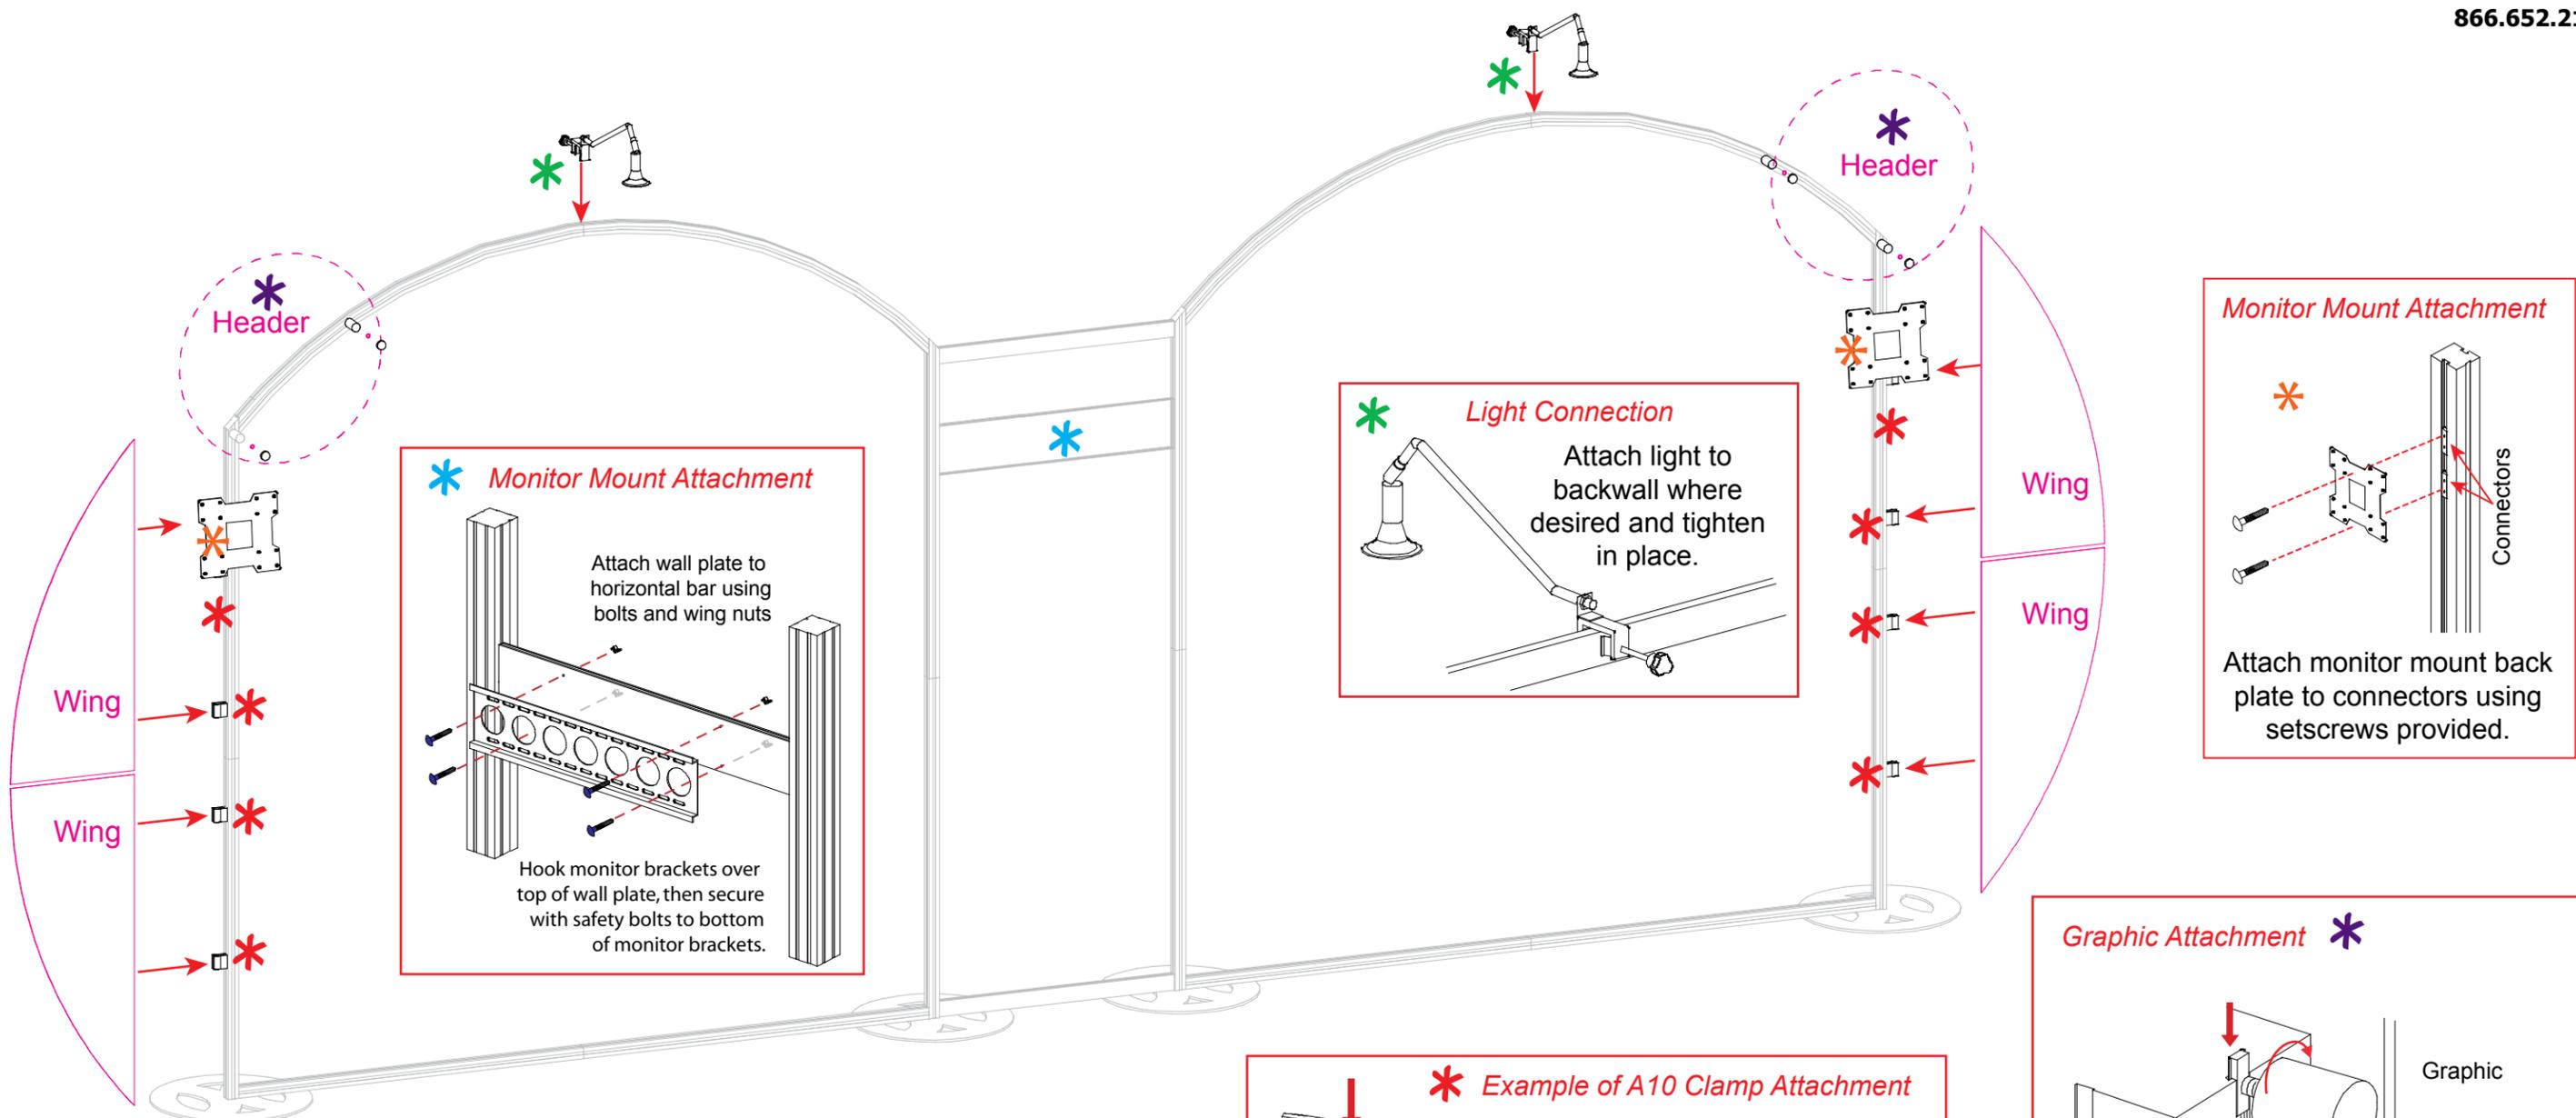

**\* Monitor Mount Attachment**

Attach wall plate to horizontal bar using bolts and wing nuts

Hook monitor brackets over top of wall plate, then secure with safety bolts to bottom of monitor brackets.

**\* Light Connection**

Attach light to backwall where desired and tighten in place.

**Monitor Mount Attachment**

Connectors

Attach monitor mount back plate to connectors using setscrews provided.

**Graphic Attachment \***

Graphic

Standoff Barrel

Cap

Slide connector on back of standoff barrels into groove of extrusion and twist to secure in place. Secure graphic to standoffs using screw caps.

**\* Example of A10 Clamp Attachment**

When desired location is found, tighten set screw to secure.

Slide connector on back of A10 clamp into groove of extrusion.

Tighten knob to secure shelf/wing in place.

- Steps:
- 1) Attach Wings to A10's as shown in *Example of A10 Clamp Attachment* detail.
  - 2) Attach header graphic as shown in *Graphic Attachment* detail.
  - 3) Connect lights as shown in *Light Connection* detail.
  - 4) Connect monitors as shown in *Monitor Mount Attachment* details.

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

866.652.2100

Item	Qty.	Description
12	2	11.5" Horizontal Extrusion
13	2	26.75" Curved Extrusion
14	2	20.3" Curved Extrusion



Steps:

- 1) Attach Curved extrusions [13, 14].
- 2) Attach horizontal extrusion [12] to [13/14].
- 3) Connect [12/13/14] to vertical extrusion as shown.
- 4) Attach hostess shelves [15] between backwall vertical and curved vertical [13].
- 5) Screw in top plate to curved extrusion [13] as shown.
- 6) Connect counter top as shown in detail below.
- 7) Attach monitor mounts as shown in detail.


**Note:** Curved extrusion [13] and horizontal [14] stay assembled for shipping and packing.

**Counter Top Attachment**

Insert screws located on underside of counter into holes on flange plate and secure with wing nuts.

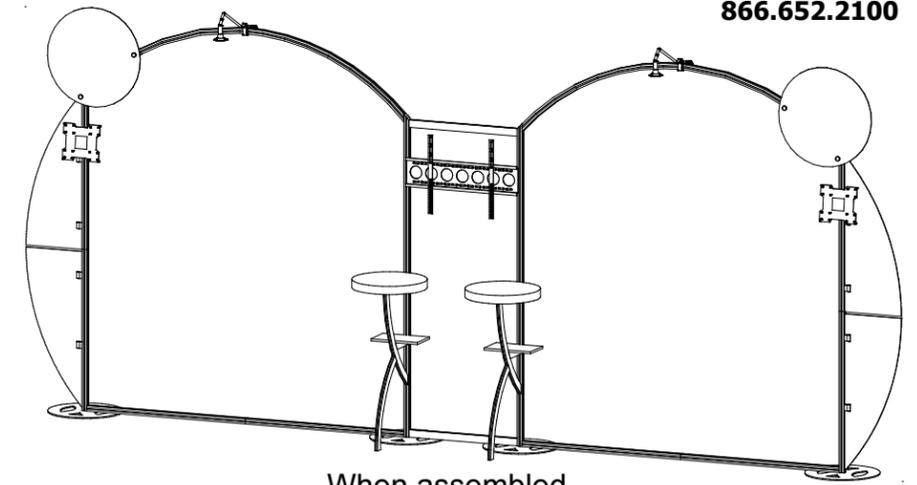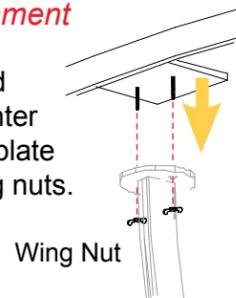

When assembled

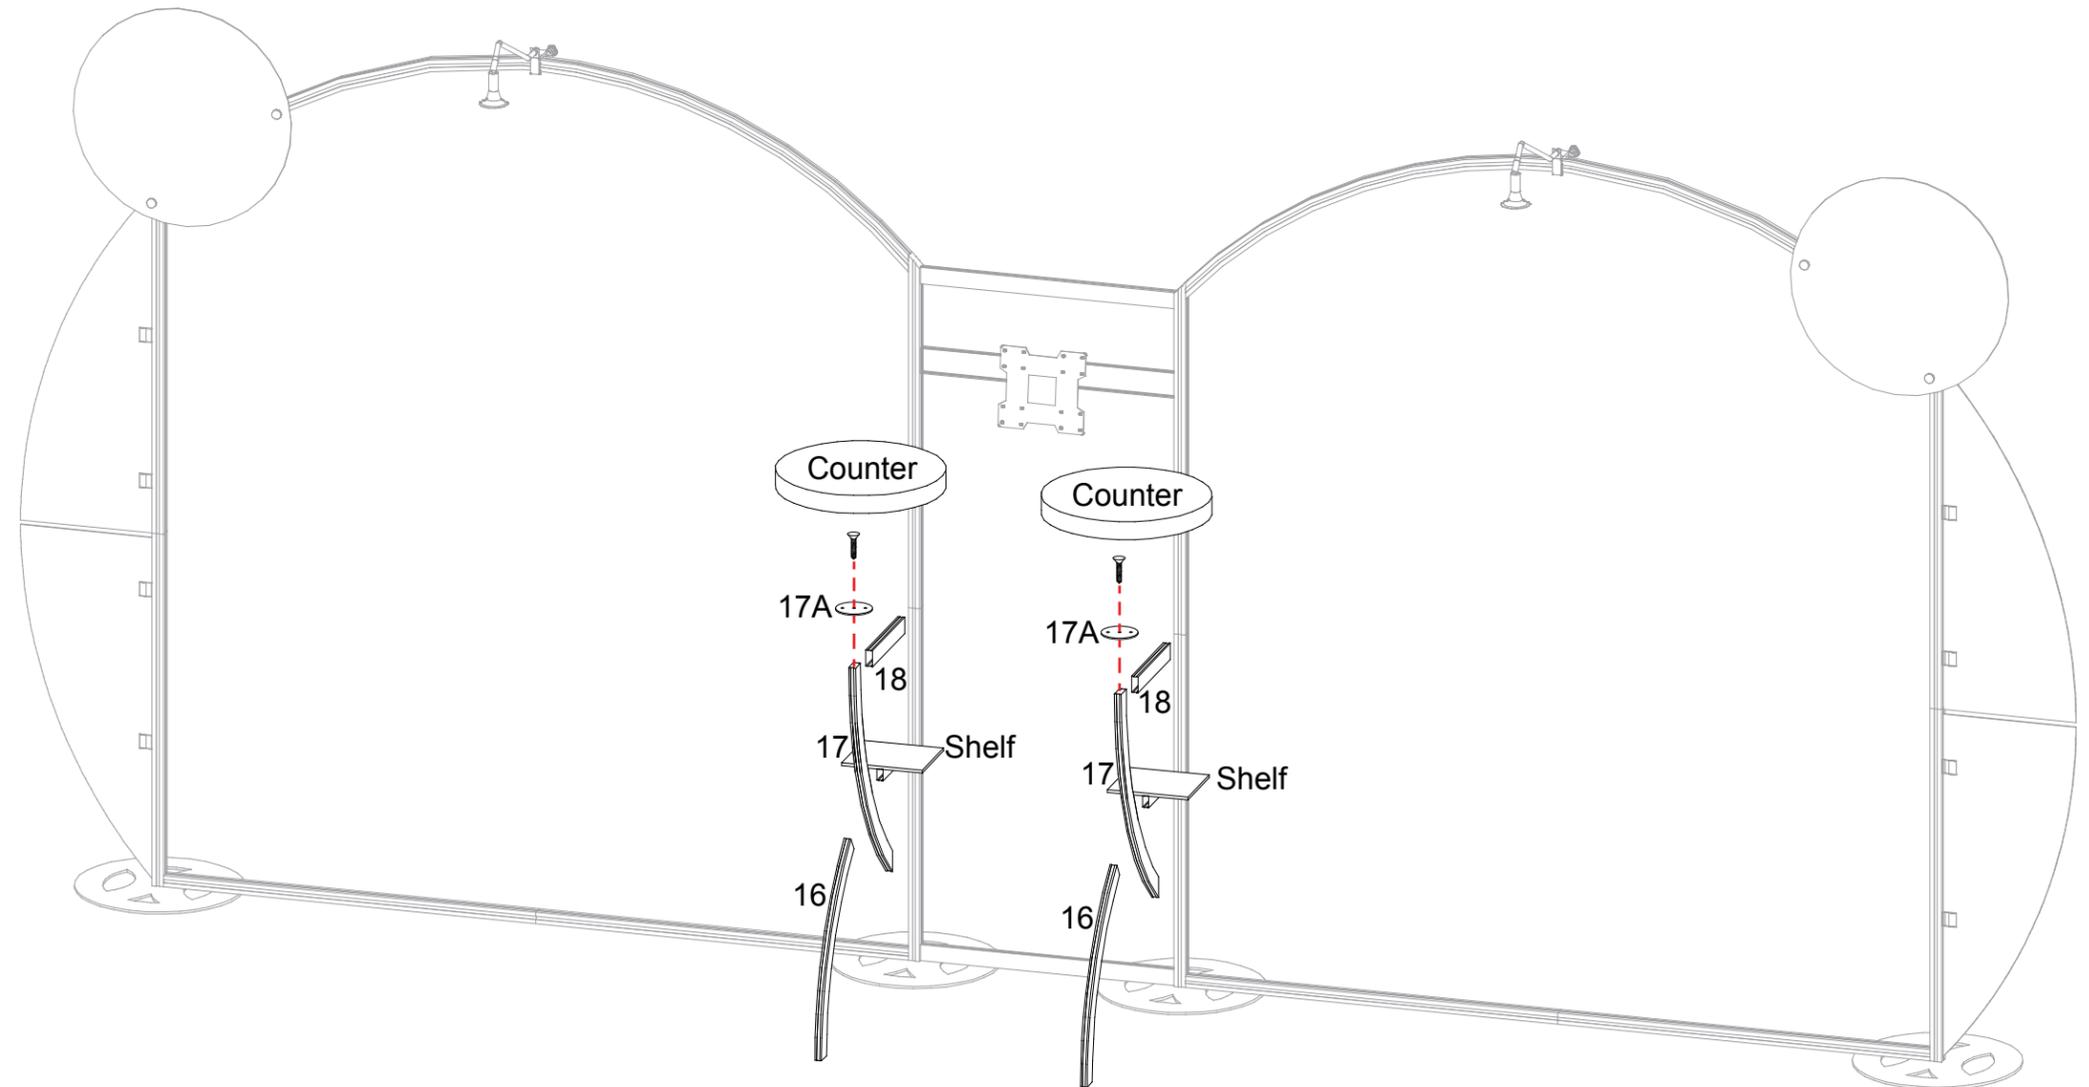







**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

866.652.2100


Item	Qty.	Description
1-2	1ea.	38" Vertical Extrusion w/ cut
3-4	1ea.	38" Vertical Extrusion
5	1	18.9" Horizontal Extrusion
6-7	1ea.	18" Horizontal Extrusion
8	1	20" Horizontal Extrusion
9	1	22.5" Curved Extrusion
10-11	1ea.	18" Horizontal Extrusion
12	1	20" Horizontal Extrusion

Steps:

- 1) Attach lower horizontals [5,6,7,8] between verticals [1,2,3,4] as shown.
- 2) Attach door using pins as shown in *Door Attachment* detail.
- 3) Insert infills as shown.
- 4) Insert [9,10,11,12] between verticals.
- 5) Place internal shelf on top of shelf supports.
- 6) Place counter on top.

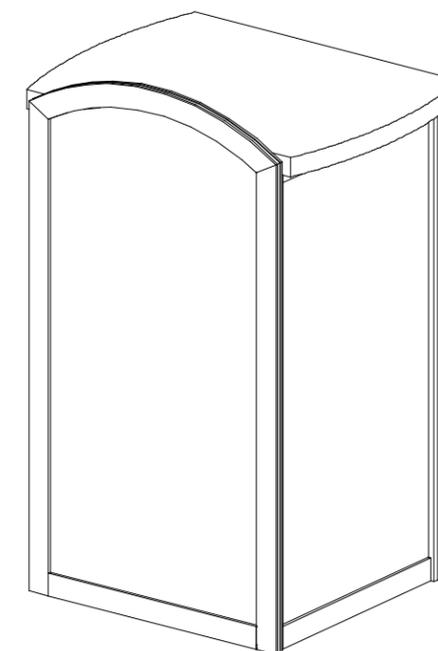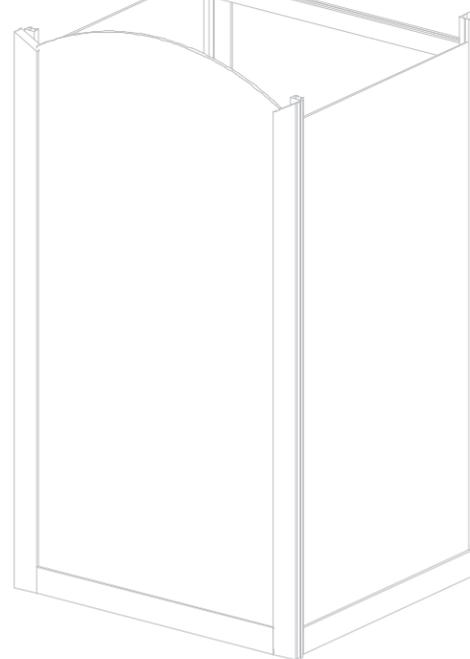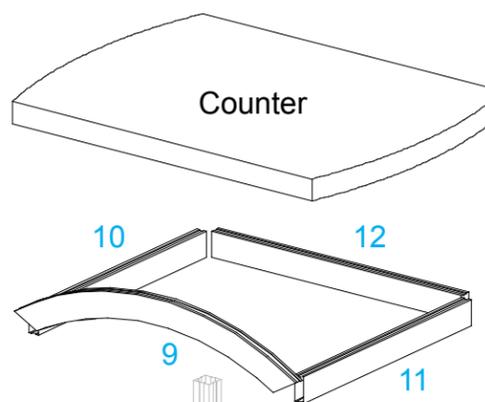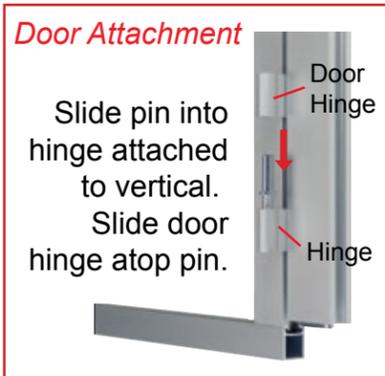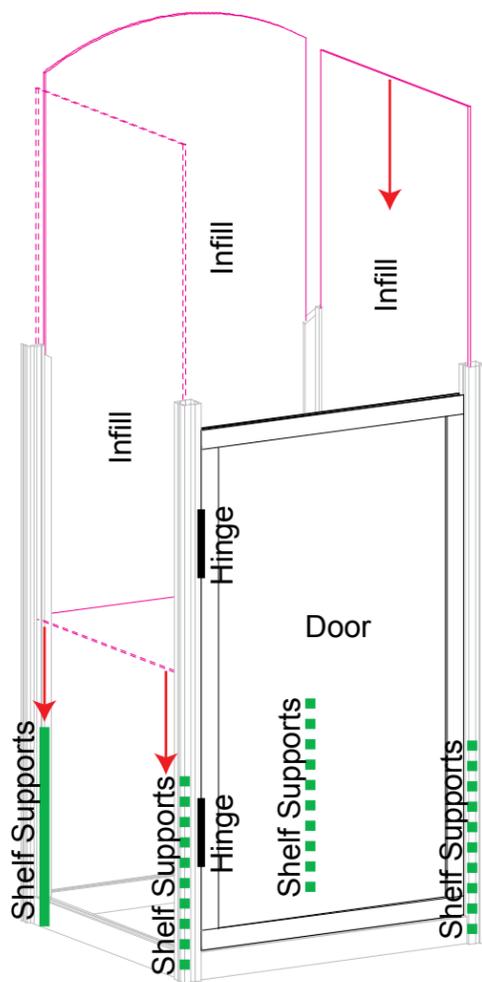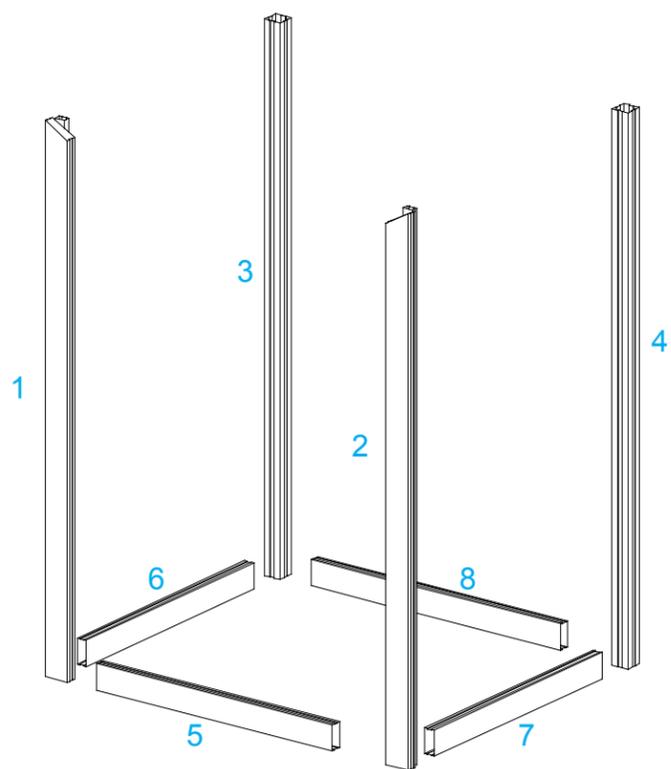

Front Side  
When assembled

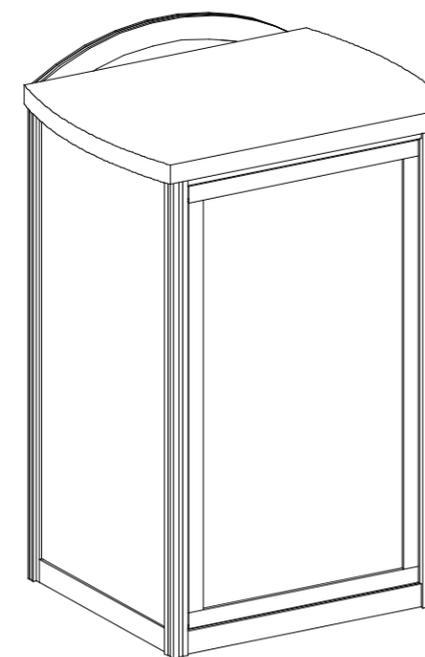

Back Side  
When assembled

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING