

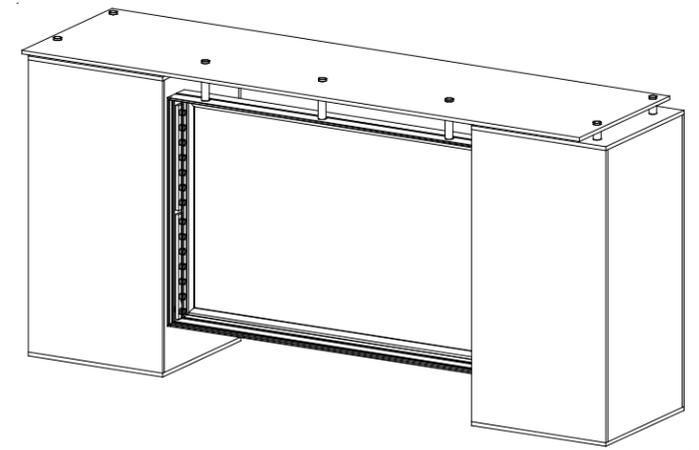
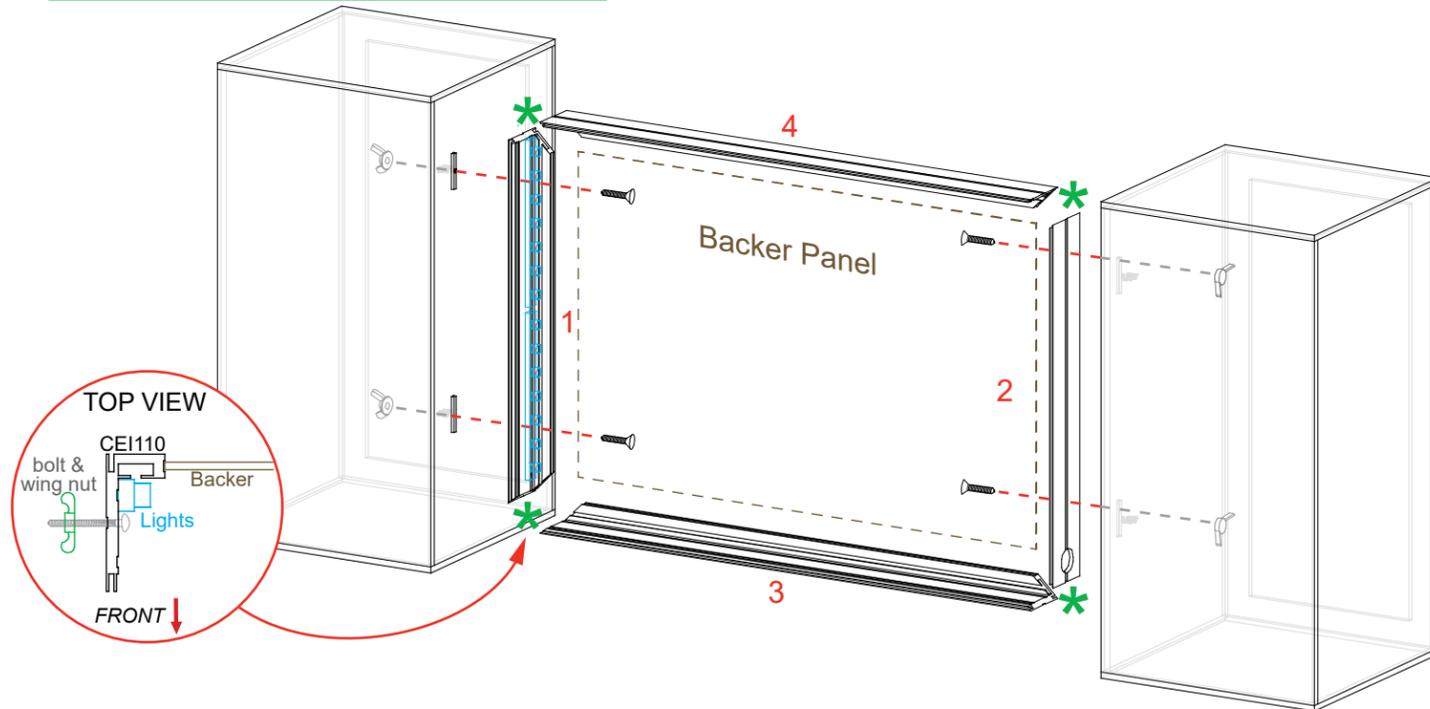
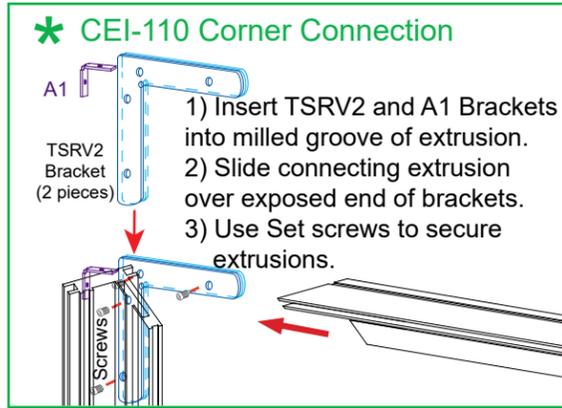
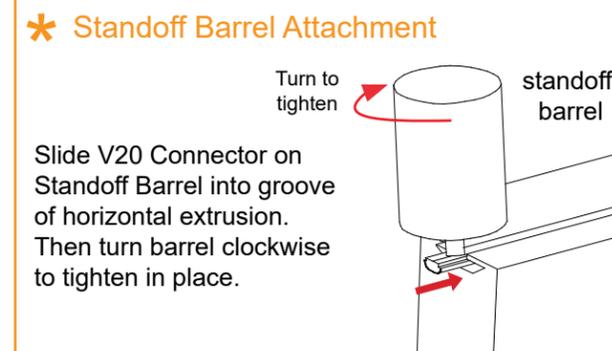


Item	Qty.	Description
1/2	1/1	30.5"h CEI110 Vertical Extrusion
3/4	1/1	46"w CEI110 Horizontal Extrusion

- Steps:**
- 1) Connect horizontals [3,4] between verticals [1,2], sliding backer panel between verticals. See **CEI-110 Corner Connection** detail.
  - 2) Attach left & right cabinets to frame assembly [1/2/3/4] using bolts & wing nuts.
  - 3) Install **Counter Top** to assembly using standoff barrels. See **Standoff Barrel Attachment** detail.
  - 4) Connect power cords to Supernova lights as shown.
  - 5) Apply SEG graphic to frame.
- Refer to the **SEG Installation general information page**.

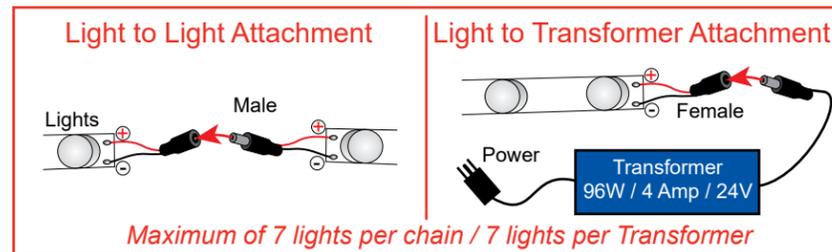

When assembled

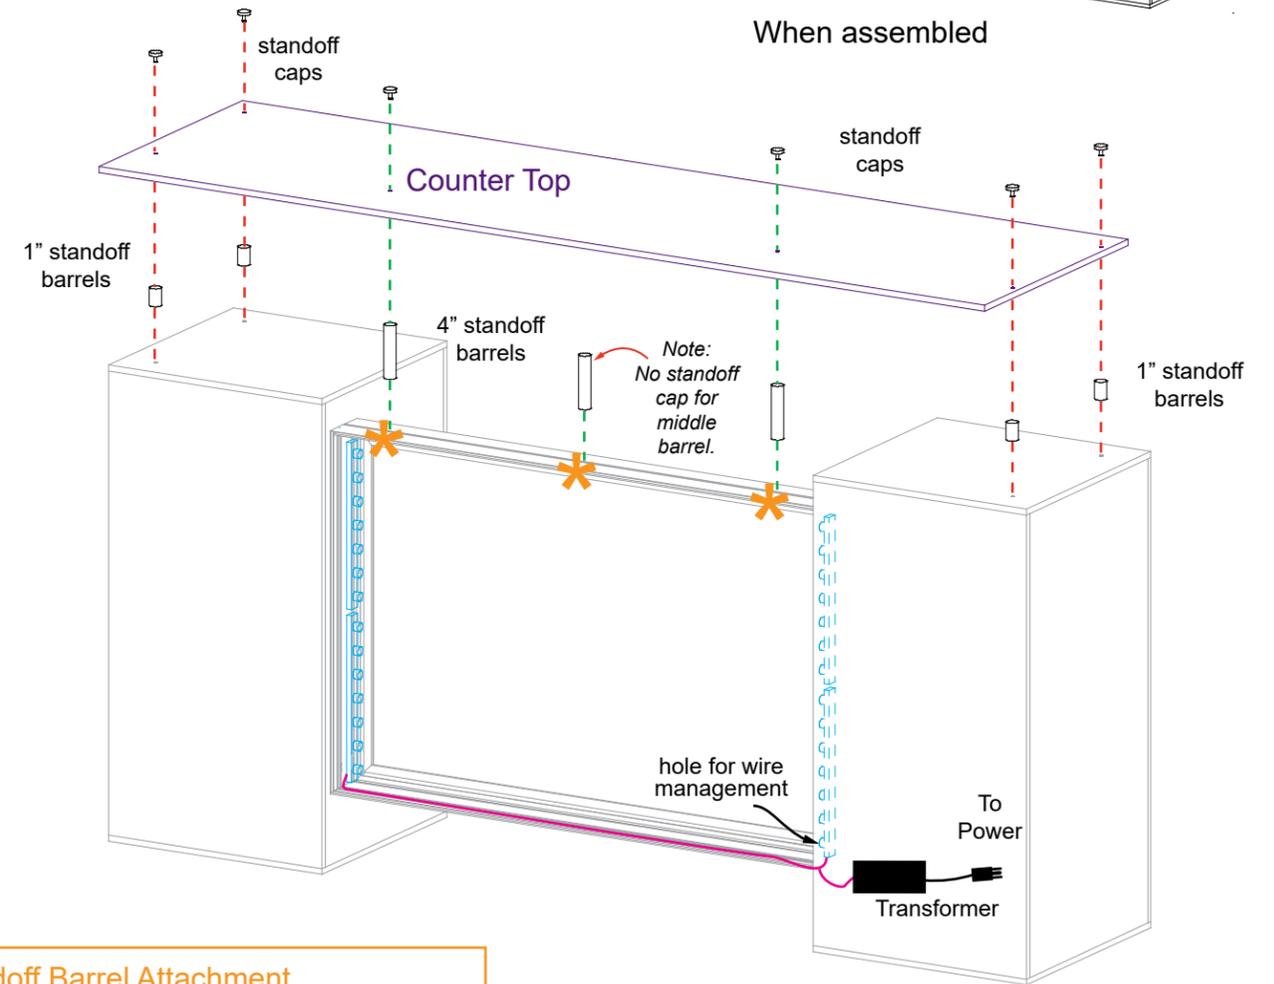

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

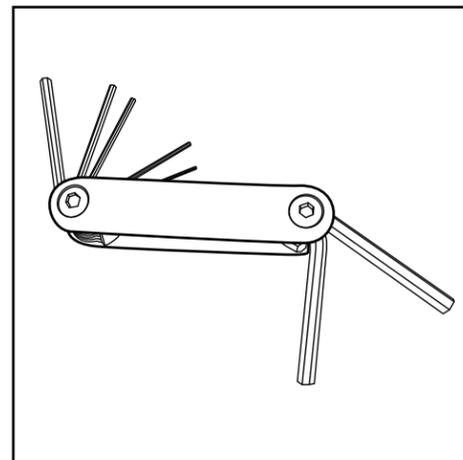


Hex Tool - Essential for Assembly

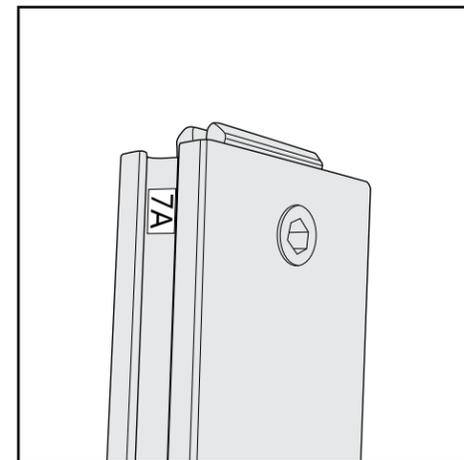


Part Identification - Numbering

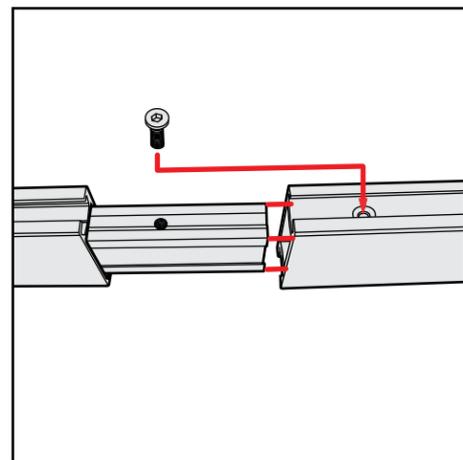


Spline Connection

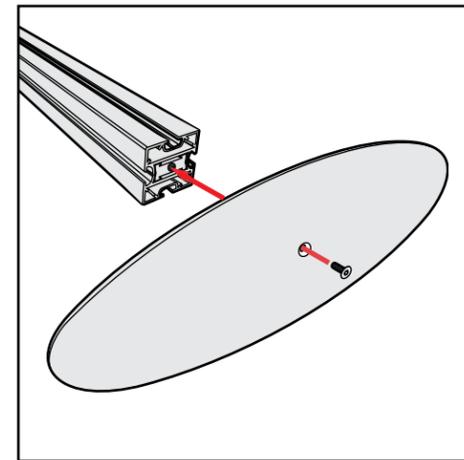

Base Plate & Extrusion Connection

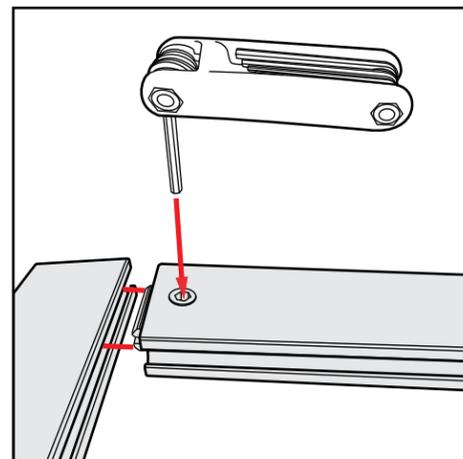

Extrusion & Lock Connection

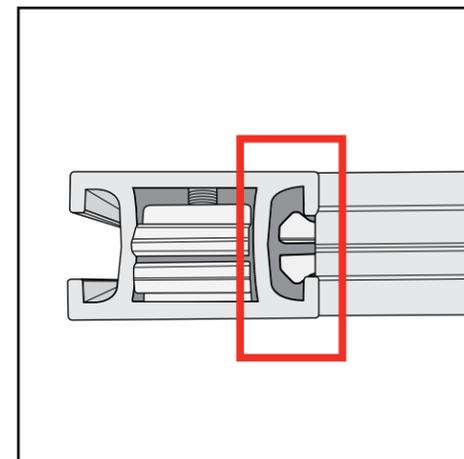

Engaged Lock



# WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED



ALL CONNECTIONS MUST  
BE TIGHTLY SECURED