
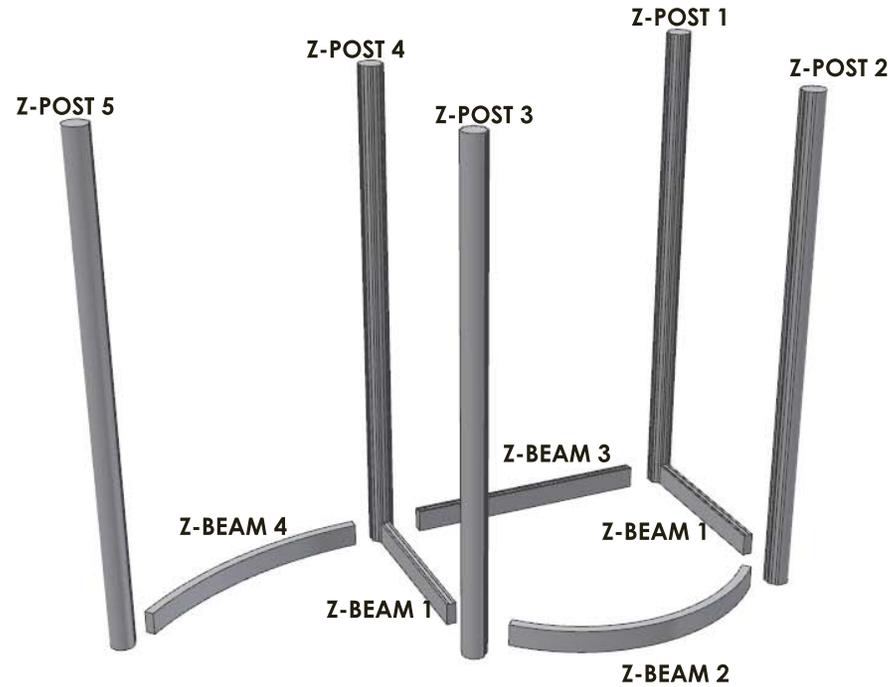


ZEPH PODIUM SETUP INSTRUCTIONS

Part #	Qty in Step	Description
Z-POST 1	1	40" Vertical Post (RSG 550) w/ Pre-Installed Door Stop
Z-POST 2	1	40" Vertical Post (RSG 550) w/ Shelf Support
Z-POST 3	1	40" Vertical Post (RSG 550) w/ Shelf Support
Z-POST 4	1	40" Vertical Post (RSG 550) w/ Pre-Installed Hinges
Z-POST 5	1	40" Vertical Post (RSG 560) w/ Shelf Support
Z-BEAM 1	2	14" Horizontal Beam w/ Locks
Z-BEAM 2	1	Formed Horizontal Beam w/ Locks
Z-BEAM 3	1	20" Horizontal Beam w/ Locks
Z-BEAM 4	1	Formed Horizontal w/Locks

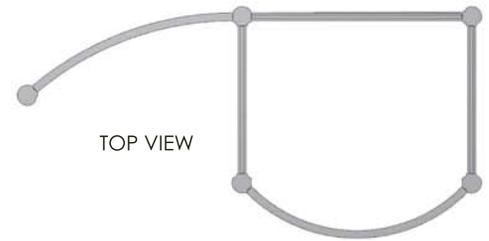


Steps

- 1 - Assemble Frame work as shown
- 2 - Face all Shelf Support brackets on Vertical Posts inward

STEP 1

Part #	Qty in Step	Description
Z-BEAM 1	2	14" Horizontal Beam w/ Locks
Z-BEAM 2	1	Formed Horizontal Beam w/ Locks
Z-BEAM 3	1	20" Horizontal Beam w/ Locks
Z-BEAM 4	1	Formed Horizontal Beam w/ Locks
INFILL 1	1	Front Curved Infill
INFILL 2	1	Left Side/Open Side Infill
INFILL 3	1	Right Side/Shelf Side

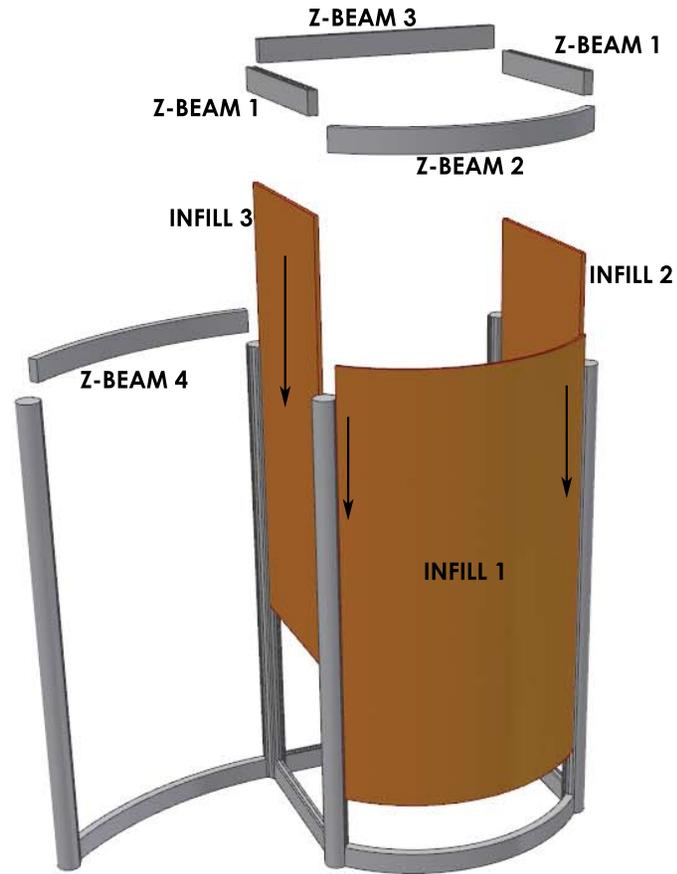

Steps

- 1 - Slide Infills in Place as show
- 2 - Place Beams and secure with Locks

NOTE: INFILL 3 has Pre-Drilled Holes for Shelf Shelf tabs, Insert once Infill has been placed

Part #	Qty in Step	Description
Z-BEAM 5	2	19.5625 INCH Horizontal Beam
Z-BEAM 6	1	33.6 INCH Vertical with Hinges
Z-BEAM 7	1	33.6 INCH Vertical with Door Lock
Door Infill	1	




DOOR ATTACHMENT

Steps

- 1 - Assemble Door and Slide in place on Provided Hinge Pins

STEP 3

Part #	Qty in Step
Counter Top	1
Interior Shelf	1
Exterior Shelf	2

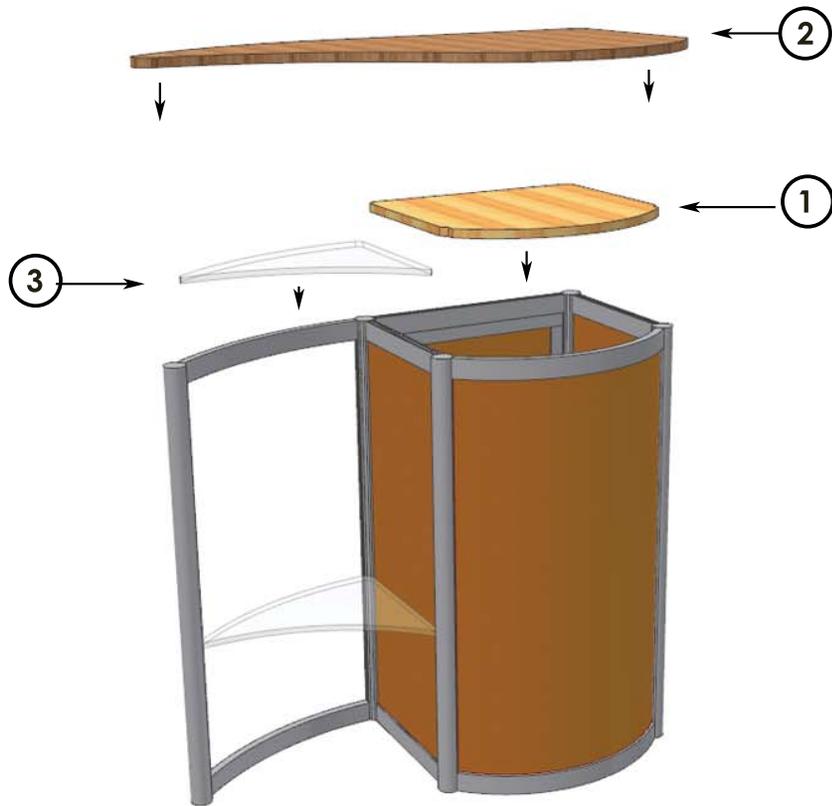

FINAL VIEW

Steps

- 1 - Set Interior Shelf in Place
- 2 - Place Counter Top and Secure with White taps in top of Vertical posts
- 3 - Place Exterior Shelves

