


Plan View

10'

10'

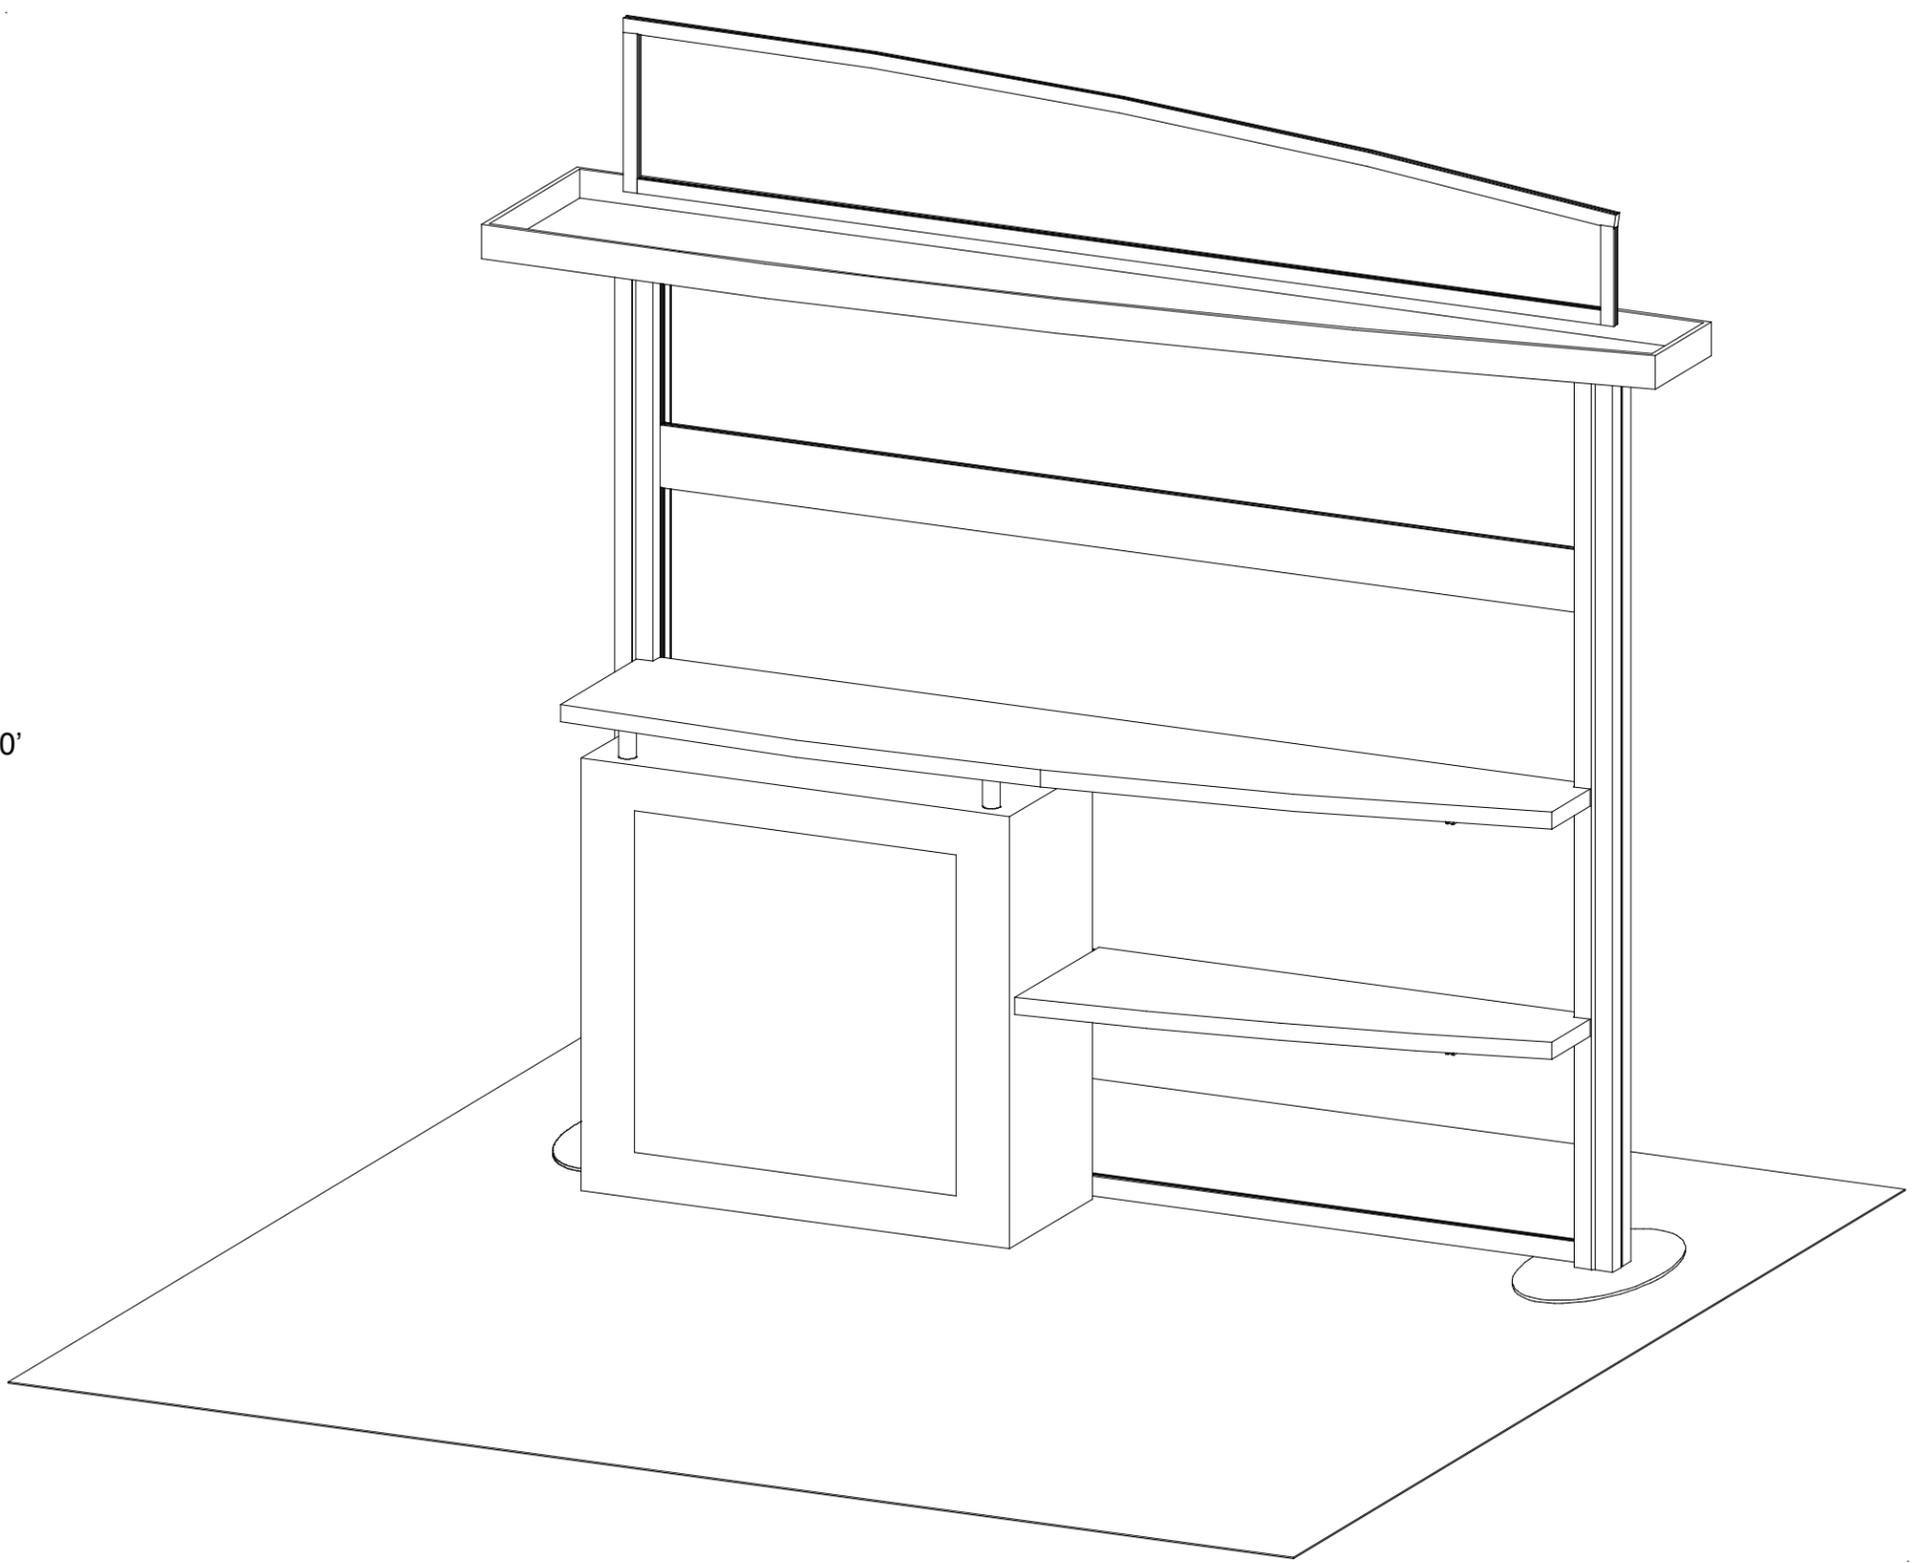

# **SETUP INSTRUCTIONS**

If you would like to tell us about your experience with your setup instructions please email us at [info@classicexhibits.com](mailto:info@classicexhibits.com)

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

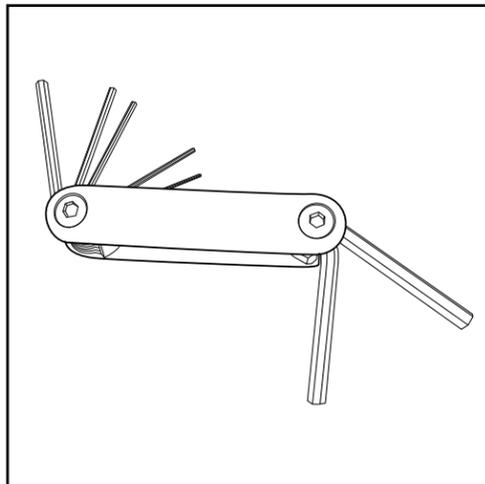


Hex Tool - Essential for Assembly

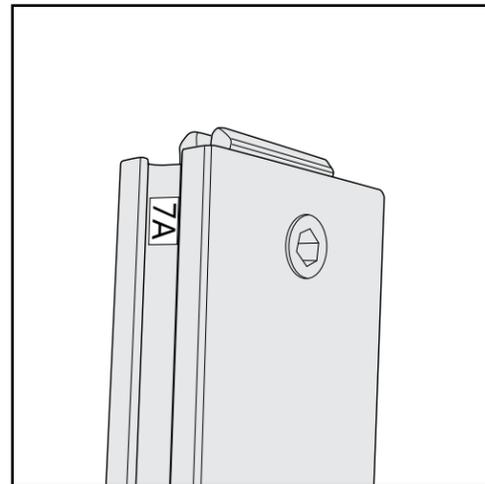


Part Identification - Numbering

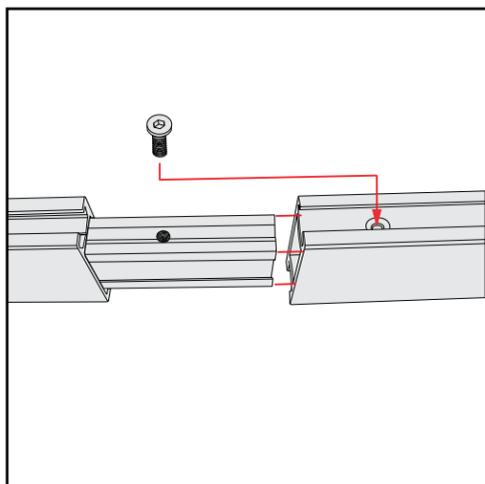


Spline Connection

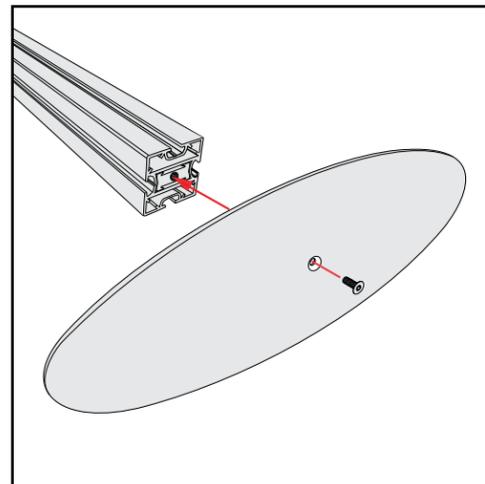

Base Plate & Extrusion Connection

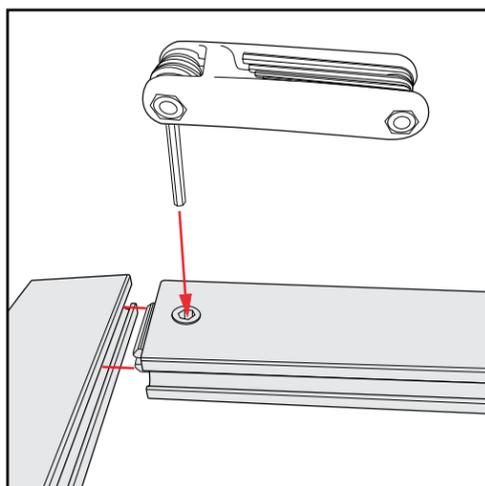

Extrusion & Lock Connection

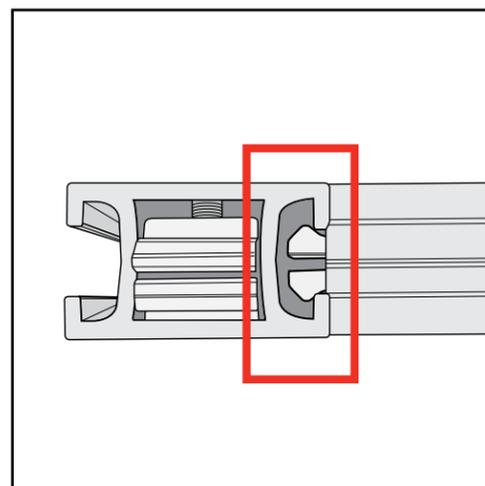

Engaged Lock



**WARNING**



DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED




ALL CONNECTIONS MUST  
BE TIGHTLY SECURED

Item	Qty.	Description
1/1A	1/1	Base Plate
2/2A	1/1	80"h Vertical Extrusion
3/3A	1/1	86"w Horizontal Extrusion w/ Velcro
4/4A	1/1	86"w Horizontal Extrusion
5	1	86"w Horizontal Mounting Plate

**Steps:**


- 1) Connect base plate [1] to the base of vertical [2]; connect base plate [1A] to the base of vertical [2A].
- 2) Attach horizontals [3], [3A], [4], [4], & [5] between verticals.

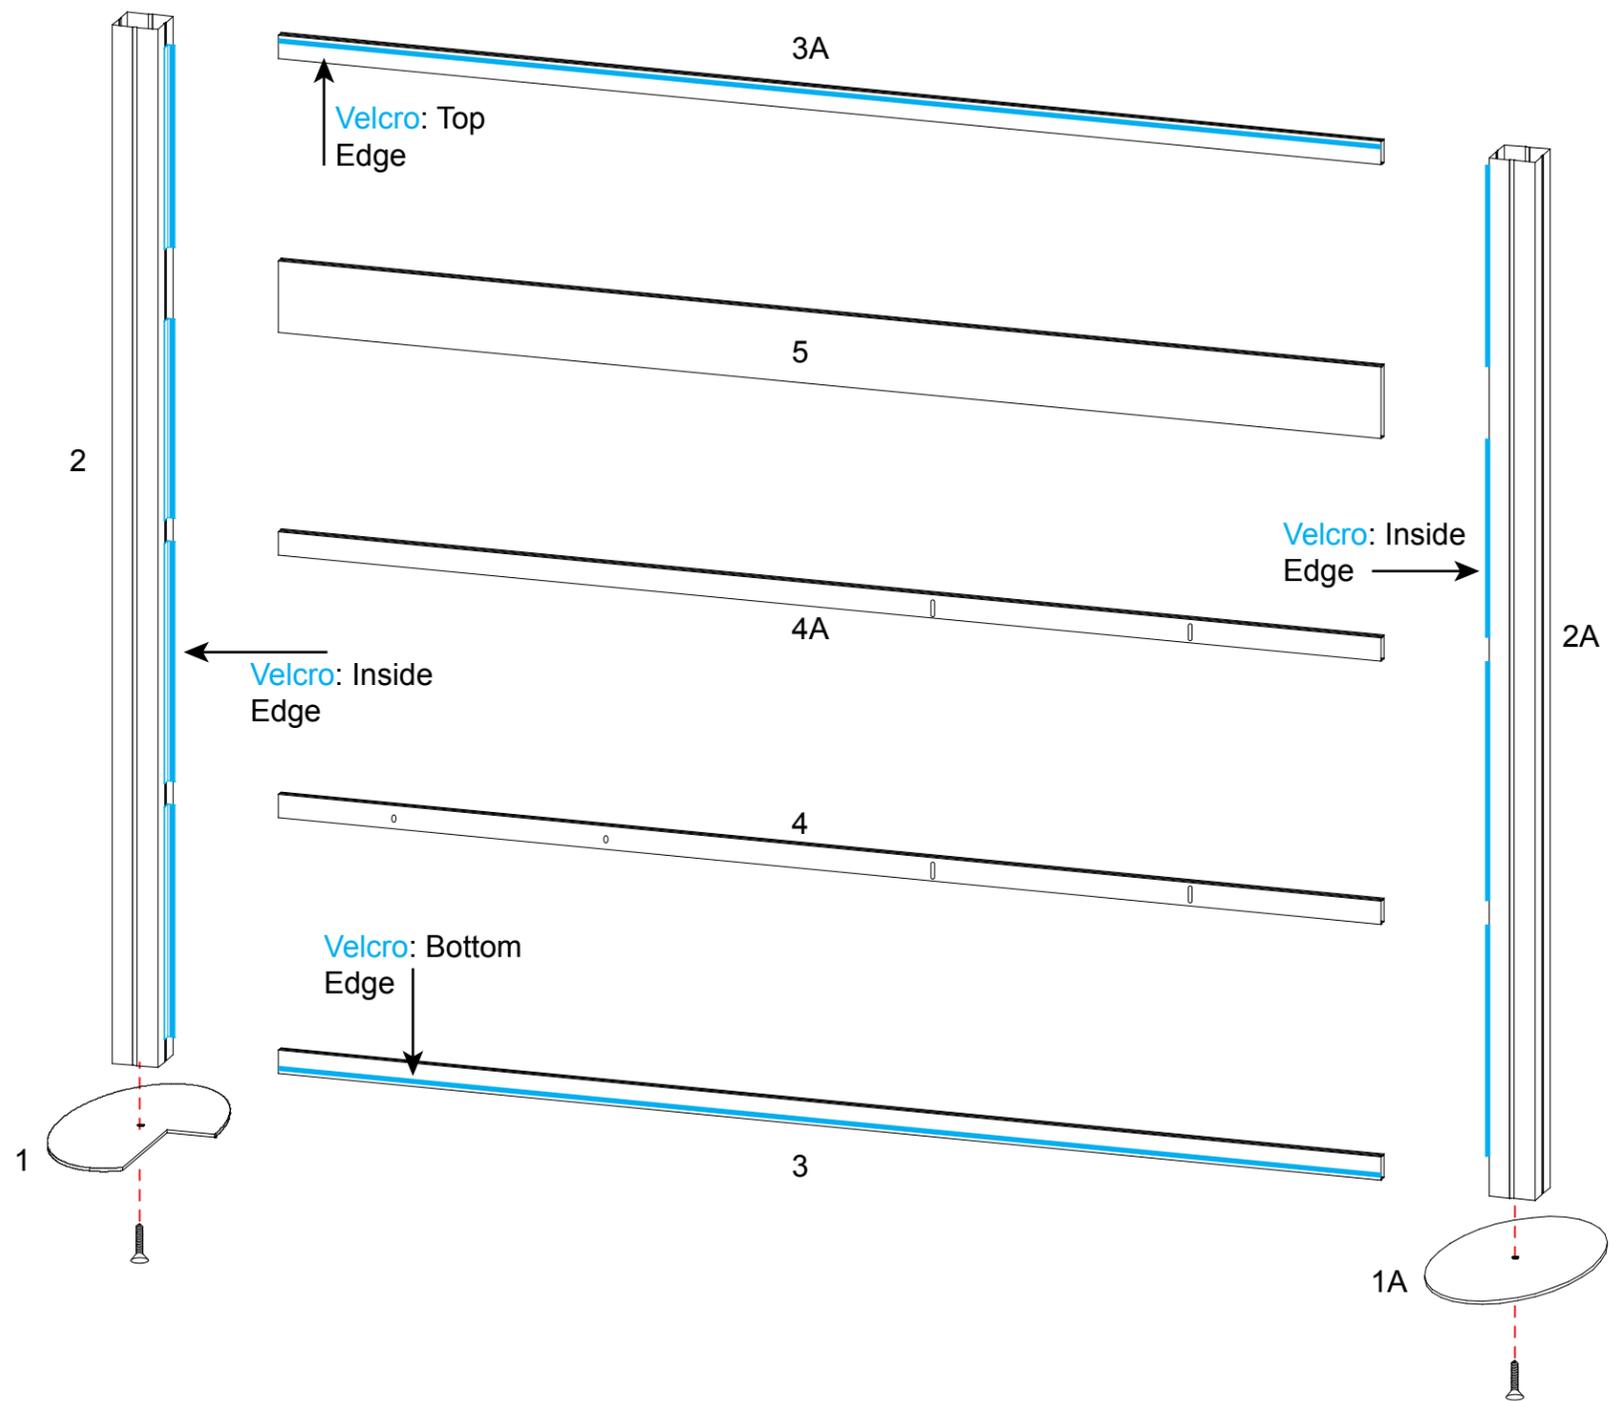

Item	Qty.	Description
6	1	89.965" w Horizontal Extrusion
7	1	14" h Vertical Extrusion
8	1	8.738" h Vertical Extrusion
9	1	92.9223" w Curved Horizontal Extrusion
--	1	Ceiling w/ Lighting

**Steps:**


- 1) Attach verticals [7] & [8] to the ends of horizontal [6].
- 2) Connect curved horizontal [9] to the tops of verticals [7] & [8].
- 3) Attach Ceiling to the tops of verticals [2] & [2A]; use bolts provided.
- 4) Connect assembled header frame to the top of ceiling; use bolts provided.

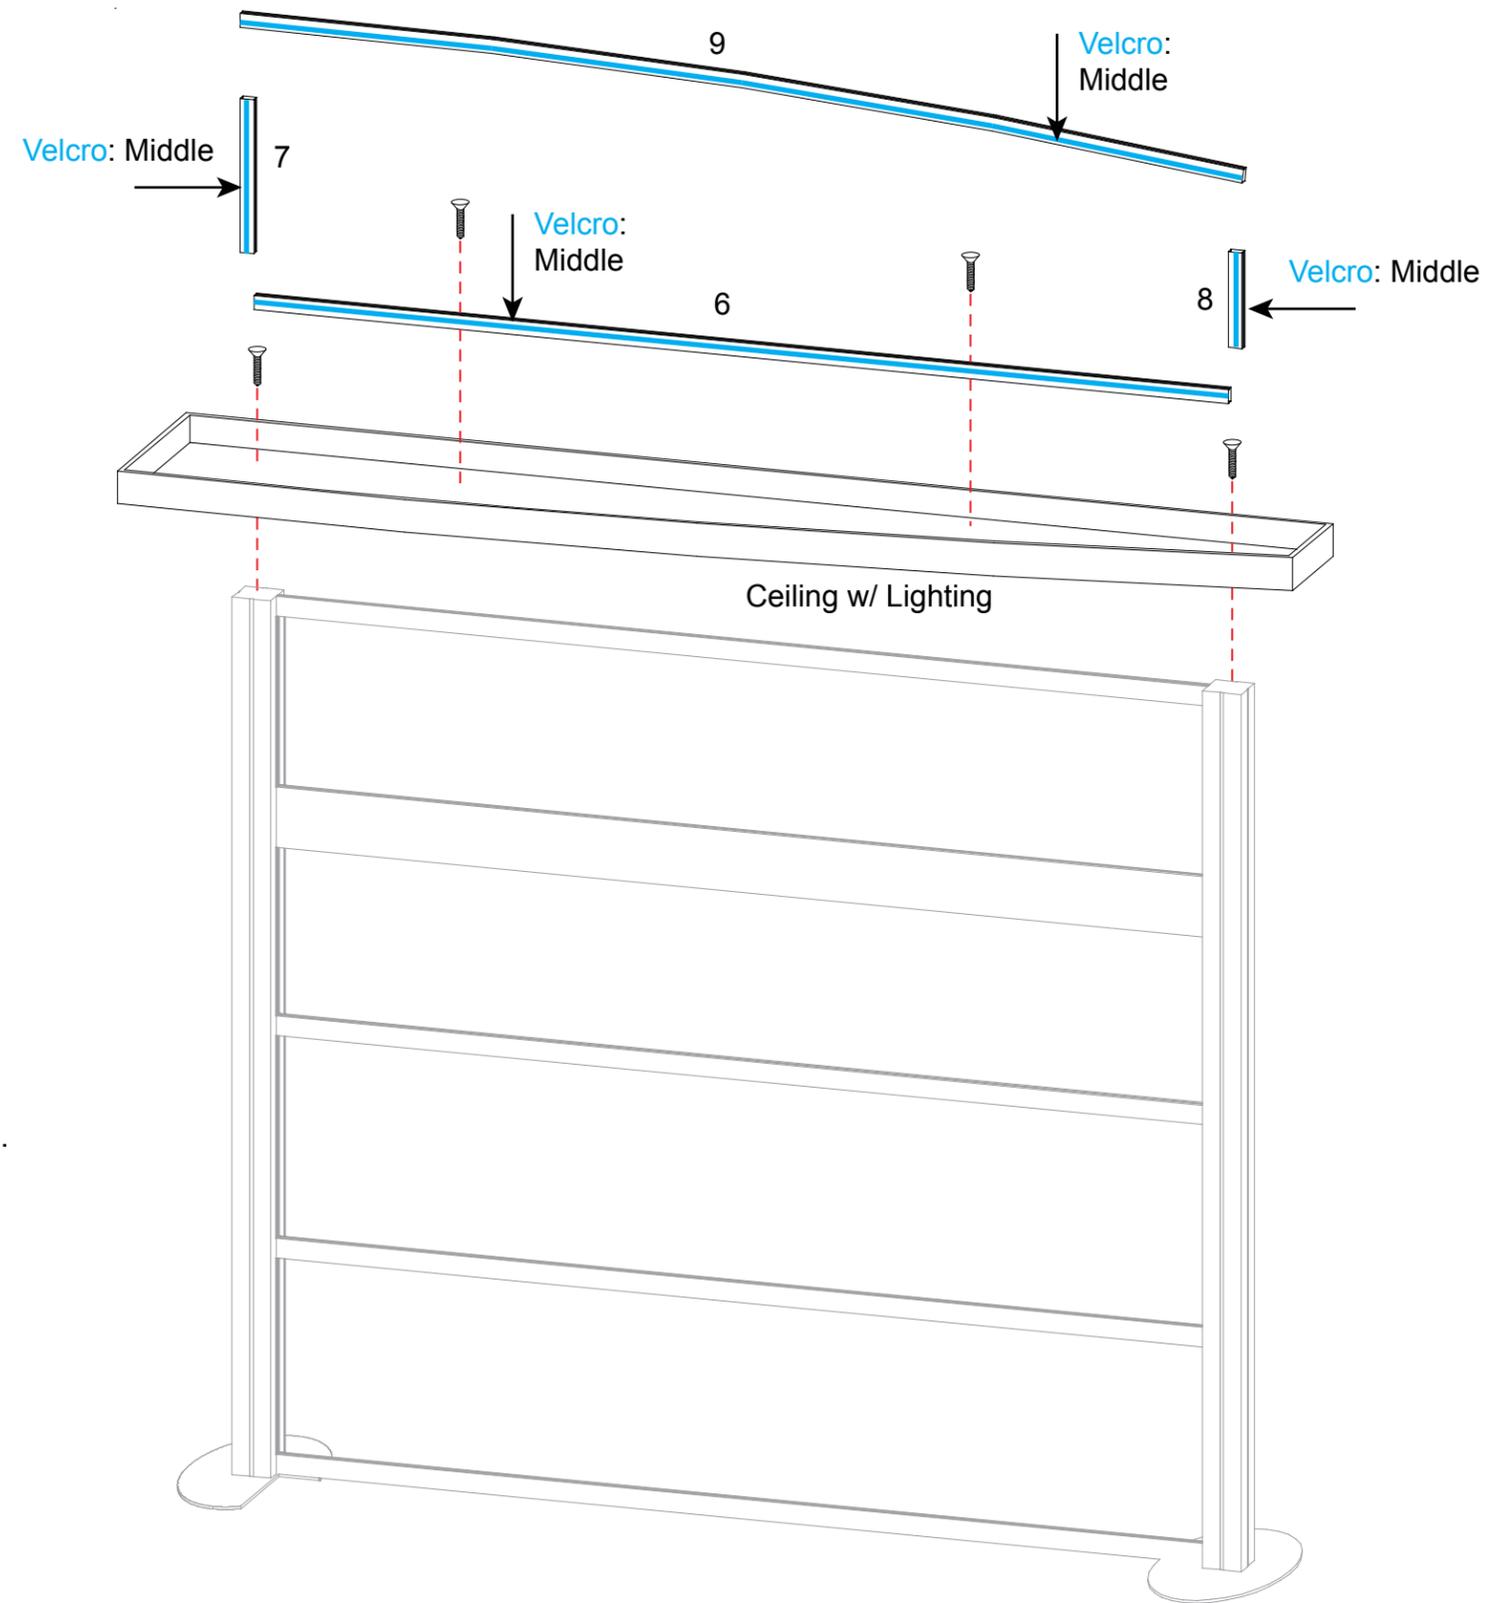

Steps:


- 1) Attach cabinet to horizontal [4] using threaded stand-off caps.  
See [Cabinet to Horizontal Attachment](#) detail.
- 2) Install Stand-Off Barrels to top of cabinet.
- 3) Attach lower shelf to pill slots located on horizontal [4].  
See [Custom Cam Lock w/ Pill Slot Attachment](#) detail.
- 4) Set large Counter on top of stand-off barrels and attach to pill slots in horizontal [4A].  
See [Custom Cam Lock w/ Pill Slot Attachment](#) detail.

**\* Cabinet to Horizontal Attachment**

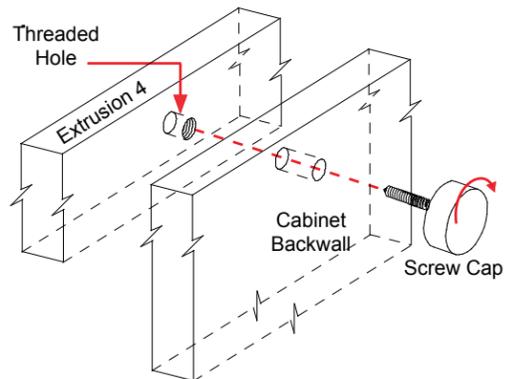


Insert screw cap through hole of cabinet backwall into threaded hole of horizontal extrusion [4]. Twist and tighten screw cap to secure in place.

**\* Custom Cam Lock w/ Pill Slot Attachment**

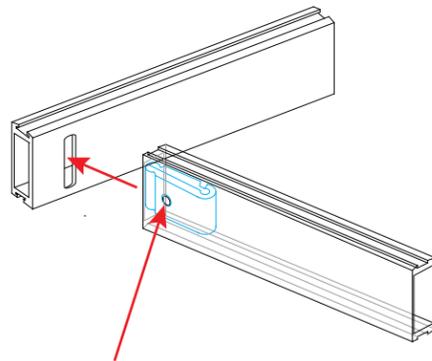

Tighten screw to clamp cam lock into groove of vertical extrusion.

**Top View**

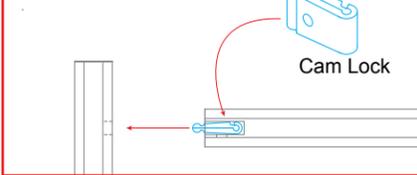

**Back View of Shelf Attachment**

Insert lock into pill slot of horizontal extrusion and tighten setscrew.

