
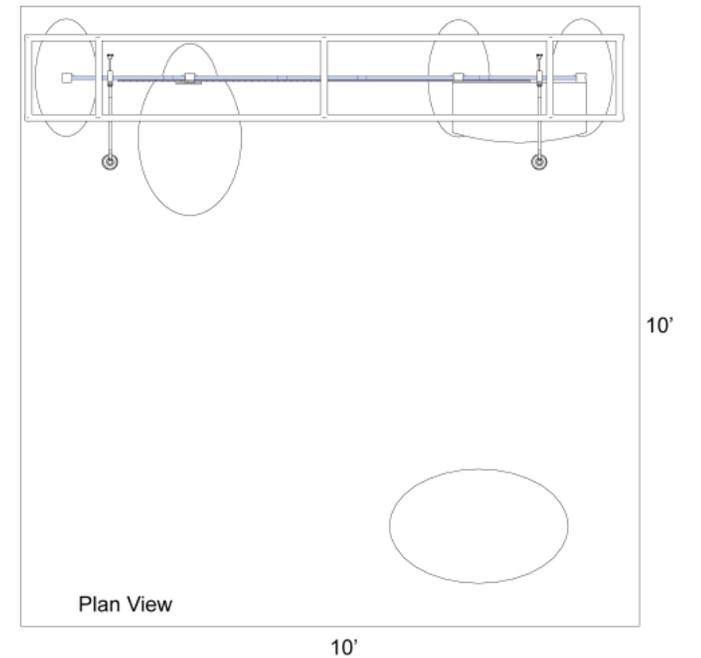


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



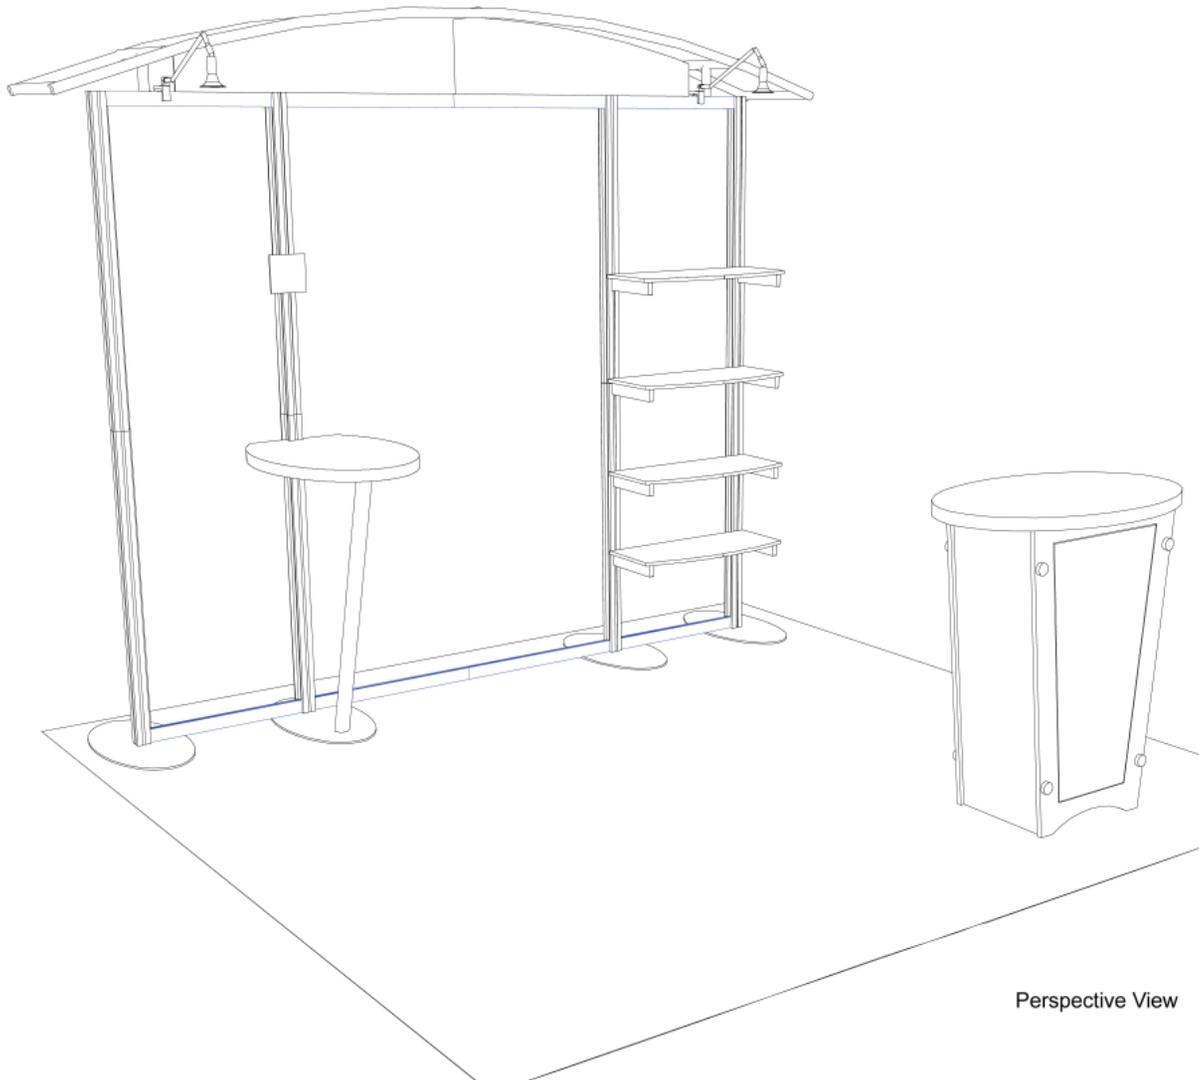


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Item	Description
1/1a	3/1	Base Plate
2	1	42" h Square Vertical Extrusion
3	1	42" h Square Vertical Extrusion
4	1	42" h Square Vertical Extrusion
5	1	42" h Square Vertical Extrusion
6	1	42" h Square Vertical Extrusion
7	1	42" h Square Vertical Extrusion
8	1	42" h Square Vertical Extrusion
9	1	42" h Square Vertical Extrusion
10	1	22" w Horizontal Extrusion
11	1	25.125" w Horizontal Extrusion
12	1	25.125" w Horizontal Extrusion
13	1	22" w Horizontal Extrusion
14	1	22" w Horizontal Extrusion
15	1	25.125" w Horizontal Extrusion
16	1	25.125" w Horizontal Extrusion
17	1	22" w Horizontal Extrusion
18	1	Round Counter Support Extrusion
19	1	19" w Horizontal Extrusion

Steps:

- 1) Attach base plates [1, 1a] to verticals [2, 4, 6, & 8] with bolts.
- 2) Attach counter support [18] to base plate [1a] with bolt.
- 3) Connect top of counter support [18] to vertical [4] with horizontal [19].
- 4) Place counter top atop counter support.
- 5) Insert canopy mounts into grooves on horizontals [14 & 17] as shown.
- 6) Attach upper verticals to lower verticals.
- 7) Connect lower and upper horizontals between vertical assemblies.
- 8) Velcro attach graphic to back of assembled backwall.

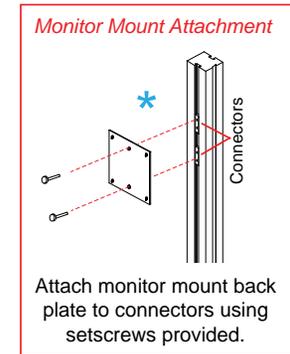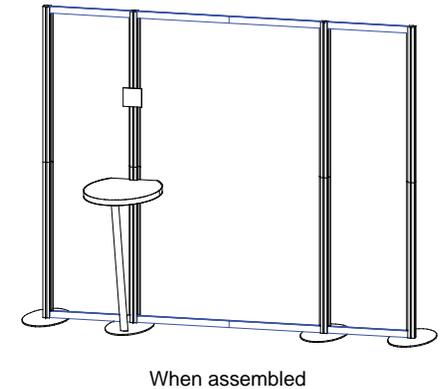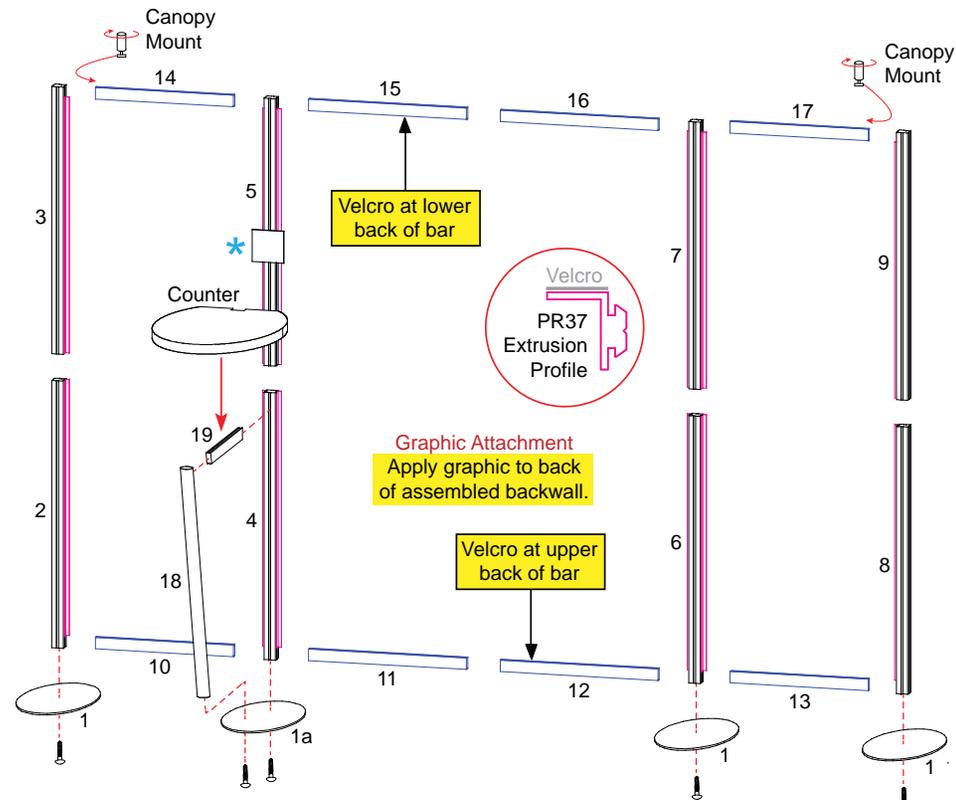

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING




Using Your Setup Instructions

The Aero Overhead Sign Setup Instructions are created specifically for your configuration. They include an exploded view of the frame which is sequentially numbered. We encourage you to study the instructions before attempting to assemble your exhibit.



Connections are kept very simple: no tools. Everything assembles with push-button connectors and pre-connected horizontal sections.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

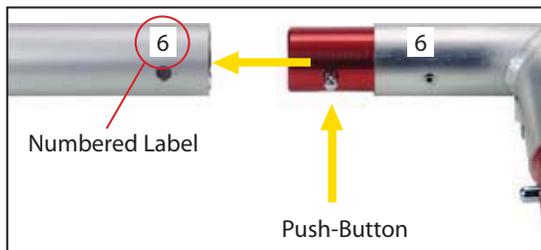


Connections are made by holding the button down and sliding the red tube into opposing tube until the connection is made. To disassemble push button and pull or twist extrusions apart.

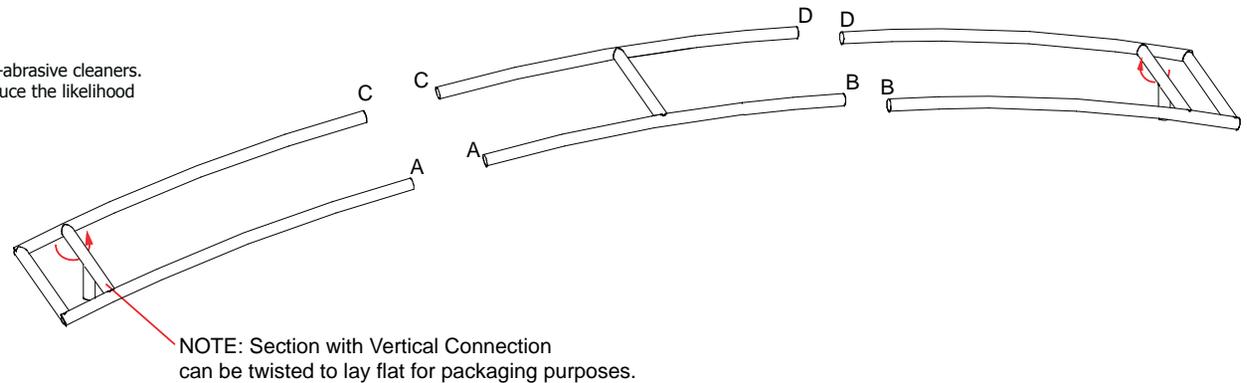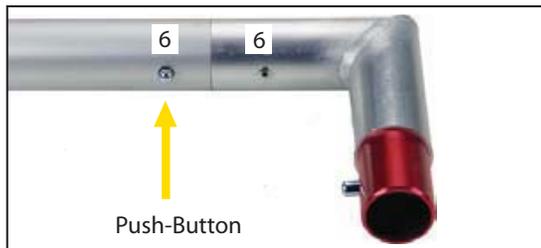

Setup:

- 1) Assemble canopy pieces together in numerical order.
- 2) Apply pillowcase graphic.



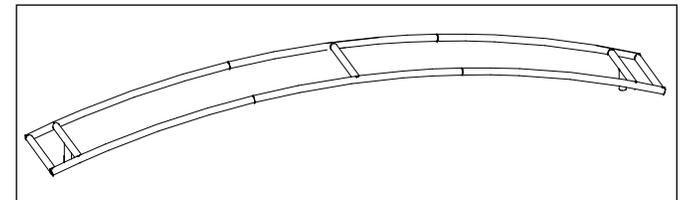


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Item	Qty.	Description
20	8	9.5" Shelf Support
21	4	6" Header Supports

Steps:

- 1) Attach header supports atop backwall.
- 2) Velcro attach header graphic to header supports.
- 3) Attach lights atop backwall.
- 4) Attach canopy atop canopy mount.
- 5) Attach shelf supports to backwall.
- 6) Place shelf atop shelf supports.

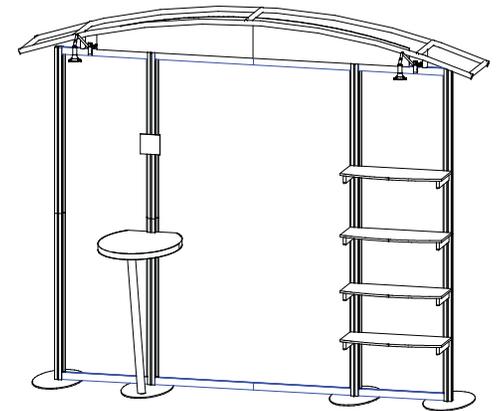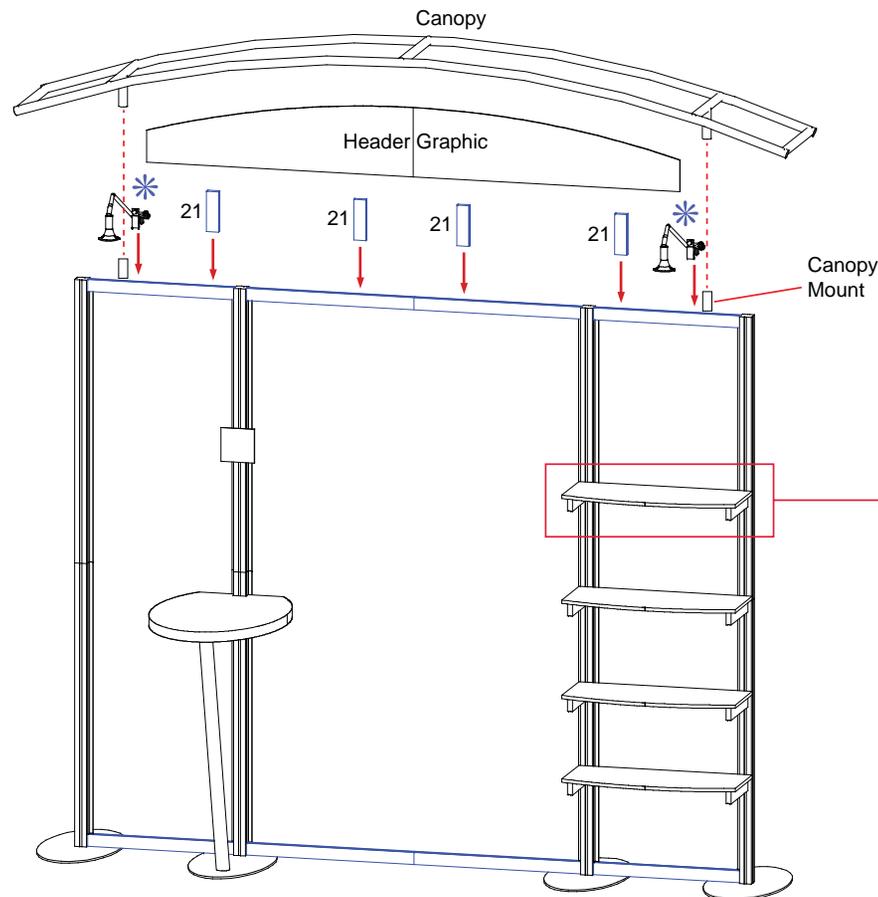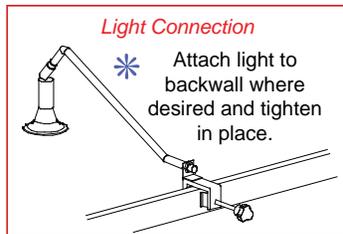


When assembled

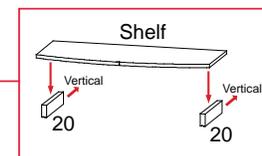

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Setup Instructions:

- A) Use standoff screws to secure the front panel with door and back panel of the pedestal to the side panels.
- B) After assembling front, back, and side panels, slide floor into the bottom of the pedestal. The floor will sit on pins on the inside of the side panels.
- C) After floor is in place, use velcro attachments to install shelf.

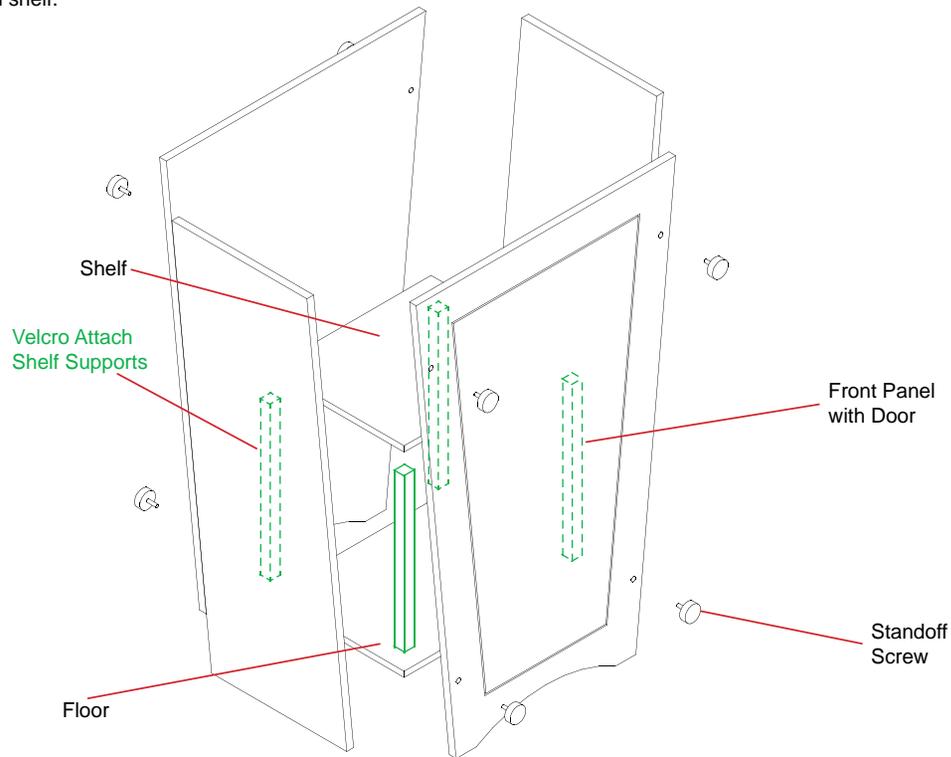

Attach the oval counter top to the pedestal base.

