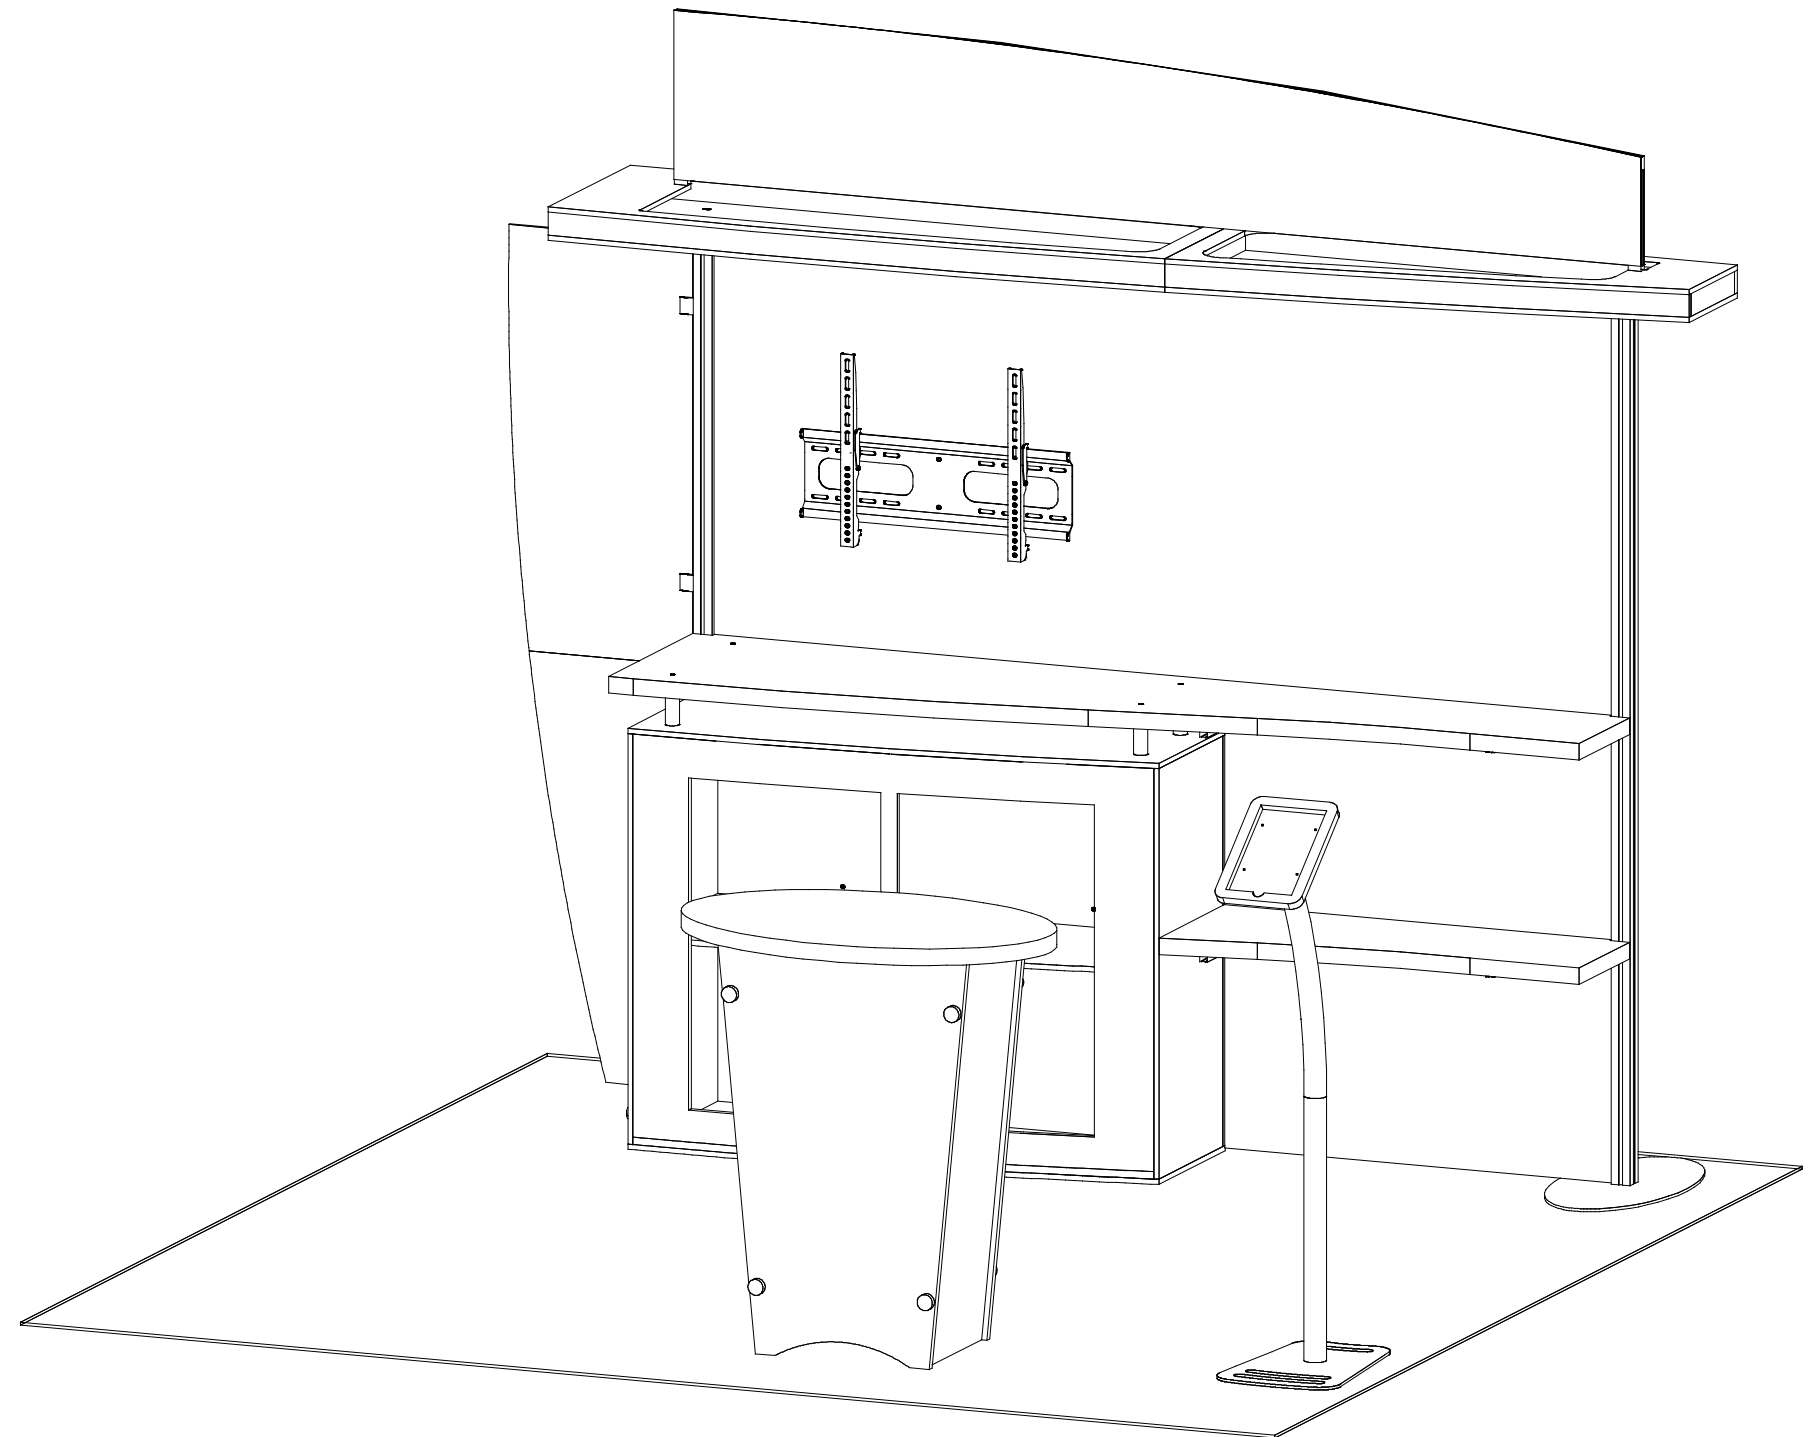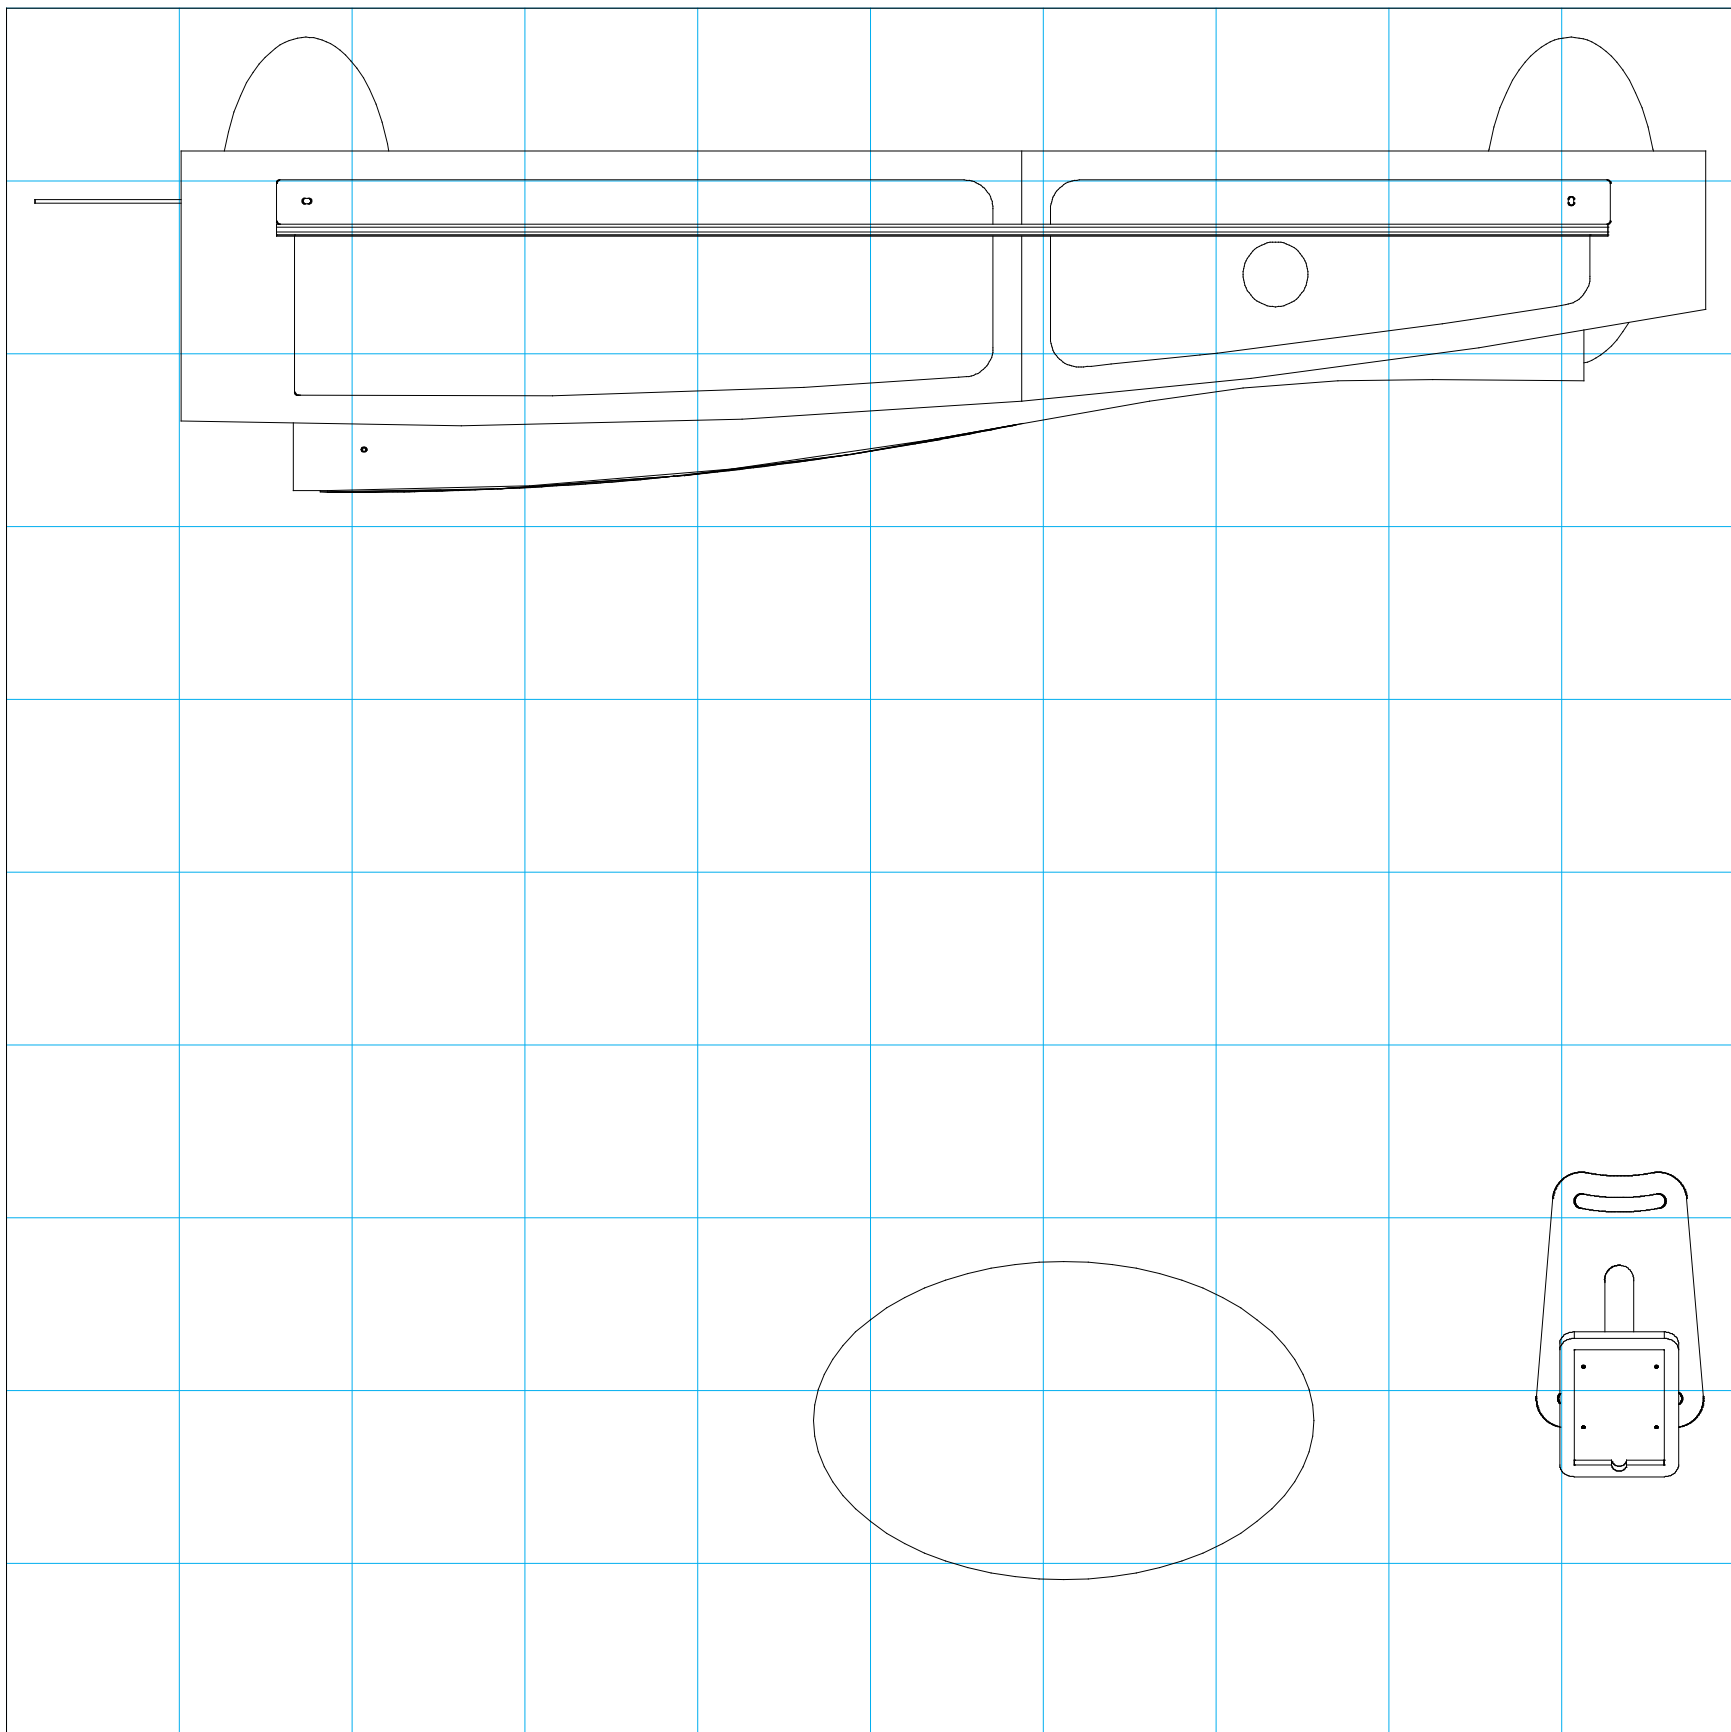Plan View   10'

10'

SETUP INSTRUCTIONS

= 1 sq foot

© 2024

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.

- The setup instructions are created specifically for this configuration.

- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.

- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**

- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.
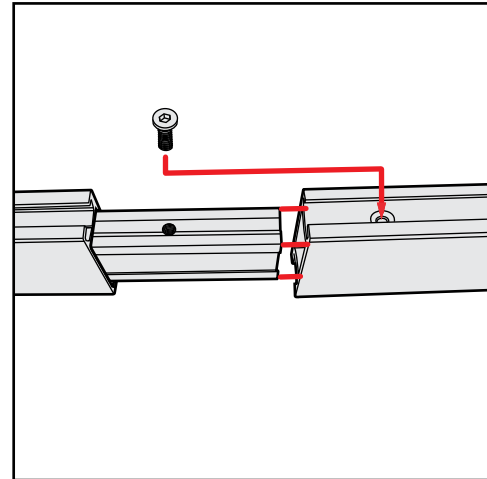
Disassembly

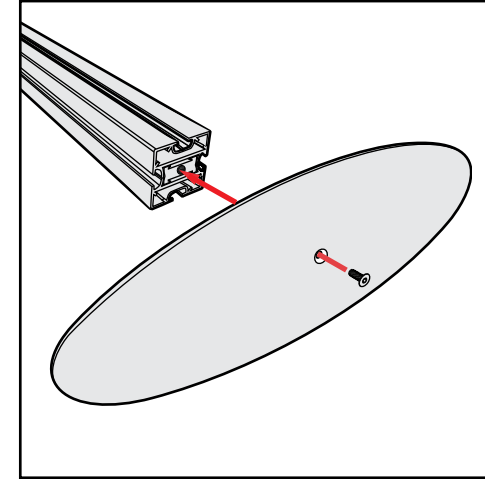- For loss prevention, tighten all set screws and locks during disassembly.
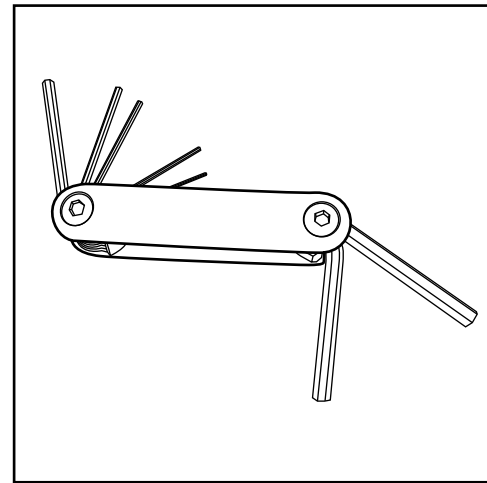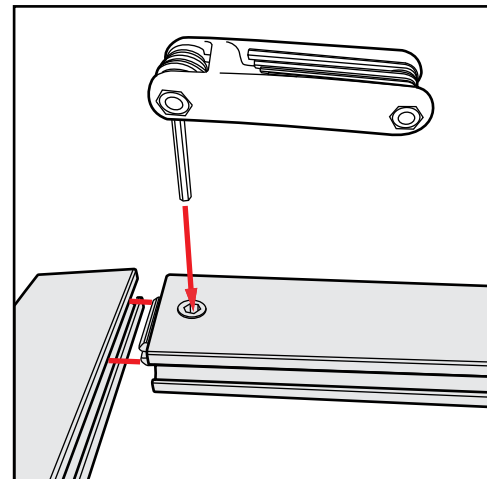
Hex Tool - Essential for Assembly
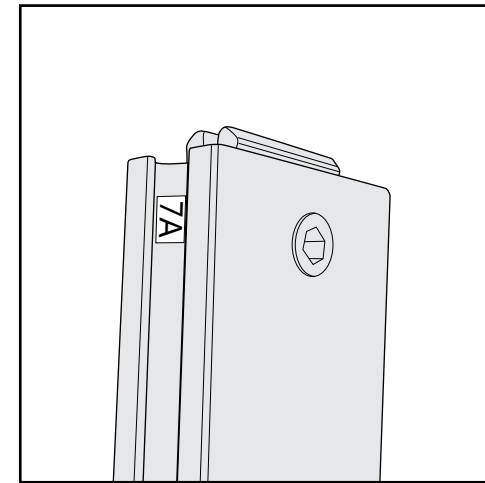
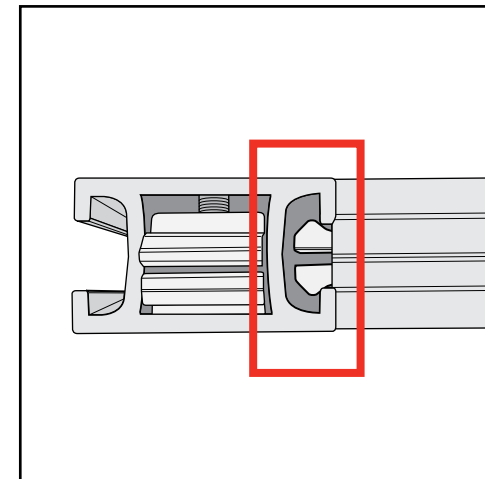Part Identification - Numbering

Spline Connection

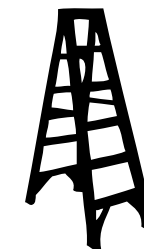Base Plate & Extrusion Connection

Extrusion & Lock Connection

Engaged Lock

WARNING

DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST BE TIGHTLY SECURED

CRATE PACKING

Item	Qty.	Description
1	1	12" x 22.75" SF1 Oval Base Plate
1A	1	12" x 22.75" SF1 Oval Base Plate w/ Notch
2	1	80"h S44 Vertical Extrusion w/ PR37 & Velcro
3	1	80"h S44 Vertical Extrusion w/ PR37 & Velcro
6	1	86"w Z45 Horizontal Extrusion w/ Velcro
7	1	86"w Z45 Horizontal Extrusion w/ Velcro
8	1	86"w Z45 Horizontal Extrusion w/ holes & Pill slots
8A	1	86"w Z45 Horizontal Extrusion w/ Pill slots
9	1	86"w Z140 Horizontal Extrusion

Steps:
1) Attach Base Plates [1] & [1A] to bottom of verticals [2] & [3] using bolts.
2) Assemble horizontals [6,7,8,8A,9] between verticals [2,3].
3) Affix fabric graphics to front of backwall assembly using Velcro.
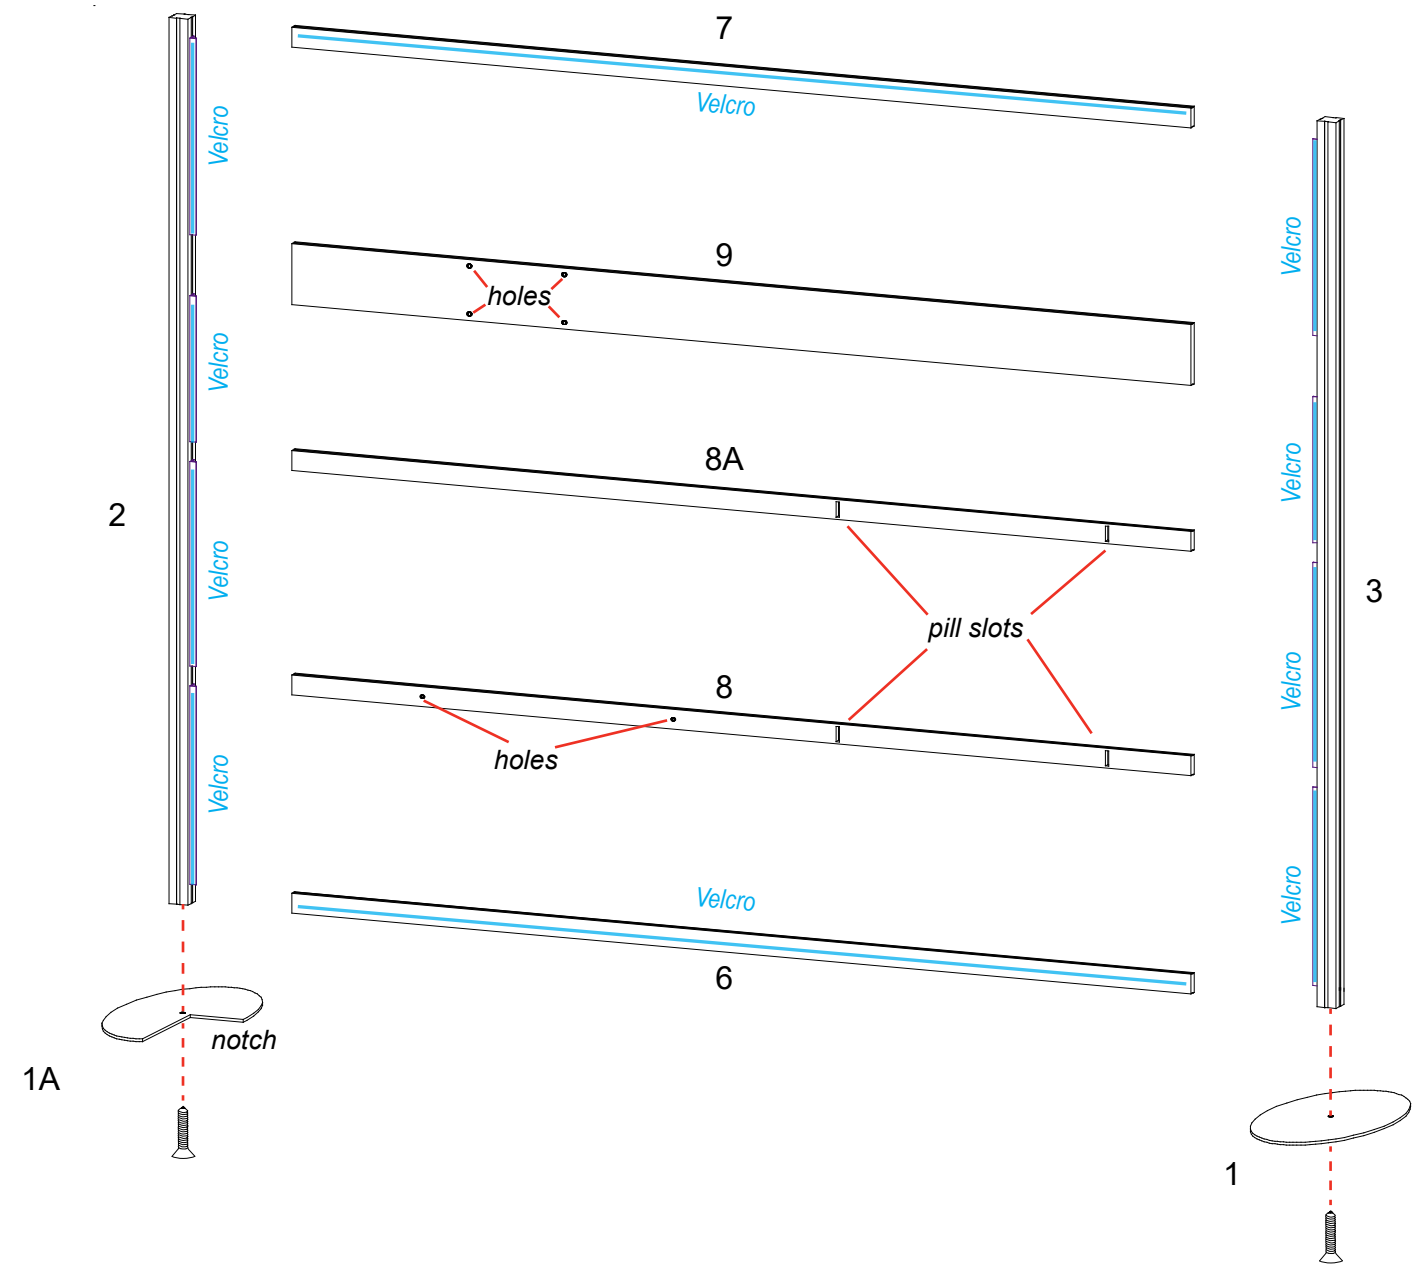
When assembled
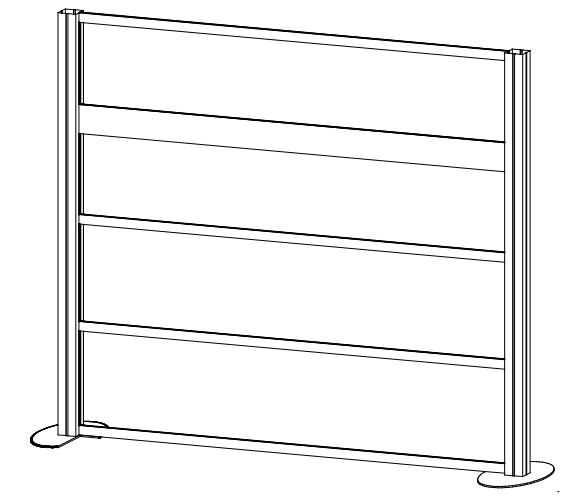
All Velcro faces front of assembly

PR37 Attachment

Slide PR37 extrusion into groove of vertical and tighten set screw to secure in place.

PR37 Extrusion Profile

Velcro

Keep PR37 attached for shipping. DO NOT REMOVE.

7
Velcro

9
holes

8A
pill slots

8
holes

6
Velcro

2

3

Velcro

1A
notch

1

FRONT VIEW

visionary™ DESIGNS

| Item	Qty.	Description
A	1	58.40"w x 19.054"d x 3"h Canopy Panel w/ S10
A1	1	47.50"w x 17.358"d x 3"h Canopy Panel w/ S10 & Puck Light
1	1	14"h Z33 Vertical Extrusion w/ Velcro
2	1	8.581"h Z33 Vertical Extrusion w/ Velcro
3	1	89.965"w Z33 Horizontal Extrusion w/ Velcro
4	1	92.714"w Z33 curved Horizontal Extrusion w/ Velcro

Steps:
1) Assemble canopy panels [A-A1] together
   using Bolt & Wing Nut Connection.
2) Connect canopy panels [A/A1] to top of backwall verticals, using bolts.
3) Assemble extrusions [1,2,3,4] as shown, with Velcro facing front.
4) Attach verticals [1,2] to S10 extrusions on top of canopy panels [A/A1].
5) Apply Fabric Graphics to Velcro on assembly [1/2/3/4].
6) Connect power cords to puck lights in canopy panels.
   See Puck Light Attachment detail.
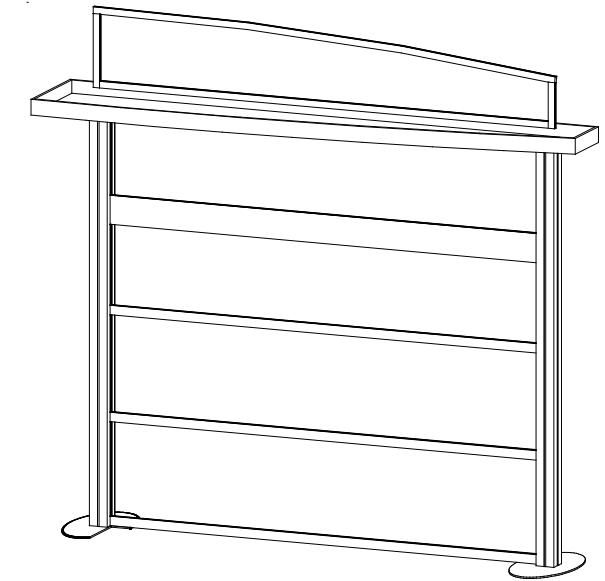
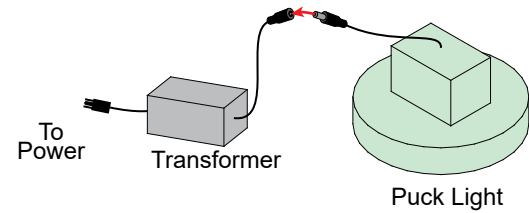When assembled
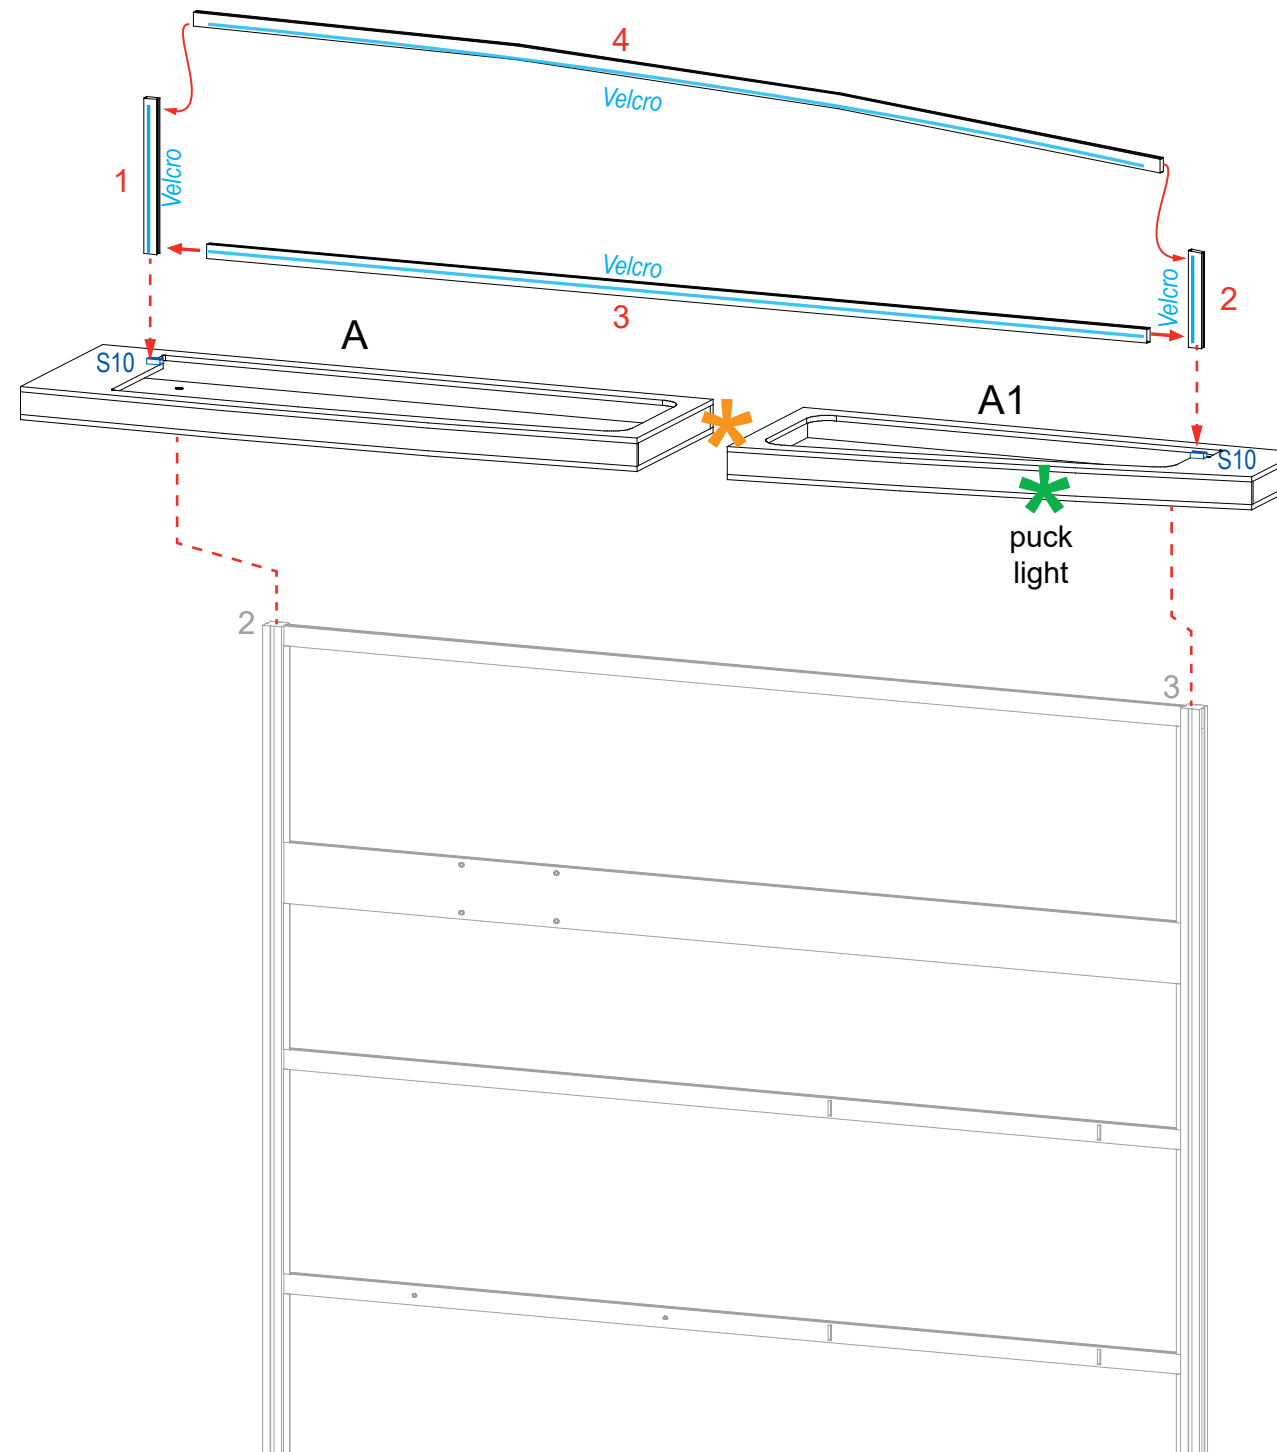
* Puck Light Connection

Connect transformer to puck lights, then
attach transformer to power source.

To Power — Transformer — Puck Light

puck light

* Bolt & Wing Nut Connection

FRONT VIEW

visionary DESIGNS ™ © 2024

Steps:
1) Affix fabric Header Graphic to header frame, using Velcro.
2) Affix fabric Backwall Graphic to Velcro on backwall frame, as shown.
3) Attach Wings to vertical [2]. See Wing Attachment detail.
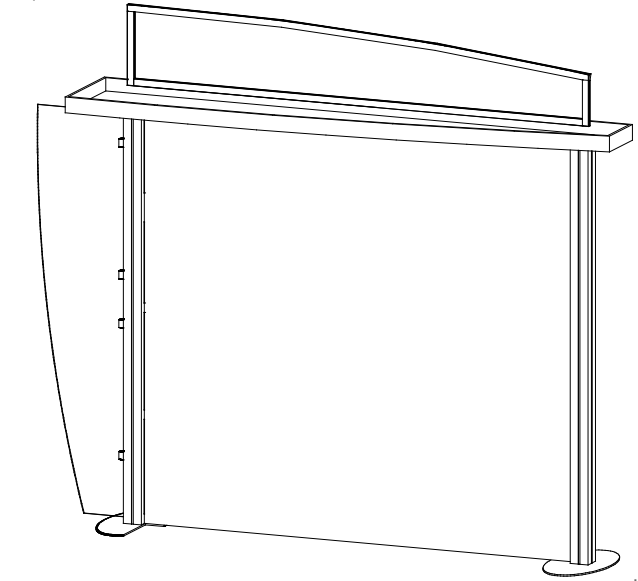
When assembled

✱ Wing Attachment
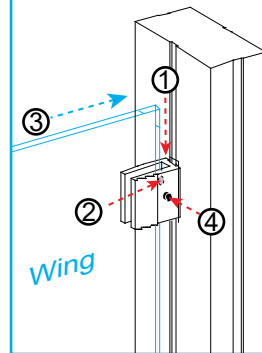
1) Slide A10 connector into groove of extrusion.
2) Tighten set screw to secure A10 to extrusion.
3) Insert Wing into Clamp.
4) Tighten knob to secure wing in place.

Wing

Header Graphic

Wing

2

Backwall Graphic

FRONT VIEW

© 2024

visionary ™
DESIGNS

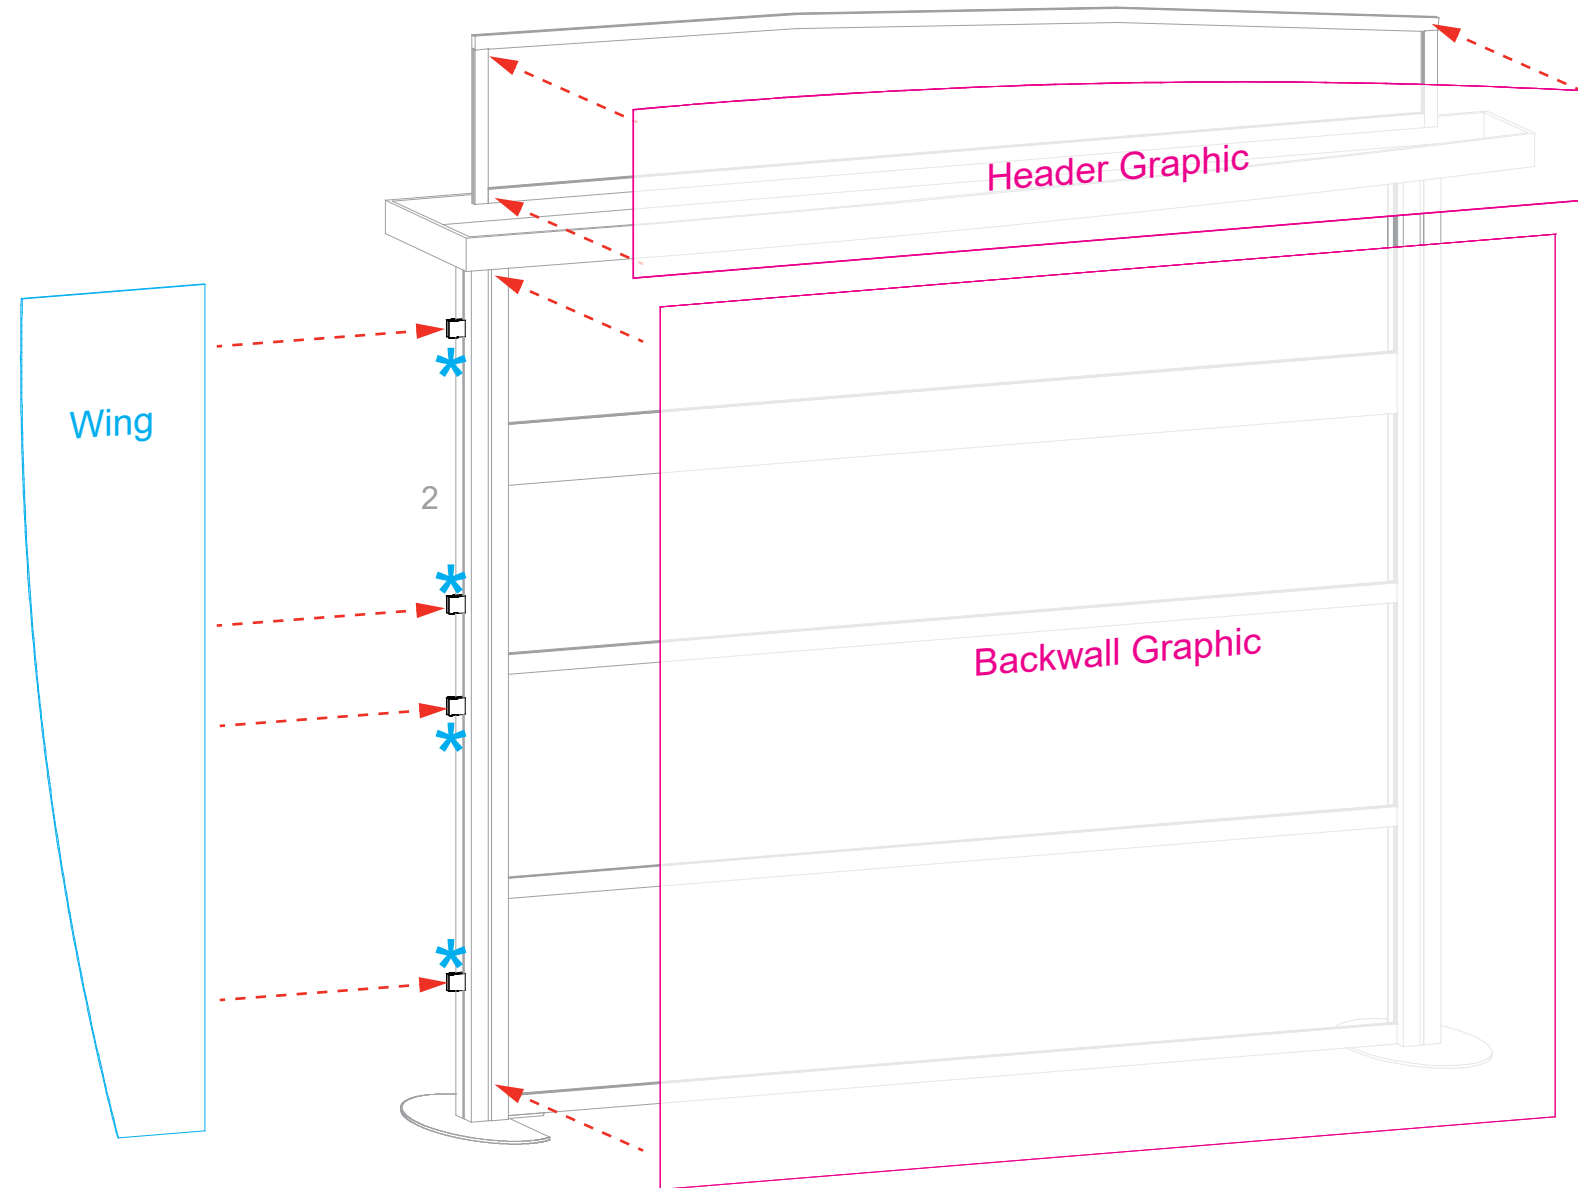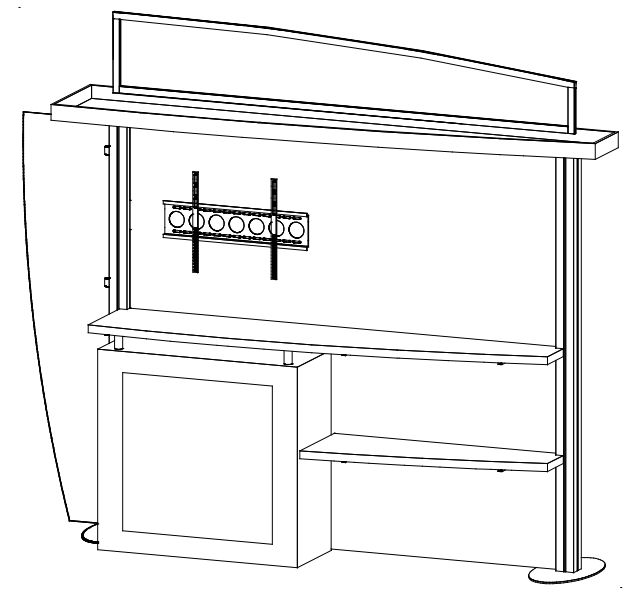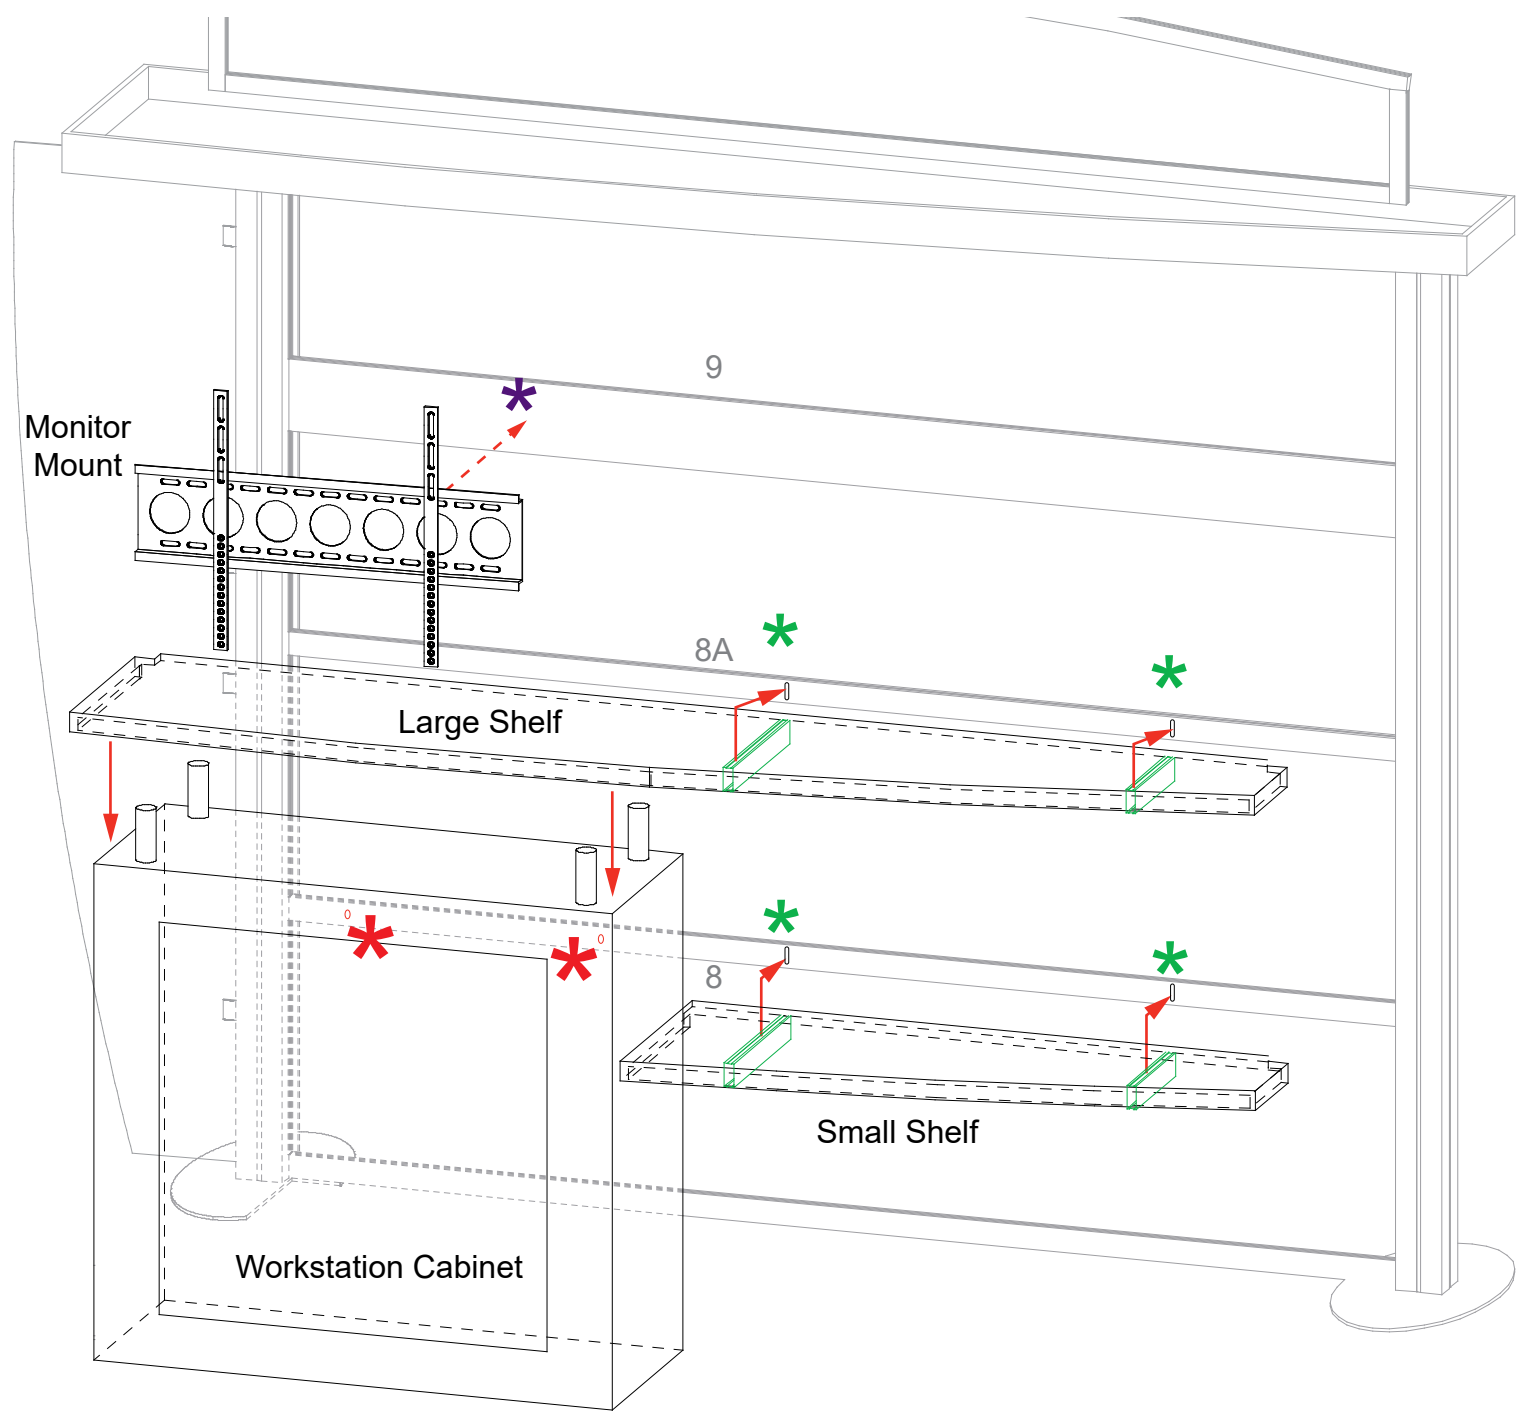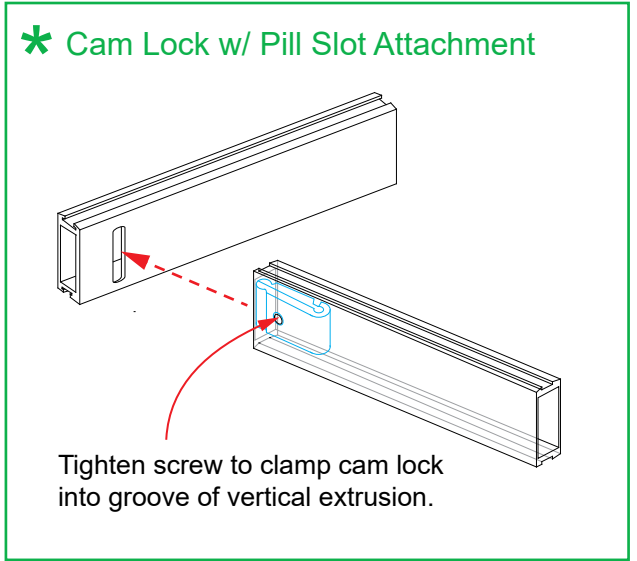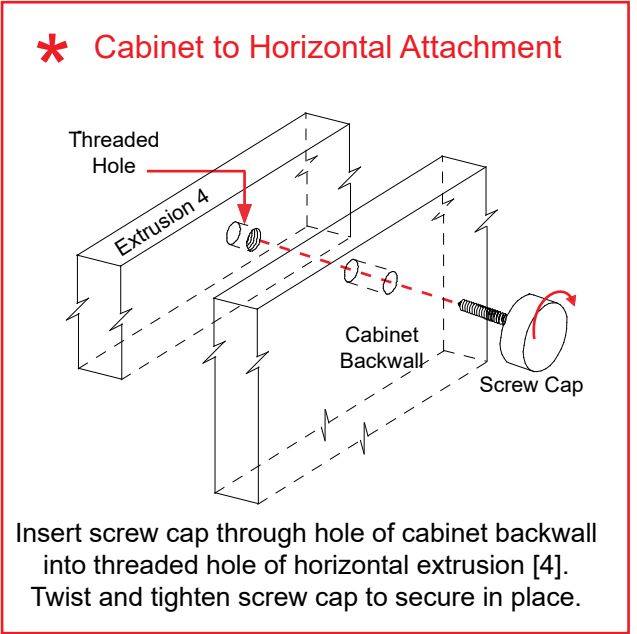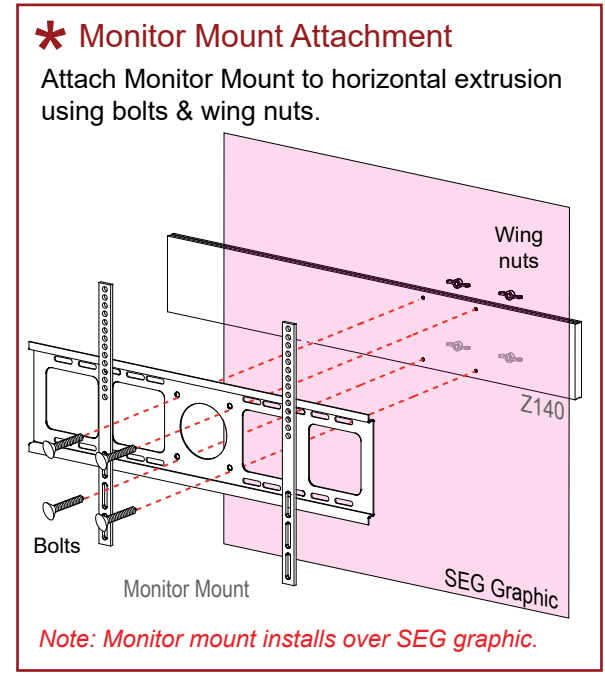| Item	Qty.	Description
--	1	Large Monitor Mount
--	1	48.806"w x 19.796"d x 38.018"h Cabinet
--	1	4" Standoff Barrel
--	4	38.946"w x 14.88"d Small Shelf
--	1	89.622"w x 19.656"d Large Shelf

Steps:
1) Install Monitor Mount to horizontal [9]. See Monitor Mount Attachment detail.
2) Attach Cabinet to horizontal [8] using bolts.
3) Connect standoff barrels to T-Nuts on underside of Large Shelf, then attach standoff barrels to top of Cabinet using bolts.
4) Lock extrusions on underside of Large Shelf to Pill Slots on horizontal [8A]. See Pill Slot Attachment detail.
5) Connect extrusions on underside of Small Shelf to Pill Slots on horizontals [8]. See Pill Slot Attachment detail.

Completed Assembly

✱ Cabinet to Horizontal Attachment

Threaded Hole
Extrusion 4
Cabinet Backwall
Screw Cap

Insert screw cap through hole of cabinet backwall into threaded hole of horizontal extrusion [4]. Twist and tighten screw cap to secure in place.

✱ Cam Lock w/ Pill Slot Attachment

Tighten screw to clamp cam lock into groove of vertical extrusion.

Monitor Mount

9

8A

Large Shelf

8

Small Shelf

Workstation Cabinet

✱ Monitor Mount Attachment

Attach Monitor Mount to horizontal extrusion using bolts & wing nuts.

Wing nuts

Z140

Bolts

Monitor Mount

SEG Graphic

Note: Monitor mount installs over SEG graphic.

FRONT VIEW

visionary™
DESIGNS
© 2024
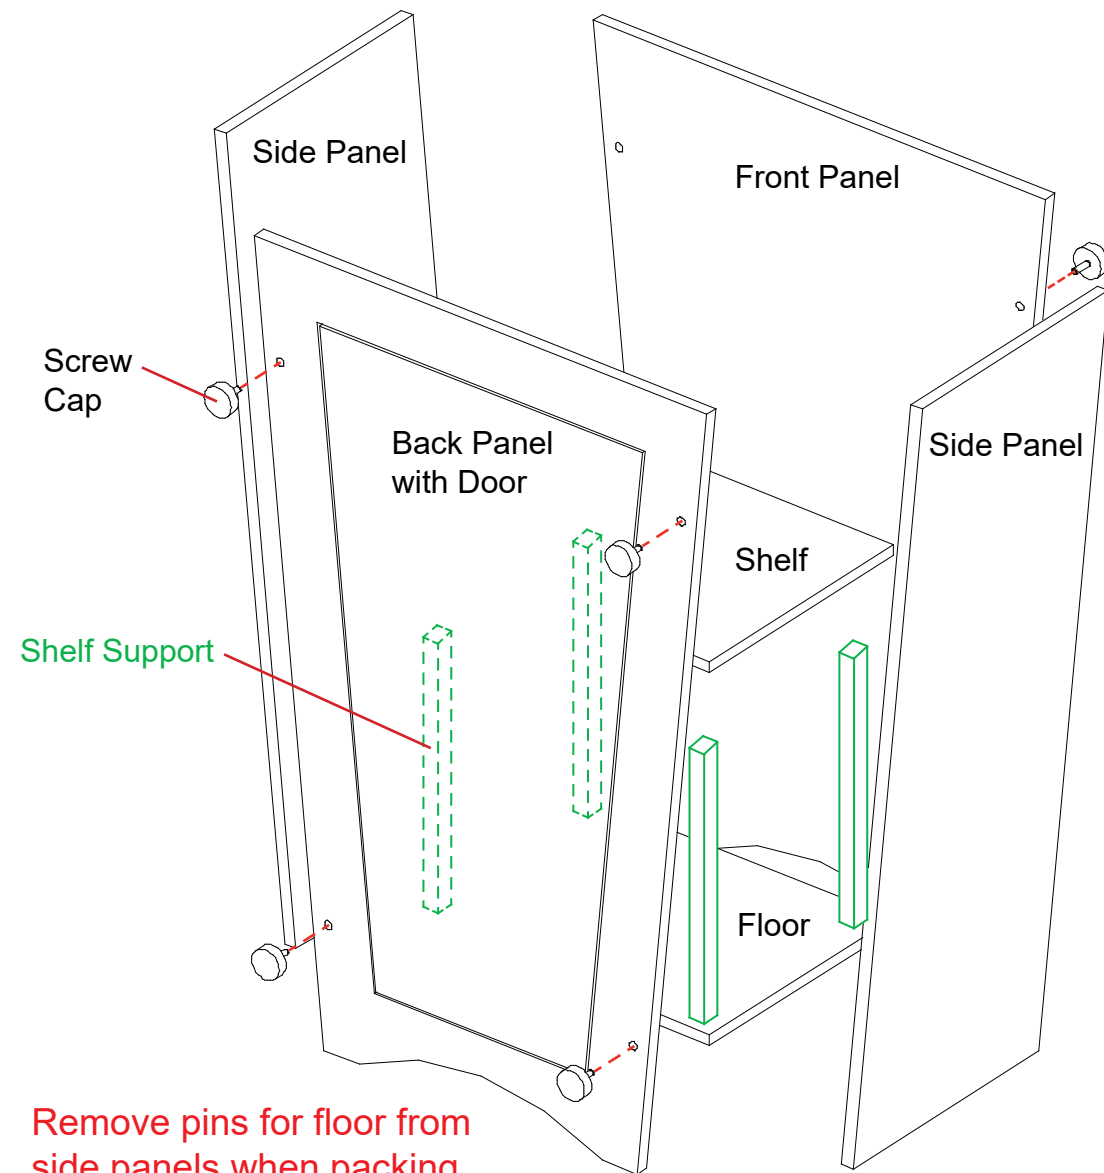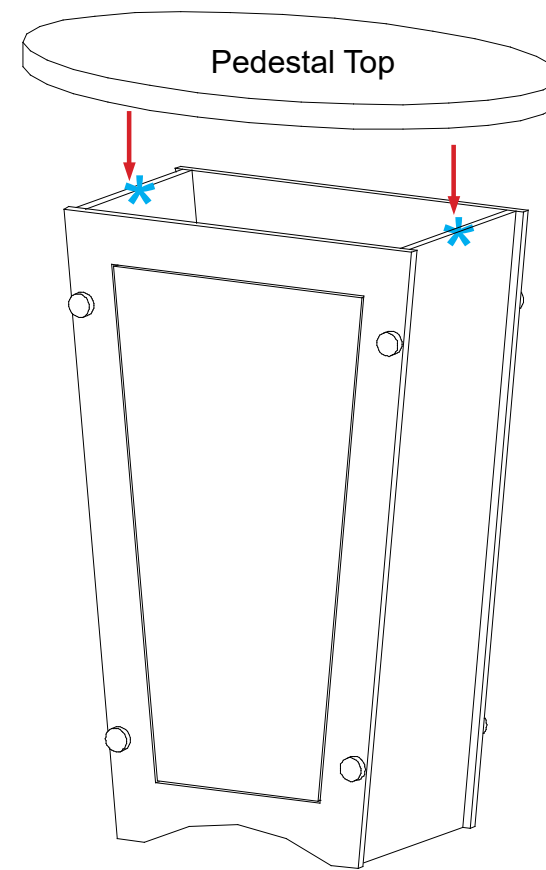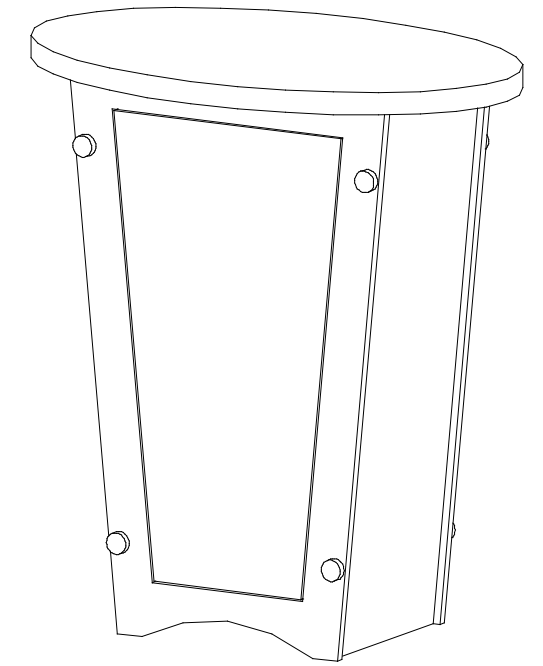
Setup Instructions:
1) Attach pins at bottom interior of side panels. *Note: Pins are designed to be slightly angled.*
2) Use screw caps to secure the side panels to front panel and back panels, making sure Velcro is facing inward.
3) Slide floor into the bottom of assembled pedestal base. The floor will sit on pins of the side panels.
4) Connect shelf supports to Velcro on panels, then place shelf on top of supports.
5) Attach pedestal top to assembled pedestal base. See Pedestal Top Attachment detail.

Side Panel

Front Panel

Screw Cap

Back Panel with Door

Shelf

Side Panel

Shelf Support

Floor

Remove pins for floor from side panels when packing.

Pedestal Base Assembly

Pedestal Top

✱ Pedestal Top Attachment

Align hole with pin
1
Pin

2
Rotate pin. Spring will push pin into hole.

Pedestal Top Attachment

Completed Pedestal Assembly

VISIONARY DESIGNS™
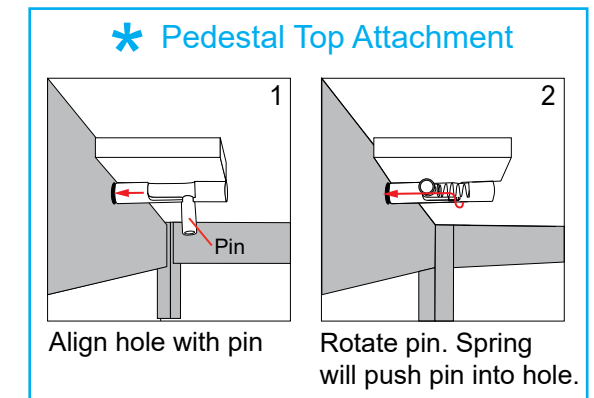
Steps:
1) Attach base plate to post, using bolt.
2) Attach mount plate to top of post, using screw.
   NOTE: Mount plate must rotate left and right before installing clamshell.
3) Attach clamshell to mount plate, using nuts on mounting plate bolt ends.
4) Insert iPad into clamshell, then feed cords through holes.
   See Cord Management for iPad details.

Cord Management for iPad

Lock   Lock

Clamshell

iPad

Cord Access

Attach iPad cord to supplied USB extension cord. Feed USB cord through top hole of post, then out bottom hole of post. Feed USB cord through hole in base. connect to power.

Optional Cover for Home Button

Foam Lining Removed   Home Button Shield

1) Remove foam lining from inside bottom of Clamshell.
2) Attach Home Button Shield with double-sided tape to inside of Clamshell, keeping top of shield flush with Clamshell opening.
NOTE: This is a permanent fix and can't be easily removed.

Nuts

Clamshell

Cord from iPad

Mount Plate

Post

Base Plate

USB Extension Cord

Bolt

Rotate clamshell to turn iPad from portrait to landscape orientation.

Completed Assembly